

INGERSOLL-RAND®



**XFE/EPE/HPE 50
XF/EP/HP 60
XF/EP/HP/XP 75-100
ML/MM/MH 37-75**

**OPERATORS/
INSTRUCTION MANUAL
OPTIONS**

Before installation or starting the compressor for the first time, this manual should be studied carefully to obtain a clear knowledge of the unit and of the duties to be performed while operating and maintaining the unit.

RETAIN THIS MANUAL WITH UNIT.

This Technical manual contains **IMPORTANT SAFETY DATA** and should be kept with the air compressor at all times.

More Than Air. Answers.

Online answers: <http://www.air.ingersoll-rand.com>

APDD 696B

November 1999

**AIR COMPRESSOR GROUP
BONDED WARRANTY & REGISTERED START UP**

Warranty

The Company warrants that the equipment manufactured by it and delivered hereunder will be free of defects in material and workmanship for a period of twelve months (see extended airtend warranty) from the date of placing the Equipment in operation or eighteen months (see extended airtend warranty) from the date of shipment from Davidson, NC, whichever shall first occur. The Purchaser shall be obligated to promptly report any failure to conform to this warranty, in writing to the Company in said period, whereupon the Company shall, at its option, correct such nonconformity, by suitable repair to such equipment or, furnish a replacement part F.O.B. point of shipment, provided the Purchaser has stored, installed maintained and operated such Equipment in accordance with good industry practices and has complied with specific recommendations of the Company. Accessories or equipment furnished by the Company, but manufactured by others, shall carry whatever warranty the manufacturers have conveyed to the Company and which can be passed on to the Purchaser. The Company shall not be liable for any repairs, replacements, or adjustments to the Equipment or any costs of labor performed by the Purchaser or others without Company's prior written approval.

The effects of corrosion, erosion and normal wear and tear are specifically excluded. Performance warranties are limited to those specifically stated within the Company's proposal. Unless responsibility for meeting such performance warranties are limited to specified tests, the Company's obligation shall be to correct in the manner and for the period of time provided above.

THE COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

Correction by the Company of nonconformities whether patent or latent, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of the Company for such nonconformities whether based on contract, warranty negligence, indemnity, strict liability or otherwise with respect to or arising out of such Equipment.

The purchaser shall not operate Equipment which is considered to be defective, without first notifying the Company in writing of its intention to do so. Any such Equipment will be at Purchaser's sole risk and liability.

Limitation of Liability

The remedies of the Purchaser set forth herein are exclusive, and the total liability of the Company with respect to this contract or the Equipment and services furnished hereunder, in connection with the performance or breach thereof, or from the manufacture, sale, delivery, installation, repair or technical direction covered by or furnished under this contract, whether passed on contract, warranty negligence, indemnity, strict liability or otherwise, shall not exceed the purchase price of the unit of Equipment upon which such liability is based.

The Company and its suppliers shall in no event be liable to the Purchaser, any successors in interest or any beneficiary or assignee of this contract for any consequential, incidental, indirect, special or punitive damages arising out of this contract or any breach thereof, or any defect in, or failure of, or malfunction of the Equipment hereunder, whether based upon loss of use, lost profits or revenue, interest, lost goodwill, work stoppage, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase of replacement power or claims of Purchaser or customers of Purchaser for service interruption whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability or otherwise.

EXTENDED DRIVETRAIN WARRANTY

**Intellisys Compressors
50-450 HP**

The Ingersoll-Rand Company Rotary Screw Air Compressor that has been filled prior to its original shipment from Ingersoll-Rand Company with ULTRA COOLANT and which has been operated solely on ULTRA COOLANT thereafter shall have its DRIVETRAIN warranted for twenty four (24) months from the date of placing the COMPRESSOR in operation or thirty (30) months from the date of shipment, whichever occurs first.

Except for the above warranty period, the standard warranty provisions shall apply and the conditions outlined herein are understood to be a supplement to the standard Ingersoll-Rand Company warranty.

This EXTENDED DRIVETRAIN WARRANTY applies only to 50-450 HP Intellisys COMPRESSORS operating on ULTRA COOLANT after February 1, 1990.

ROTARY SCREW AIR COMPRESSOR

This unit was purchased from:

Ingersoll-Rand Company reserves the right to make changes or add improvements without notice and without incurring any obligation to make such changes or add such improvements to products sold previously.

Number of units on order: _____


Customer Order Number: _____

Ingersoll-Rand Company Order Number: _____

For ready reference, record the serial number and model number of your unit here:

Serial Number: _____

Model Number: _____

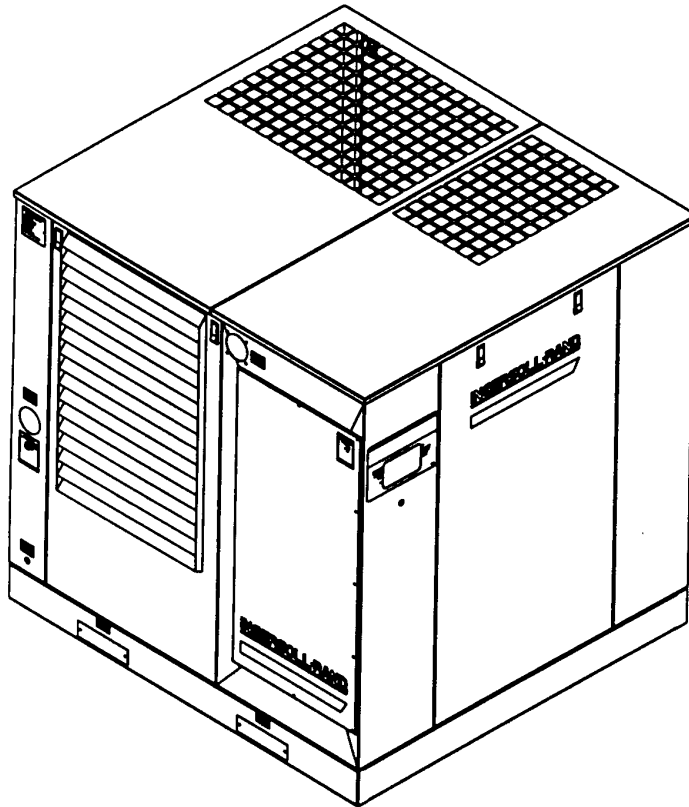

TYPICAL UNIT

TABLE OF CONTENTS

0.0 SAFETY AND WARNINGS

- 0.1 safety instructions
- 0.2 safety precautions
- 0.3 decals

1.0 RECEIPT OF EQUIPMENT

- 1.1 inspection
- 1.2 unpacking and handling
- 1.3 tools

2.0 INSTALLATION

- 2.1 ventilation
- 2.2 foundation requirements
- 2.3 piping
- 2.4 electrical installation
- 2.5 outdoor sheltered installation

3.0 INTELLISYS

- 3.1 emergency stop switch
- 3.2 power on light
- 3.3 power indicator light
- 3.4 push buttons
- 3.5 set point procedure
- 3.6 warnings
- 3.7 alarms

4.0 SYSTEMS

- 4.1 general systems
- 4.2 aircooled compressors
- 4.3 coolant system
- 4.4 compressed air system
- 4.5 coolant/air separation system
- 4.6 electrical system
- 4.7 compressor control system
- 4.8 options

5.0 MAINTENANCE

- 5.1 maintenance schedule
- 5.2 maintenance records
- 5.3 maintenance procedures
- 5.4 inlet air filter
- 5.5 coolant filter
- 5.6 coolant
- 5.7 separator tank scavenge orifice/screen
- 5.8 coolant separator element
- 5.9 cooler cores
- 5.10 drive motor lubrication
- 5.11 long term storage
- 5.12 coolant/lubricant changeout
- 5.13 intellisys removal
- 5.14 coolant hoses
- 5.15 airend discharge hose

6.0 TROUBLE SHOOTING

7.0 REFERENCE DRAWINGS

- 7.1 electrical schematic - full voltage
- 7.2 electrical schematic - star delta
- 7.3 foundation plan - air cooled
- 7.4 foundation plan - water cooled
- 7.5 foundation plan - outdoor mod
- 7.6 basic flow schematic - air cooled
- 7.7 basic flow schematic - water cooled
- 7.8 typical system flow diagrams

8.0 WATER QUALITY RECOMMENDATIONS

9.0 MAINTENANCE RECORD

GENERAL INFORMATION

Weight: See foundation plan, Section 7.0

Cooling Air Flow: See foundation plan, Section 7.0

Ambient Temperature Limit: 35°F to 115°F (2°C to 46°C)

Coolant: Factory Filled SSR Ultra Coolant

Coolant Change: 8000 hours or two years, whichever comes first

Coolant Capacity: 50-60 hp 5.0 gal. (18.9 liters)
37-45 kw 5.0 gal. (18.9 liters)
75-100 hp 9.0 gal. (34.2 liters)
55-75 kw 9.0 gal. (34.2 liters)

Discharge Temperature Limit: 228°F (109°C)

Power Inlet Wiring: Recommended conduit: metallic
flexible Greenfield, or equivalent,

Tools: U.S. Standard and metric are required
to perform maintenance

0.0 SAFETY AND WARNINGS

0.1 SAFETY INSTRUCTIONS

Before you install this air compressor you should take the time to carefully read all the instructions contained in this manual.

Electricity and compressed air have the potential to cause severe personal injury or property damage.

Before installing, wiring, starting, operating or making any adjustments, identify the components of the air compressor using this manual as a guide.

The operator should use common sense and good working practices while operating and maintaining this unit. Follow all codes, pipe adequately, understand the starting and stopping sequence. Check the safety devices by following the procedure contained in this manual.

Maintenance should be done by qualified personnel, adequately equipped with proper tools. Follow the maintenance schedules as outlined in the operators manual to ensure problem free operation after start up.

Safety instructions in the operators manual are bold-faced for emphasis. The signal words **DANGER**, **WARNING** and **CAUTION** are used to indicate hazard seriousness levels as follows:



DANGER

Danger is used to indicate the presence of a hazard which *will cause severe* personal injury, death, or substantial property damage if the warning is ignored.



WARNING

Warning is used to indicate the presence of a hazard which *can cause severe* personal injury, death, or substantial property damage if the warning is ignored.



CAUTION

Caution is used to indicate the presence of a hazard which *will or can cause minor* personal injury or property damage if the warning is ignored.

NOTICE

Notice is used to notify people of installation, operation, or maintenance information which is important but not hazard-related.

0.2 SAFETY PRECAUTIONS

SAFETY PRECAUTIONS

BEFORE PROCEEDING, READ CAREFULLY BEFORE INSTALLING THE COMPRESSOR OR PERFORMING ANY MAINTENANCE

WARNING

COMPRESSED AIR AND ELECTRICITY ARE DANGEROUS.

BEFORE DOING ANY WORK ON THIS UNIT, BE SURE THE ELECTRICAL SUPPLY HAS BEEN CUT OFF—LOCKED & TAGGED AND THE ENTIRE COMPRESSOR SYSTEM HAS BEEN VENTED OF ALL PRESSURE.

1. Do not remove the covers, loosen or remove any fittings, connections or devices when this unit is in operation. Hot liquid and air under pressure that are contained within this unit can cause severe injury or death.

2. The compressor has high and dangerous voltage in the motor starter and control box. All installations must be in accordance with recognized electrical codes. Before working on the electrical system, be sure to remove voltage from the system by use of a manual-disconnect-switch. A circuit breaker or fuse safety switch must be provided in the electrical supply line leading to the compressor.

Those responsible for installation of this equipment must provide suitable grounds, maintenance clearance and lightning arrestors for all electrical components as stipulated in O.S.H.A. 1910.308 through 1910.329.

3. Do not operate the compressor at higher discharge pressure than those specified on the Compressor Nameplate or motor overload will occur. This condition will result in compressor motor shutdown.

4. Use only safety solvent for cleaning the compressor and auxiliary equipment.

5. Install a manual shut off valve (isolation type) in the discharge line. When a safety valve is installed between the isolation valve and the compressor, it must have sufficient capacity to relieve the full capacity of the compressor(s).

6. Whenever pressure is released through the pressure relief valve, it is due to excessive pressure in the system. The cause for the excessive pressure should be investigated immediately.

7. Before doing any mechanical work on the compressor:

a.) Shut the unit down.

b.) Electrically isolate the compressor by use of the manual disconnect switch in the power line to the unit. Lock and tag the switch so that it cannot be operated.

c.) Vent pressure from the compressor and isolate the unit from any other source of air.

8. There can be adverse effects if compressor lubricants are allowed to enter plant air systems.

Air line separators, properly selected and installed, will minimize any liquid carry-over.

The use of plastic bowls on line filters without metal guards can be hazardous. From a safety standpoint, metal bowls should be used on any pressurized system. Review of your plant air line system is recommended.

9. When a receiver is installed, it is recommended that occupational safety and health standards as covered in the Federal Register, Volume 36, number 105, part 11, paragraph 1910.169 be adhered to in the installation and maintenance of this receiver.

10. Before starting the compressor, its maintenance instructions should be thoroughly read and understood.

11. After maintenance functions are completed, covers and guards must be replaced.

SAFETY SHUTDOWN

CHECK HIGH AIR TEMPERATURE

There is a high discharge air temperature shutdown function built into the Intellisys on each compressor. It is factory pre-set at 228°F (109°C). This function should be checked at regular intervals for proper operation, once a month is recommended. The procedure is:

1. Block off the cooling air discharge.
2. The compressor discharge temperature will rise at a rapid rate. Shutdown should occur when the discharge temperature reaches the pre-set maximum discharge air temperature setting of the Intellisys. The display should indicate "HIGH AIREND TEMP" and the alarm light will be illuminated.

The actual temperature at which shutdown occurs should be recorded for comparison to the Intellisys set point and with similar future test results.

WARNING

Failure to adhere to these recommendations can result in mechanical failure, property damage and serious injury or death.

All air and water inlet, and air and water discharge pipework to and from the inlet and discharge port connections must take into account vibration, pulsations, temperature, maximum pressure applied, corrosion and chemical resistance. In addition, it should be noted that lubricated compressors will discharge some oil into the air stream; therefore, compatibility between discharge piping, system accessories and software must be assured.

For the foregoing reasons, the use of plastic piping, soldered copper fittings and rubber hose as discharge piping is not recommended. In addition, flexible joints and/or flex lines can only be considered for such purposes if their specifications fit the operating parameters of the system.

It is the responsibility of the installer and owner to provide the appropriate service pipework to and from the machine.

WARNING

"Ingersoll-Rand air compressors are not designed, intended, or approved for breathing air applications. Ingersoll-Rand does not approve specialized equipment for breathing air application and assumes no responsibility or liability for compressors used for breathing air services."

0.3 DECALS

This section contains representative examples of decals which will be appearing throughout this manual and are applied to the compressor unit. If for some reason a decal is defaced, painted over, or parts are replaced, we

recommend that you obtain a replacement kit as listed in the spare parts section of the Parts List Manual (Form APDD 751).

INGERSOLL-RAND

Compressor Package Data

COMPRESSOR MODEL	CFM
CAPACITY	PSIG
RATED OPERATING PRESSURE	PSIG
MAX. DISCHARGE PRESSURE	PSIG
MAX. MODULATE PRESSURE	H.P.
NOMINAL DRIVE MOTOR	H.P.
NOMINAL FAN MOTOR	H.P.
○ TOTAL PACKAGE AMPS	○
VOLTS	
PHASE/HERTZ	
CONTROL VOLTAGE	
SERIAL NUMBER	

CONTACTOR AMP. RATING

ASSEMBLY AMP. RATING

LOCKED ROTOR AMP. RATING OF ASSY. --

ROTARY RECIPROCATING COMPRESSOR DIVISION
DAVIDSON, NORTH CAROLINA 28026

39557095
(50-100 HP)

INGERSOLL-RAND

Compressor Package Data

COMPRESSOR MODEL	m ³ /MIN
CAPACITY	BARG
RATED OPERATING PRESSURE	BARG
MAX. DISCHARGE PRESSURE	BARG
MAX. MODULATE PRESSURE	KW
NOMINAL DRIVE MOTOR	KW
NOMINAL FAN MOTOR	KW
○ TOTAL PACKAGE AMPS	○
VOLTS	
PHASE/HERTZ	
CONTROL VOLTAGE	
SERIAL NUMBER	

CONTACTOR AMP. RATING


ASSEMBLY AMP. RATING

LOCKED ROTOR AMP. RATING OF ASSY. --

ROTARY RECIPROCATING COMPRESSOR DIVISION
DAVIDSON, NORTH CAROLINA 28026

54425996
(37-75 KW)

39879762
(3 REQUIRED)

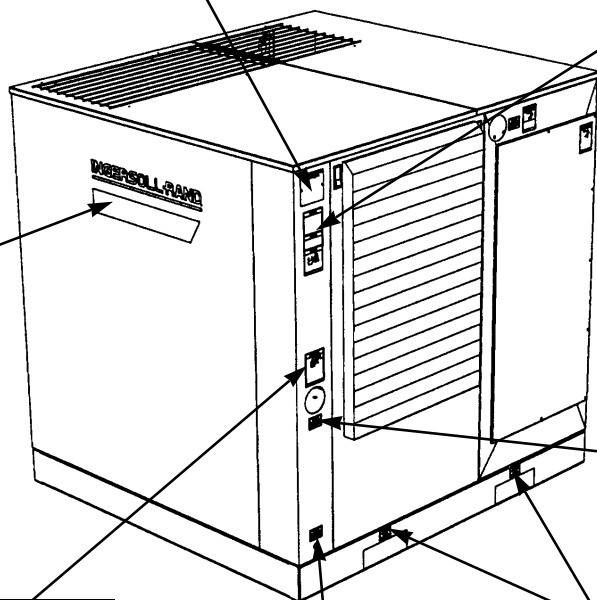

NOTICE

To obtain satisfactory compressor operation and maintenance, a minimum of 3 feet clearance on 3 sides is required. 3 1/2 feet is required in front of the control panel (or minimum required by latest national Electrical Code or applicable local codes).

Refer to the Operators/Instruction Manual before performing any maintenance.

NOTICE

Do not operate without enclosure panels & forklift covers in place.

Enclosure panels will affect performance.

NOTICE

Motors must be greased periodically.

See Operators Manual for procedure.

INGERSOLL-RAND®

39905443

NOTICE

Air discharge.

INGERSOLL-RAND®

39540257

! DANGER

Discharge air.
Can contain carbon monoxide or other contaminants. Will cause severe injury or death.

Do not breathe this air.

INGERSOLL-RAND®

39540166

NOTICE

Condensate drain.

INGERSOLL-RAND®


39541081

NOTICE

Lift here.

INGERSOLL-RAND®

39540273
(4) 2 EACH END

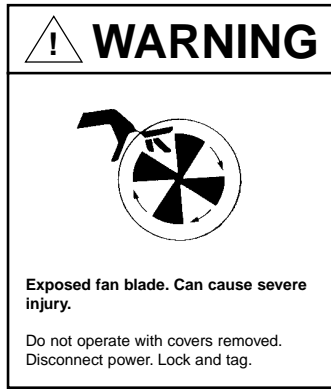


INGERSOLL® AND ©

39540190



INGERSOLL® AND ©

39540224

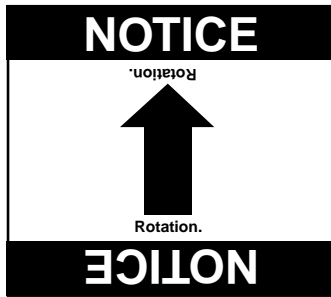

INGERSOLL® AND ©

39905203




INGERSOLL® AND ©

39540232




INGERSOLL® AND ©

39558788

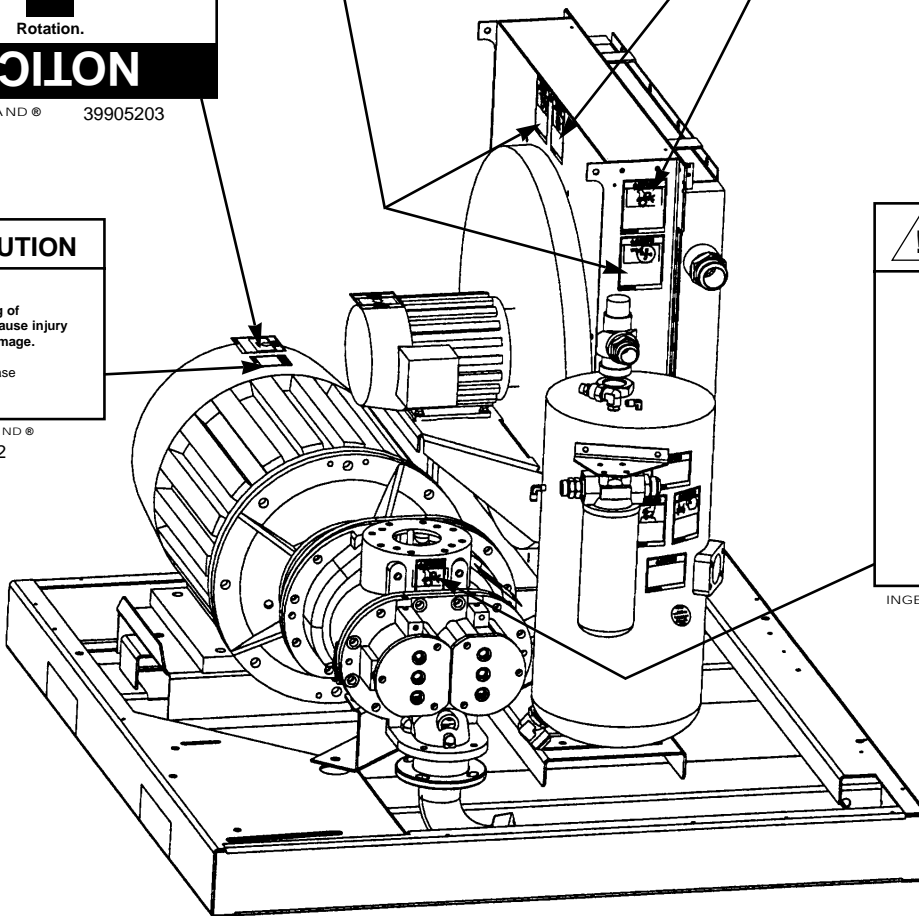

NOTICE



Rotation.

INGERSOLL® AND ®

39540182


CAUTION

Improper coolant filter replacement will cause compressor damage.

Replace filter element after first 150 hours of operation and every 2000 hours thereafter or when coolant is changed.

INGERSOLL® AND ®

39544143

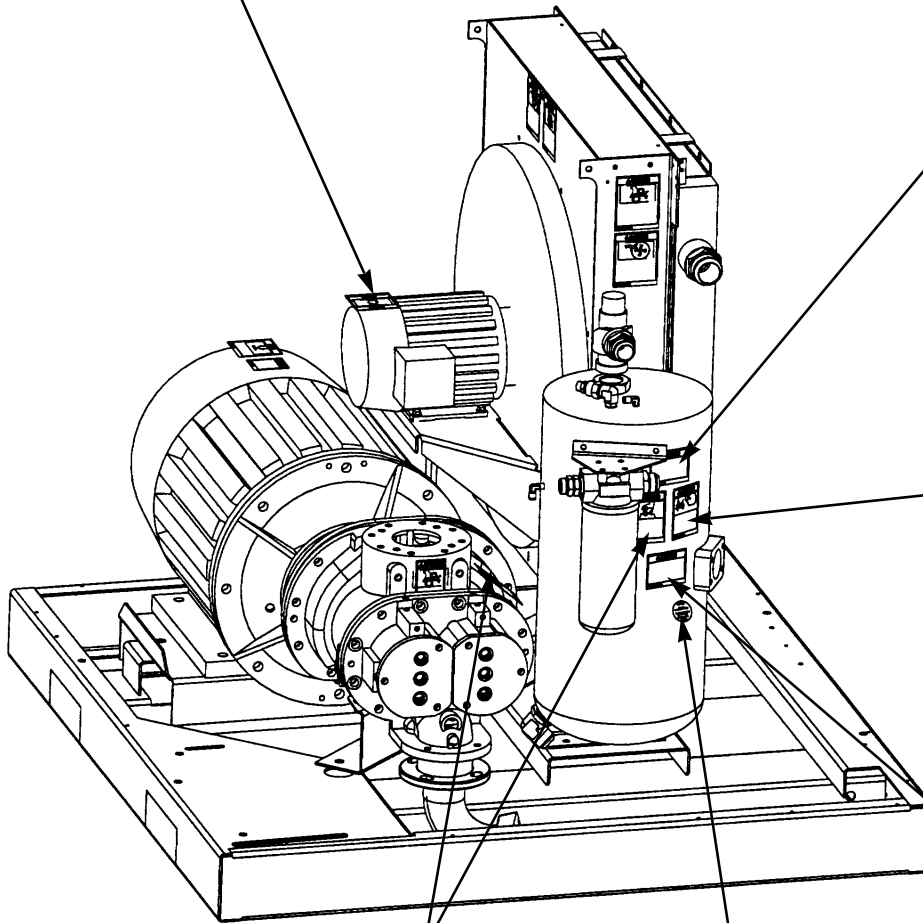

WARNING



High pressure air. Can cause severe injury or death.

Relieve pressure before removing filter plugs / caps, fittings or covers.

INGERSOLL® AND ®

39540240

WARNING



Hot surface. Can cause severe injury.

Do not touch. Allow to cool before servicing.

INGERSOLL® AND ®

39541362

Filler Cap.
Use only
recommended coolant.
Read instruction book
before servicing.
INGERSOLL® AND ®
39543921

39543921

CAUTION

Use of incorrect coolant can cause system contamination.

Use only SSR ULTRA COOLANT.








INGERSOLL® AND ®

39540265

3 REQUIRED - ONE ON LEFT PLENUM WALL



INGERSOLL RAND®
39541354

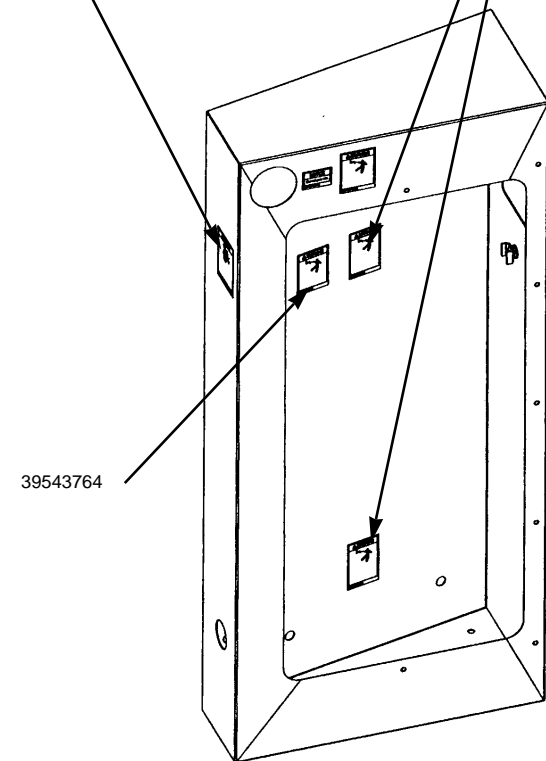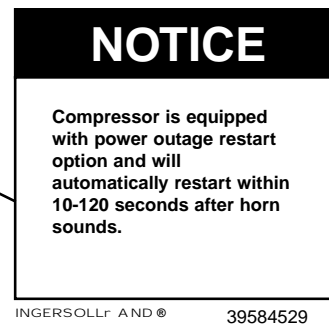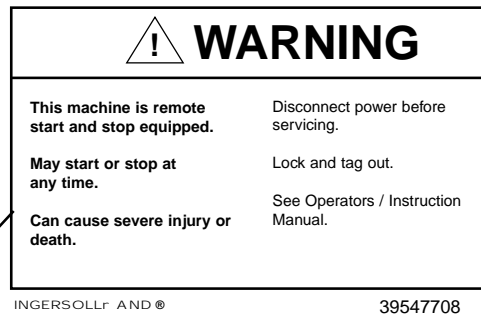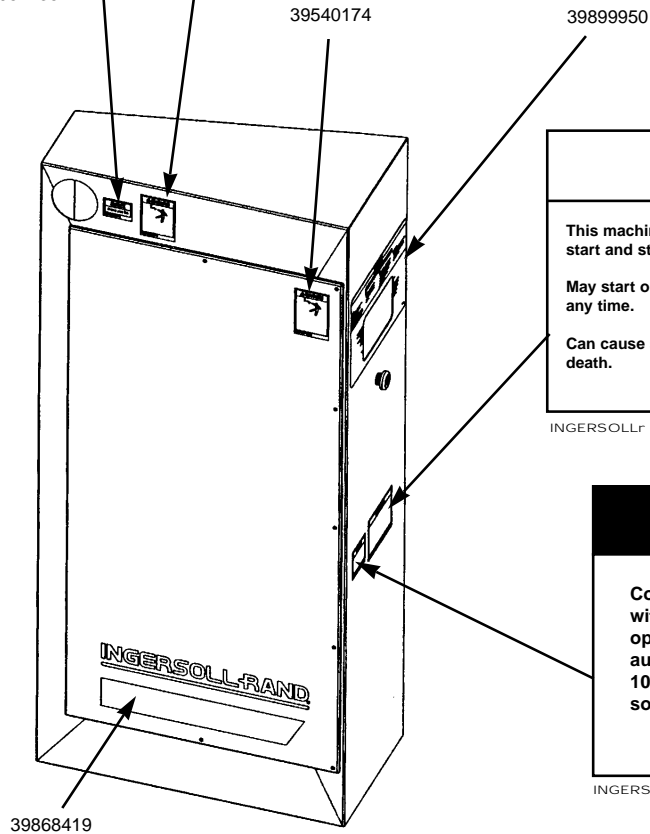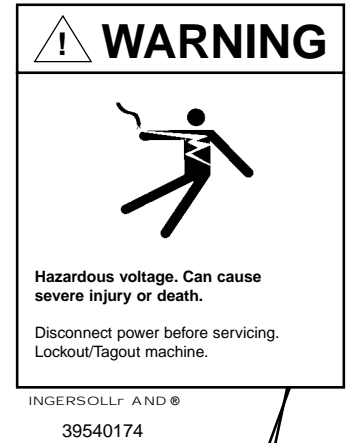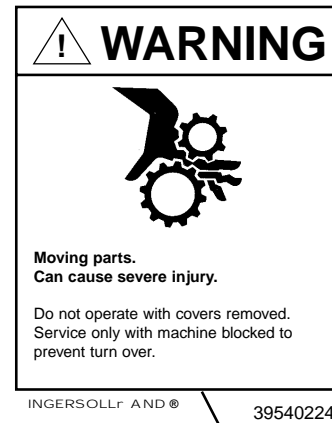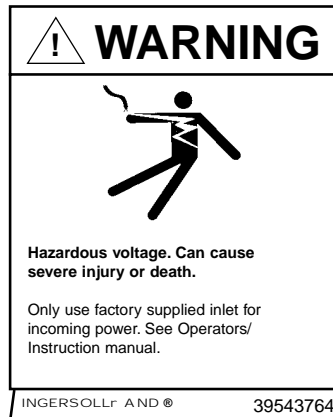

1.0 RECEIPT OF EQUIPMENT

1.1 INSPECTION

When you receive the compressor please inspect it closely. Any indication of careless handling by the carrier should be noted on the delivery receipt especially if the compressor will not be immediately uncrated. Obtaining the delivery man's signed agreement to any noted damages will facilitate any future insurance claims.

IMPORTANT READ THIS LOST OR DAMAGED GOODS

THOROUGHLY INSPECT THIS SHIPMENT IMMEDIATELY UPON ARRIVAL

OUR RESPONSIBILITY FOR THIS SHIPMENT CEASED WHEN THE CARRIER SIGNED BILL OF LADING



If goods are received short or in damaged condition, it is important that you notify the carrier and insist on a notation of the loss or damage across the face of the freight bill. Otherwise no claim can be enforced against the transportation company.

If concealed loss or damage is discovered, notify your carrier at once and request an inspection. This is absolutely necessary. Unless you do this the carrier will not entertain any claim for loss or damage. The agent will make an inspection and grant a concealed damage notation. If you give the transportation company a clear receipt for goods that have been damaged or lost in transit, you do so at your own risk and expense.

WE, AT I-R, ARE WILLING TO ASSIST YOU IN EVERY POSSIBLE MANNER TO COLLECT CLAIMS FOR LOSS OR DAMAGE, BUT THE WILLINGNESS ON OUR PART DOES NOT MAKE US RESPONSIBLE FOR COLLECTION OF CLAIMS OR REPLACEMENT OF MATERIAL. THE ACTUAL FILING AND PROCESSING OF THE CLAIM IS YOUR RESPONSIBILITY.

**Ingersoll-Rand Company
Davidson, North Carolina**

APDDGFO-99-79

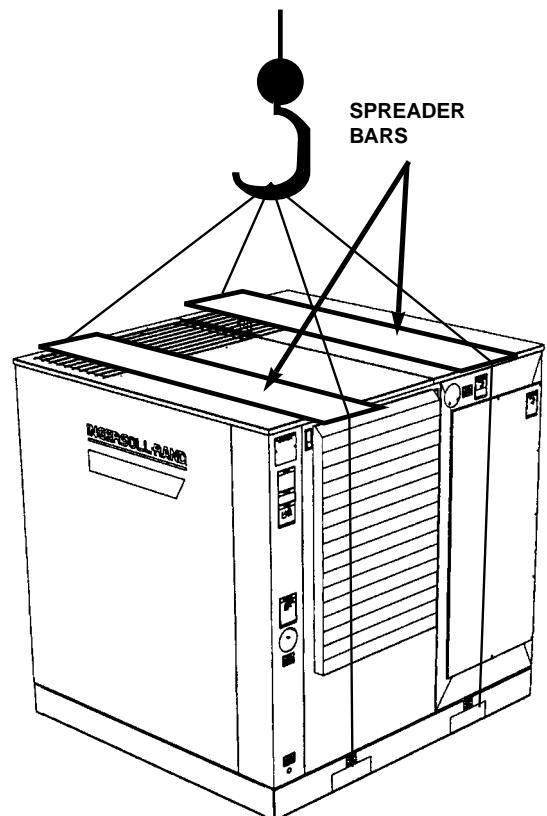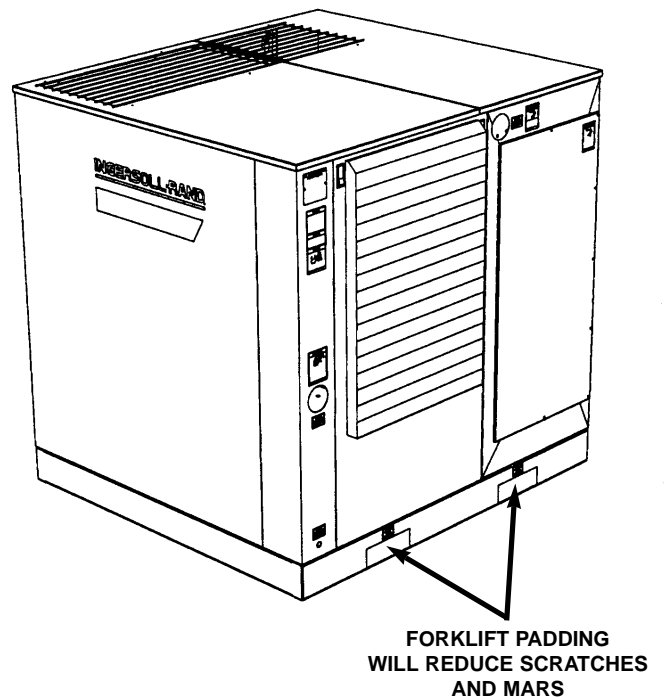

1.2 UNPACKING AND HANDLING

The compressor package has been mounted on a base which provides for forklifting between the two side channels to facilitate handling during shipment. Care in positioning the forklifts is important because the location of the center of gravity is strongly affected by the location of the compression module and drive motor.

Slings can be used to lift the crates, but spreader bars must be used to prevent the slings from exerting a force against the sides of the crates.

1.3 TOOLS

Remove compressor unit from wooden skid. A crowbar and hammer will be needed.

2.0 INSTALLATION


2.1 VENTILATION

Oil flooded rotary air compressors produce large amounts of heat. Because of this large heat production, the compressor must be placed in a room with adequate ventilation.

If heated air from the compressor exhaust is allowed to recirculate back to the compressor, the compressor will overheat and shut down. **This heat must be exhausted from the room.** You should take this into consideration when you decide where to place the compressor within your plant. Consider that the required maintenance clearance is 3 ft (.9 m) all around the compressor. However 42" (1.06m), or minimum required by latest NEC or applicable local codes, must be maintained in front of starter box door.

Ambient temperatures higher than 115°F (46°C) should be avoided as well as areas of high humidity.

Consider also the environment surrounding or near the compressor. The area selected for the location of the compressor should be free of dust, chemicals, metal filings, paint fumes and overspray.

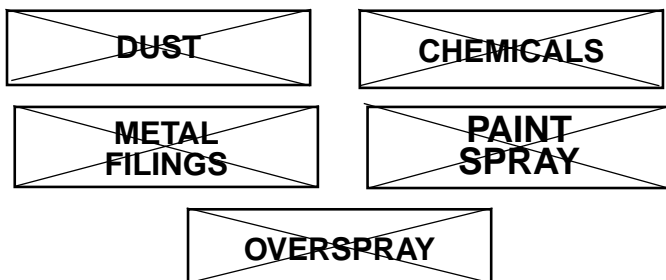

2.2 FOUNDATION REQUIREMENTS


Refer to the foundation plan for the particular model compressor to be installed. See Section 7.0.

The compressor can be installed on any level floor that is capable of supporting it. Compressor weights are listed on the foundation plans.

When sound transmission is of particular importance it is often helpful to install a sheet of rubber-fabric-matting, or cork under the compressor to reduce the possibility of resonant sounds being transmitted or amplified through the floor.

⚠ NOTICE

Never elevate the compressor unit above the floor level. This may allow air to enter the cabinet under the base. Performance will be affected.

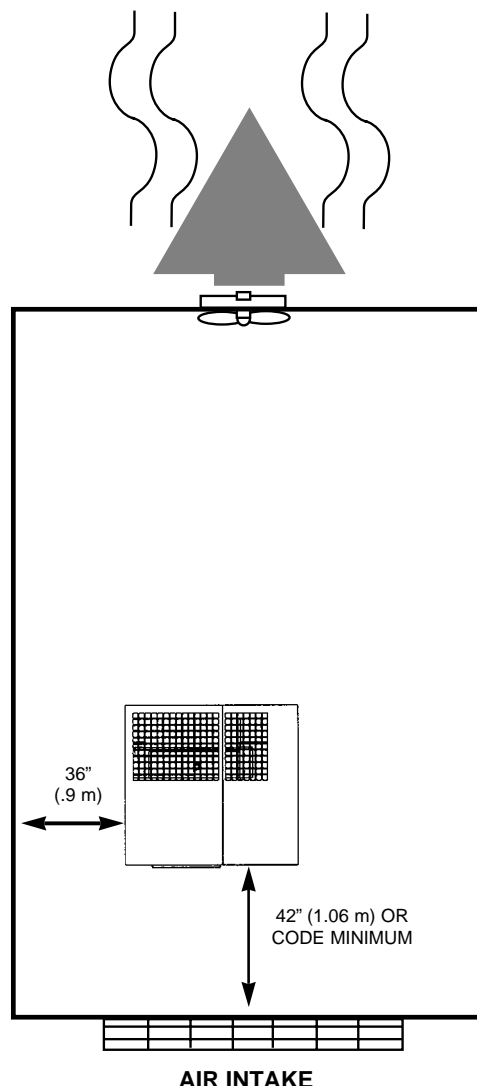

2.3 PIPING

The use of plastic bowls on line filters without metal guards can be hazardous. Their safety can be affected by either synthetic lubricants or the additives used in mineral oil. From a safety standpoint, metal bowls should be used on any pressurized system. Review of your plant air line system is recommended.

⚠ WARNING

Do not use plastic pipe, soldered copper fittings or rubber hose for discharge piping.

The built-in aftercooler reduces the discharge air temperature well below the dew point (for most ambient conditions), therefore, considerable water vapor is condensed. To remove this condensation, each compressor with built-in aftercooler is furnished with a combination condensate separator/trap.

2.3 PIPING (Continued)

A dripleg assembly and isolation valve should be mounted near the compressor discharge. A drain line should be connected to the condensate drain.

IMPORTANT: The drain line must slope downward from the compressor to work properly.

NOTE: For ease of inspection of the automatic drain trap operation, the drain piping should include an open funnel.

It is possible that additional condensation can occur if the downstream piping cools the air even further and low points in the piping systems should be provided with driplegs and traps.

IMPORTANT: Discharge piping should be at least as large as the discharge connection at the compressor enclosure. All piping and fittings must be suitable for the maximum operating temperature of the unit and, at a minimum, rated for the same pressure as the compressor sump tank.



NOTICE

Do not use the compressor to support the discharge pipe.




Careful review of piping size from the compressor connection point is essential. Length of pipe, size of pipe, number and type of fittings and valves must be considered for optimum efficiency of your compressor.

It is essential when installing a new compressor to review the total plant air system. This is to ensure a safe and effective total system.

Liquid water occurs naturally in air lines as a result of compression. Moisture vapor in ambient air is concentrated when pressurized and condenses when cooled in downstream air piping.

Moisture in compressed air is responsible for costly problems in almost every application that relies on compressed air. Some common problems caused by moisture are rusting and scaling in pipelines, clogging of instruments, sticking of control valves, and freezing of outdoor compressed air lines. Any of these could result in partial or total plant shutdown.

Compressed air dryers reduce the water vapor concentration and prevent liquid water formation in compressed air lines. Dryers are a necessary companion to filters, aftercoolers, and automatic drains for improving the productivity of compressed air systems.

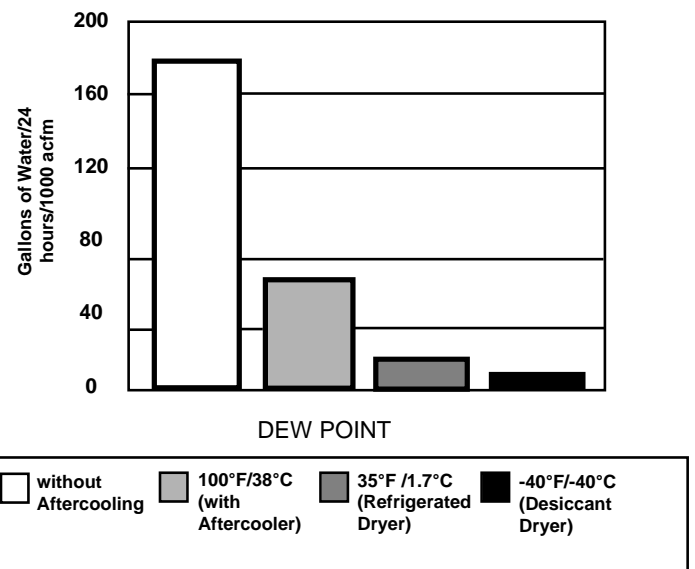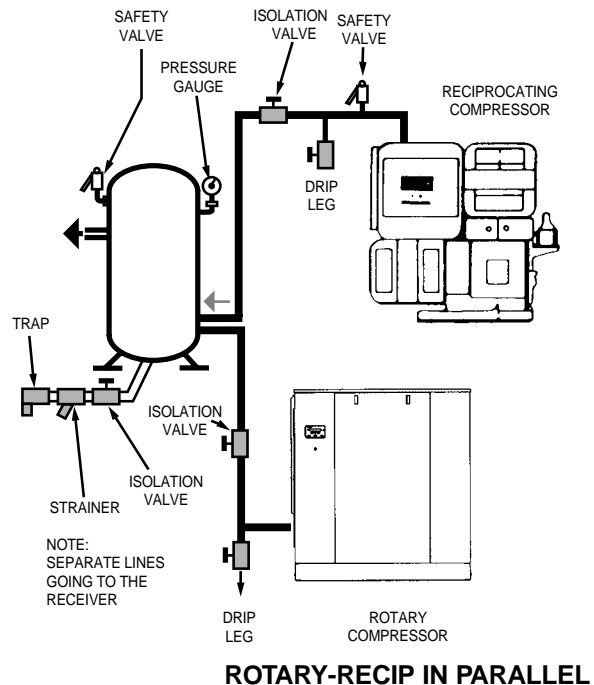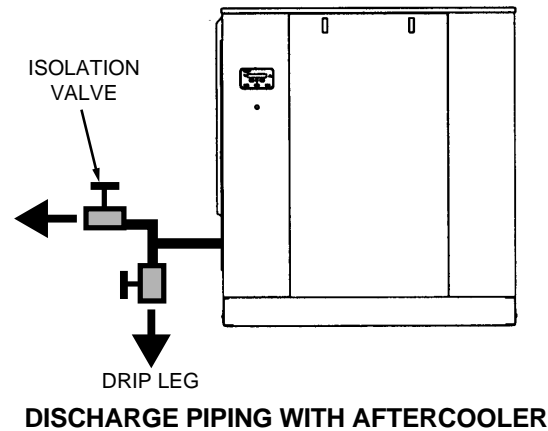


MOISTURE CONTENT OF COMPRESSED AIR

Two types of dryers, refrigerated or desiccant, are used to correct moisture related problems in a compressed air system. Refrigerated dryers are normally specified where compressed air pressure dew points of 33°F (1°C) to 39°F (4°C) are adequate. Desiccant dryers are required where pressure dew points must be below 33°F (1°C).

Contact your local Ingersoll-Rand distributor for assistance in selecting correct Ingersoll-Rand filtration or drying products.

NOTE: Screw type compressors should not be installed in air systems with reciprocating compressors without a means of pulsation isolation, such as a common receiver tank. We recommend both types of compressor units be piped to a common receiver utilizing individual air lines.

When two rotary units are operated in parallel, provide an isolation valve and drain trap for each compressor before the common receiver.

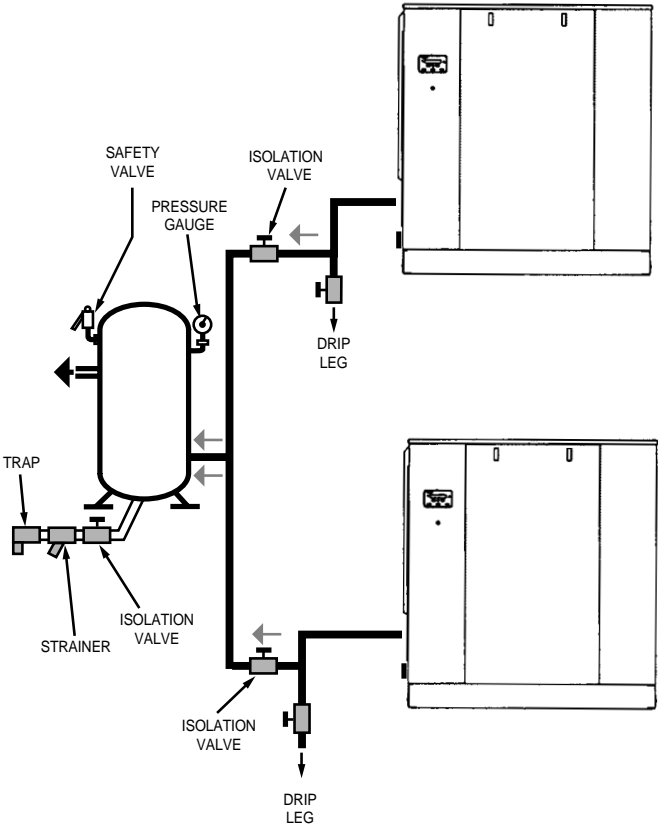

2.4 ELECTRICAL INSTALLATION

Before proceeding further, we recommend that you review the safety data in the front of this manual.

Locate the compressor data plate on the left rear corner of the unit.

The data plate lists the rated operating pressure, the maximum discharge pressure and the electric motor characteristics and power.

Confirm that the line voltage and compressor nameplate voltage are the same and that the standard starter box meets the intent of NEMA 1 guidelines.

Open the starter box door. Confirm that all electrical connections are made and tightened. Confirm that the control transformer is wired correctly for supply voltage. See Figure 2.4-1 on next page for typical control transformer wiring.

ROTARY TWO COMPRESSOR SYSTEM

Compressor Package Data
COMPRESSOR MODEL
CAPACITY CFM
RATED OPERATING PRESSURE .. PSIG
MAX. DISCHARGE PRESSURE PSIG
MAX. MODULATE PRESSURE PSIG
NOMINAL DRIVE MOTOR H.P.
NOMINAL FAN MOTOR H.P.
○ TOTAL PACKAGE AMPS ○
VOLTS
PHASE/HERTZ
CONTROL VOLTAGE
SERIAL NUMBER

CONTACTOR AMP. RATING
ASSEMBLY AMP. RATING
LOCKED ROTOR AMP. RATING OF ASSY. ..

ROTARY-RECIPROCATING COMPRESSOR DIVISION
DAVIDSON, NORTH CAROLINA 28036

39557095
(50-100 HP)

Compressor Package Data
COMPRESSOR MODEL
CAPACITY m³/MIN
RATED OPERATING PRESSURE .. BARG
MAX. DISCHARGE PRESSURE BARG
MAX. MODULATE PRESSURE BARG
NOMINAL DRIVE MOTOR KW
NOMINAL FAN MOTOR KW
○ TOTAL PACKAGE AMPS ○
VOLTS
PHASE/HERTZ
CONTROL VOLTAGE
SERIAL NUMBER

CONTACTOR AMP. RATING
ASSEMBLY AMP. RATING
LOCKED ROTOR AMP. RATING OF ASSY. ..

ROTARY-RECIPROCATING COMPRESSOR DIVISION
DAVIDSON, NORTH CAROLINA 28036

54425996
(37-75 KW)

FUSE TABLE

STARTER SIZE	CONTROL TRANSFORMER (T1) SIZE	1FU & 2FU PRIMARY FUSE (Amp)	4FU & 5FU SECONDARY FUSE (Amp)	3FU SECONDARY FUSE (Amp)
C85 FV	330VA	2.5 A	2.0 A	3.2 A
B110 FV	330VA	2.5 A	2.0 A	3.2 A
B180 FV	330VA	2.5 A	2.0 A	3.2 A
B250 FV	330VA	2.5 A	2.0 A	3.2 A
C43 S-D	230VA	1.8 A	2.0 A	2.0 A
C60 S-D	230VA	1.8 A	2.0 A	2.0 A
C72 S-D	230VA	1.8 A	2.0 A	2.0 A
C85 S-D	330VA	2.5 A	2.0 A	3.2 A
B110 S-D	330VA	2.5 A	2.0 A	3.2 A
B180 S-D	330VA	2.5 A	2.0 A	3.2 A

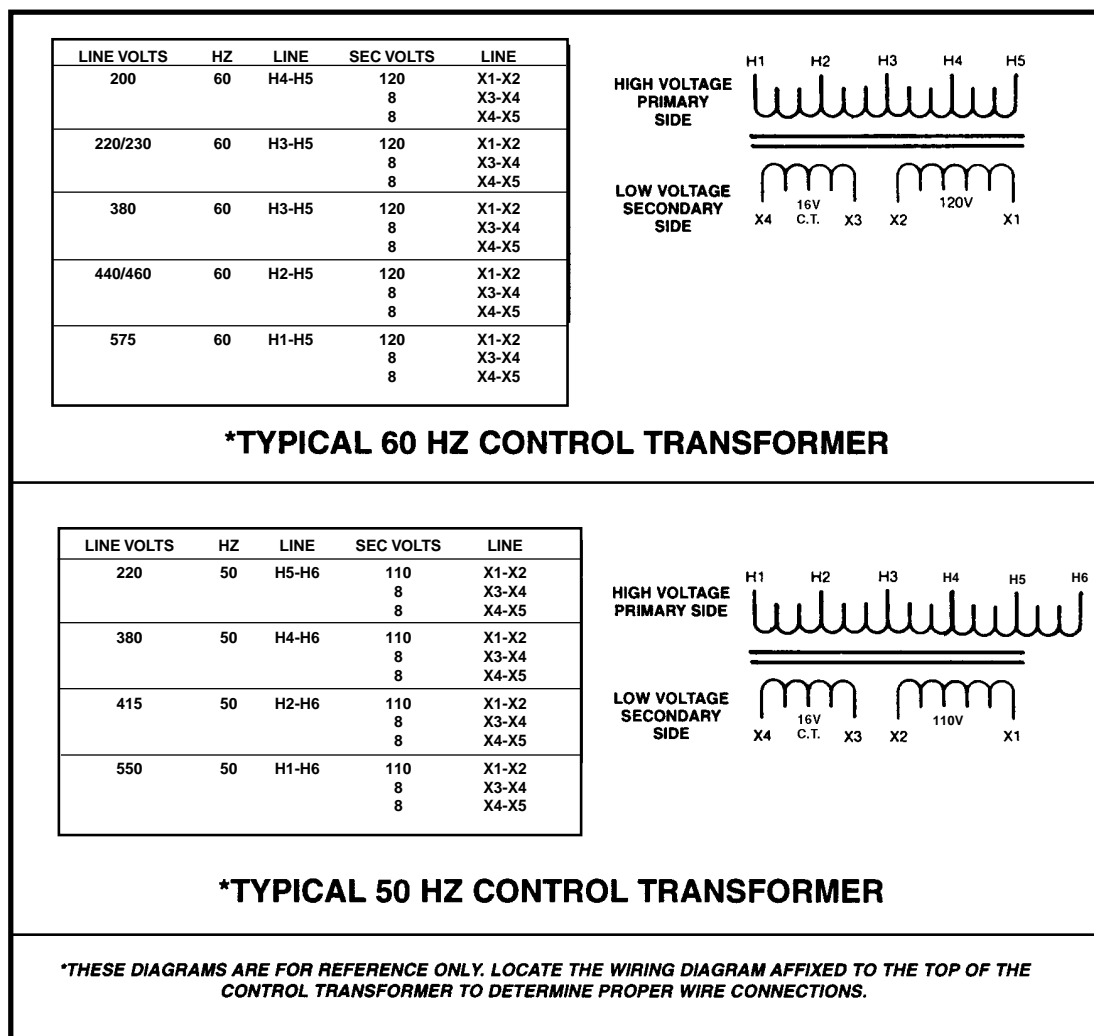


FIGURE 2.4-1 TYPICAL CONTROL TRANSFORMER WIRING

ELECTRICAL INSTALLATION (Continued)

Inspect the motor and control wiring for tightness.

Close and fasten the starter box door.

Rotation Check

Locate the rotation decal on each motor.

Drive Motor

The correct compressor drive motor rotation is clockwise when viewed from the rear or non-drive end of the motor. See Figure 2.4-2.



CAUTION

If the compressor is operated in the opposite direction of rotation, aircend damage can result and is not warrantable.

NON-DRIVE
END

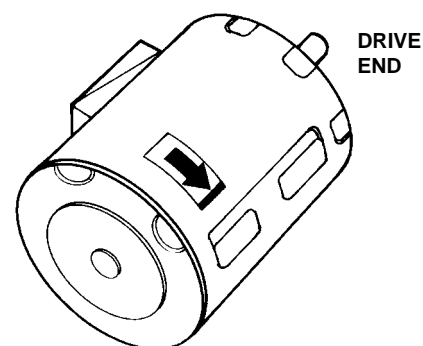


FIGURE 2.4-2 DRIVE MOTOR ROTATION

ELECTRICAL INSTALLATION (Continued)

The Intellisys will automatically shut the unit down if the compressor rotation is incorrect, and "CK MTR ROTATION" will appear in the display, also the alarm light will be on. See Section 6.

For the compressor motor rotation check, the motor jogging time must be as short as possible.

After depressing the start button, IMMEDIATELY depress the "EMERGENCY STOP" button. Should the motor rotation be incorrect, put main disconnect in the OFF position, lock and tag. See Figure 2.4-3.

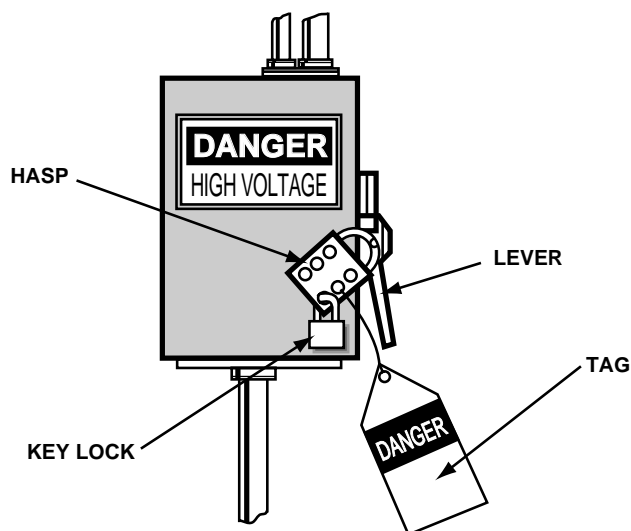


FIGURE 2.4-3 MAIN DISCONNECT LOCKED AND TAGGED

Open the starter box door.

Interchange any two line connections (L1, L2 or L3) at the starter. Close and fasten the starter box door. Recheck for correct rotation.

Fan Motor

Observe the compressor cooling fan. The rotation should be in accordance with the fan rotation decal affixed to the fan motor. Cooling air should exhaust through fan end of compressor enclosure.

Should the motor rotation not be correct, put the main disconnect in the OFF position, lock and tag.

Interchange any two fan motor leads at the fan motor overload relay (FMS/OL). Close and fasten the starter box door. Recheck for correct rotation.

Fan motor rotation is clockwise when viewed from the fan motor side.

Intellisys Operating Instructions

Read and understand the following Intellisys Operating Instructions (See Figure 2.4-4) prior to operating the unit.

NOTE: These instructions are also contained on the decal near the Intellisys panel of the unit.

NOTICE

Intellisys Operating Instructions

Before installing, operating, or performing any maintenance on this unit, read and understand the instructions in the Operators / Instruction Manual

Before Starting

1. Check coolant level. Add coolant if necessary.
2. Verify that main isolation valve is open.
3. If water-cooled, turn on water.
4. Close main disconnect switch. The "POWER" light indicates that line and control voltages are available for starting. "UNLOAD" indicator light will be on.

Starting

1. Push "START". Compressor will load automatically and the air pressure will rise if there is sufficient demand for air.

Stopping

1. Push "UNLOADED STOP". Compressor will immediately unload and continue to run unloaded approximately 7 seconds. Compressor will then stop. If compressor is running unloaded when "UNLOADED STOP" is pushed, compressor will stop immediately.
2. Open main disconnect switch.

Stopping - Emergency

1. If there is a need to stop the compressor immediately or if the "UNLOADED STOP" does not stop the compressor after 7 seconds, push "EMERGENCY STOP"
2. Open main disconnect switch.

FIGURE 2.4-4 INTELLISYS OPERATING INSTRUCTIONS

2.5 OUTDOOR SHELTERED INSTALLATION

Many times a compressor must be installed outside due to jobsite conditions or limited space within a manufacturing facility. When this occurs there are certain items that should be incorporated into the installation to help ensure trouble free operation. These items have been listed below plus Figure 2.5-1 has been included to show a typical outdoor sheltered installation. The unit must be purchased with the Outdoor Modification Option to provide NEMA 4 electrics, TEFC motor, and a cabinet exhaust on the side of the unit rather than the top to prevent recirculation of cooling air.

- The compressor should be on a concrete pad designed to drain water away. If the concrete pad is sloped, then the compressor must be leveled. In order to properly pull cooling air through the enclosure, the base/skid must be sealed to the concrete pad.
- The roof of the shelter should extend a minimum of 4 ft (1.2 m) around all sides of the compressor to prevent direct rain and snow from falling on the unit.
- Air-cooled machines must be arranged under the shelter in a way that prevents air recirculation (i.e. hot exhaust back to the package inlet).
- If the installation includes more than one compressor, the hot air exhaust should not be directed towards the fresh air intake of the second unit or an Air Dryer.
- If a standard machine is to be installed outside, the ambient temperature must never drop below 35°F (1.7°C).
- If ambient temperature drops below 35°F (1.7°C) to as low as -10°F (-23°C) the unit must be supplied with the Low Ambient Option. Installations below -10°F (-23°C) ambient are not recommended. The Low Ambient Option requires a separate power source to operate internal heaters.
- Arrange the machine with the Intellisys controller/starter enclosure facing away from the sun as radiant heat can affect starter/Intellisys performance. Also direct sunlight and UV rays will degrade the membrane touch panel. This is not a warrantable situation.
- Power disconnect switch should be within line of sight and in close proximity to the unit. N.E.C. and local electrical codes must be followed when installing the power disconnect switch.
- Condensate drains must never be allowed to drain on the ground. Run to a suitable sump for future collection and disposal or separation of lubricant and water mixture.
- Incoming power connections must use suitable connectors for outdoor weather tight service.
- A minimum of 3 ft (.9 m) clearance must be allowed on all four sides of the unit for service access. However 42" (1.06m), or minimum required by latest NEC or applicable local code, must be maintained in front of starter box door.
- If possible, access by a forklift and/or an overhead beam hoist should be kept in mind (for eventual service to airend or motor).
- If the area around the installation contains fine airborne dust or lint and fibers etc., then the unit should be purchased with the High Dust Filter Option.
- Some type of protection such as a fence or security system, should be provided to prevent unauthorized access.


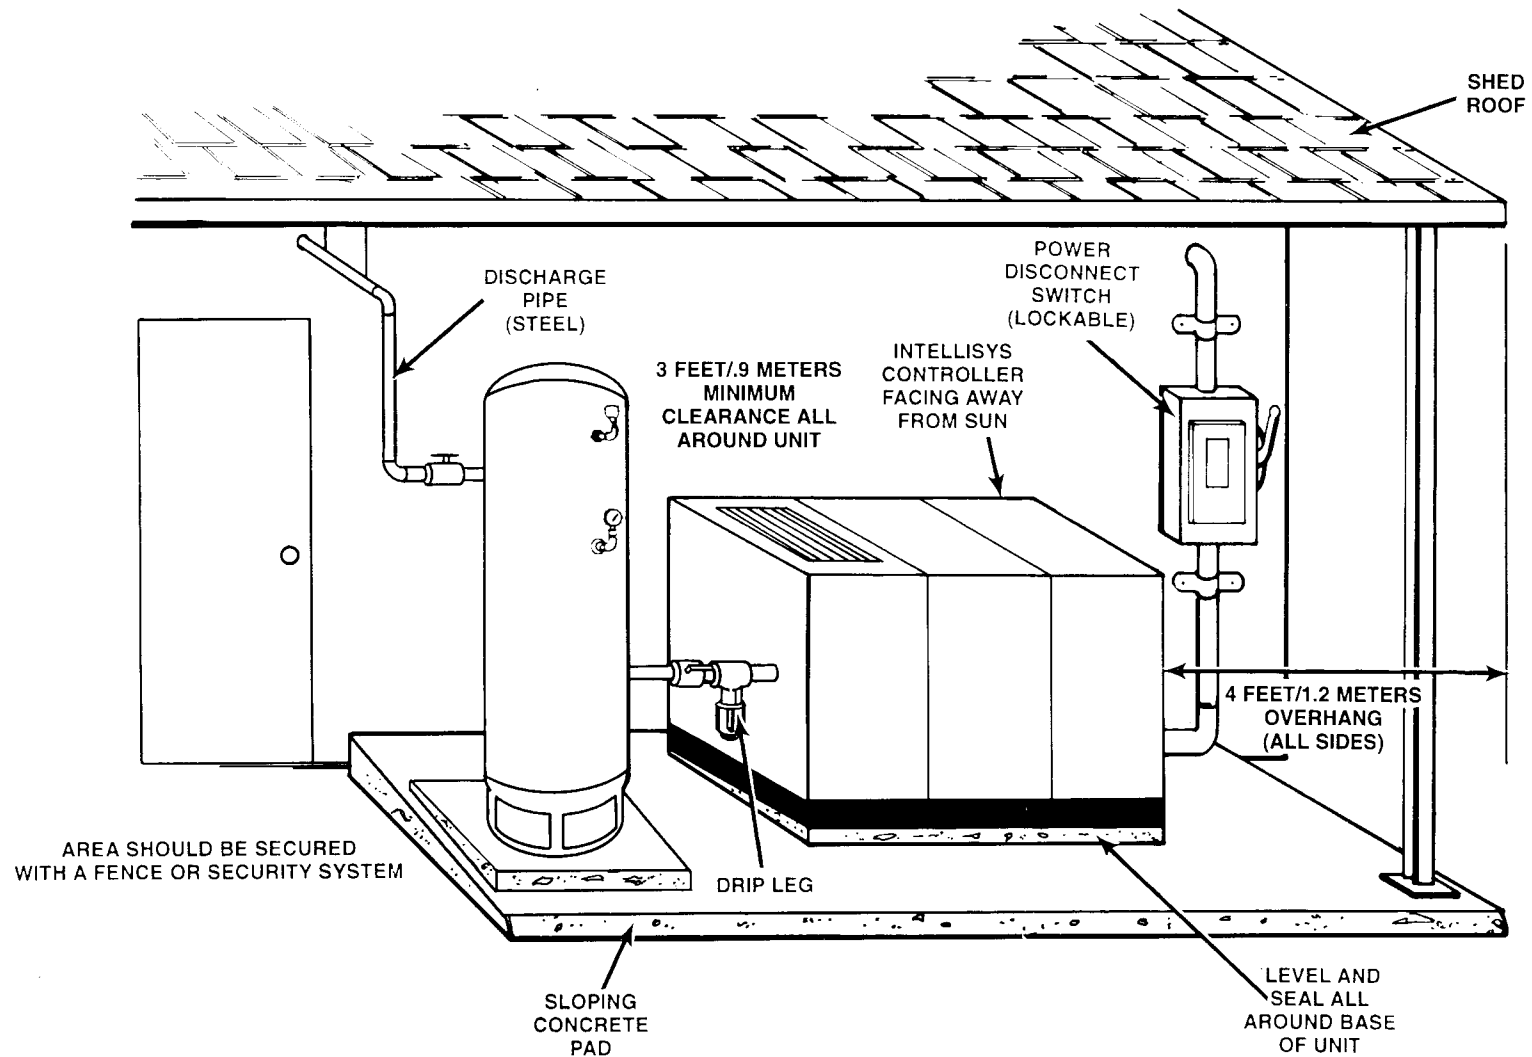


FIGURE 2.5-1 TYPICAL OUTDOOR SHELTERED INSTALLATION

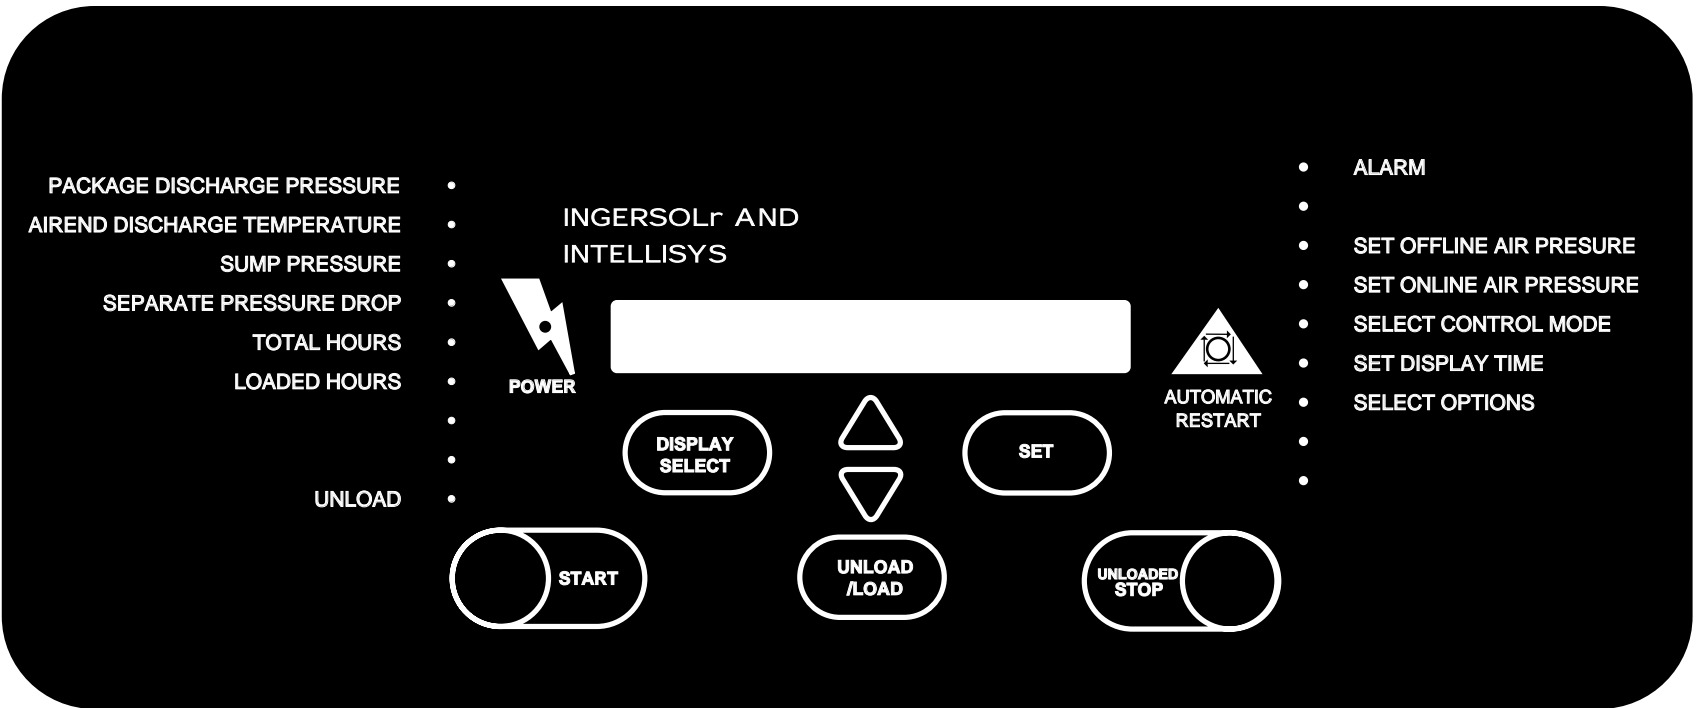


INTELLISYS CONTROLLER

3.0 INTELLISYS

3.1 EMERGENCY STOP SWITCH

Pressing this switch stops the compressor immediately. Compressor cannot be restarted until switch is manually reset. Turn clockwise to reset.

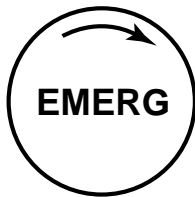

3.2 POWER ON LIGHT (Inside Starter Box)

Indicates control voltage is available to the control circuit and line voltage is available for starting.



3.3 POWER INDICATOR LIGHT


Indicates voltage is available to the intellisys controller.



3.4 PUSH BUTTONS

START


If the display shows READY TO START, pressing this button will start the compressor. The compressor will start and load automatically if there is a demand for air.

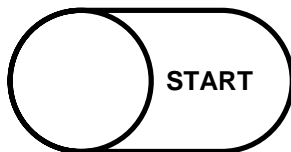

If in the display table press this button to exit the display table. Display will show "CHECKING MACHINE" then "READY TO START".

UNLOAD STOP

Pressing this button will activate the unload stop. If the compressor is running loaded, it will unload. Seven seconds later it will stop. If the compressor is running unloaded, it will stop immediately. Pressing this button with the unit stopped will flash all L.E.D.'s for a light check and flash the software version number in the display.

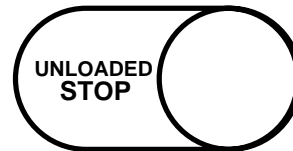

UNLOAD/LOAD

If the unit is running loaded, pressing this button will cause the unit to unload, the unload indicator light will be on. The unit will not load until the button is pressed again. If the unit is running unloaded, pressing this button will load the unit in the ON/OFF LINE or MOD/ACS control mode previously operating.



3.4 PUSH BUTTONS (Continued)

DISPLAY SELECT


Pressing this button will change the information selected for the display. The display table will be incremented. If the button is held, this display table will scroll. This button can also be used to exit the set point procedure.



NOTE: For readings less than 1 hr., hourmeter displays minutes. After 1 hr. the hourmeter displays hours.


SET

The SET button is used to enter the set point procedure. The set button is also used to reset warnings and alarms. Pressing this button once will reset a warning, twice will clear an alarm.

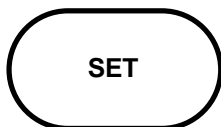


ARROWS

These buttons have several functions. If the Intellisys is in the set point mode, the ARROWS are used to change the set point values. If the unit has multiple alarms or warnings, the ARROWS are used to scroll through these conditions. The ARROWS have a function in the calibration routine, which will be described later.

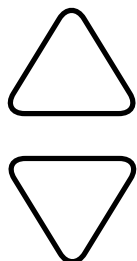

PRESSURE SENSOR CALIBRATION (ZEROING) ROUTINE

This routine is entered if the unit is not running and both the up and down arrows button are pressed at the same time. Make sure all pressure is relieved from the compressor before calibration. The display will flash the message "CALIBRATING". After calibration is completed the display will indicate "READY TO START". Zeroing should only be done after a pressure sensor has been replaced or any controller change.

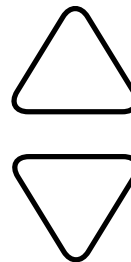

3.5 SET POINT PROCEDURE

This procedure allows the customer to modify 14 variables in the controller logic.

At this time, press the SET button to enter the setpoint routine. The SET OFFLINE AIR PRESSURE indicator will light and the display will show:

XXXX PSI

OFFLINE AIR PRESSURE is the first set point and XXXX stands for the value of the set point. Press the SET button to select the set point to be adjusted. Press the up or down arrow buttons to raise or lower the set point value. Press the SET button to move to the next set point. If the set point value has been adjusted, press the SET button to enter the new value. The display will flash to acknowledge. The next set point will then be displayed. If the value of the set point was not changed, pressing the SET button will only step to the next set point. When the SELECT OPTIONS set point is entered, the SELECT OPTIONS indicator will light, and the setpoints for options Auto Start/Stop or Remote Start/Stop will only be accessible and displayed if the option module is installed in the unit. The Power Outage Restart setpoints will only be accessible and displayed if the combination Auto/Remote Start/Stop/Power Outage Restart option module is installed in the unit. The set point routine can be exited by pressing the DISPLAY/SELECT button or exit will be automatic after 30 sec.

The following is a list of the set points. Also included are maximum and minimum limits, step size, and units of measure.

	MIN	MAX	STEP	UNIT
OFFLINE PRESSURE	75	RATED + 3	1	PSI
ONLINE PRESSURE	65	OFFLINE - 10	1	PSI
CONTROL MODE	MOD/ACS - MODULATION - ON/OFF LINE			
DISPLAY TIME	10	600	10	SEC
AUTO RESTART	OFF	ON	---	---
AUTO RESTART TIME	2	60	1	MIN
SEQUENCER	OFF	ON	---	---
REMOTE START/STOP *	OFF	ON	---	---
POWER OUT/RESTART*	OFF	ON	---	---
POWER OUT RESTART TIME *	10	120	1	SEC
DELAY LOAD TIME	0	60	1	SEC
LEAD/LAG**	---	---	---	---
LAG OFFSET	0	45	1	PSI
LOW AMBIENT	OFF	ON	---	---

*Optional

** The lead/lag feature allows the customer to choose one compressor as the "lead" compressor and any others as the "lag" compressor (simulates the mode of a sequencer). The lag compressor's on-line and off-line pressures are determined by subtracting the lag offset set-point from the on-line and off-line pressure set-points of the lead compressor.

3.6 WARNINGS

When a warning occurs, the alarm indicator will flash and the display will alternate between the current message and the warning message. If multiple warnings exist, the message

SCROLL FOR WARN

will be substituted for the warning messages. The up and down arrows can be used to obtain the warnings

A warning needs to be reset by an operator. The warning will clear when the SET button is pressed once. The following is a list of the warning messages.

1) CHG SEPR ELEMENT

This warning will occur if the pressure on the Separator is 12 psig (.8 bar) greater than the pressure at the Package discharge and the unit is fully loaded.

2) HIGH AIREND TEMP

This will occur if the Airend Discharge Temperature (2ATT) exceeds 221°F (105°C).

3) HIGH AIR PRESS

This will occur if the unit is connected to an ISC (sequencer), and the line pressure exceeds the max. offline pressure for 3 seconds.

4) T2 SENSOR FAILURE

This will occur when the Low Ambient Option is turned on and either the low ambient sensor is not installed or is broken.

3.7 ALARMS

When an alarm occurs, the alarm indicator will light and display will show actual alarm message. If alternately multiple alarms have occurred the display will show SCROLL FOR ALARM. In this situation the up and down arrows will be used to view the alarm messages. All alarms (with the exception of the emergency stop) will be reset by twice pressing the SET button. Any exceptions to the above will be explained in the alarm description.

The following is a list of the alarm messages.

1) LOW SUMP PRESS

This will occur if the unit is running and sump pressure is too low.

2) HIGH AIR PRESS

This will occur if the unit is running and sump pressure is greater than unit rated operating pressure plus 20 psig (1.4 bar), plus the separator pressure drop, or the line pressure is 15 psig (1.0 bar) above the rated pressure.

3) HIGH AIREND TEMP

This will occur if airend discharge temperature is greater than 228°F (109°C).

4) STARTER FAULT 1SL (2SL)

This alarm will occur if the starter contacts open while the unit is running. This alarm will also occur if the unit is given the stop command and the starter contacts do not open. 1SL refers to the auxiliary circuit on starter contactor 1M. 2SL refers to the auxiliary circuit on starter contacts 2M and 1S.

5) MAIN MTR OVERLD

This will occur if a motor overload is sensed.

6) FAN MTR OVERLOAD

This will occur if a fan motor overload is sensed.

7) TEMP SENSOR FAIL

This will occur when the sensor temperature is recognized as missing or broken.

8) REMT STOP FAIL

This will occur if the momentary remote stop switch does not disengage by the time the unit attempts to start.

9) REMT START FAIL

This will occur if the momentary remote start switch does not disengage by the time star-delta transition occurs.

10) CK MTR ROTATION

This alarm will occur if a unit is started and compressor has incorrect rotation.

11) CALIBRATION FAIL

This alarm will occur if the sensor calibration routine is executed and the sensor reading exceeds 10% of scale.

12) NO CONTROL POWER

This alarm will occur when the controller senses a loss of control power.

13) PRES SENSOR FAIL

Whenever the pressure sensor is recognized as missing or broken, a pressure sensor failure alarm will occur.

14) LOW UNLOAD SUMP

This alarm will occur if the unit is running unloaded and sump pressure is less than 15 psig (1.0 bar).

INITIAL CHECK ALARMS

15) HIGH AIREND TEMP

This will occur if airend discharge temperature is greater than 217°F (103°C).

This alarm will only occur when the machine is not running. When it occurs, the message MUST COOL DOWN is added to the alternating group of alarm messages.

EMERGENCY STOP

This will occur when the EMERGENCY STOP button is engaged. The alarm indicator will light and display will show:

EMERGENCY STOP

Disengage the EMERGENCY STOP button and press the SET button twice to reset this alarm.

4.0 SYSTEMS

4.1 GENERAL SYSTEM INFORMATION

The SSR compressor is an electric motor driven, single stage, screw compressor—complete with accessories piped, wired and baseplate mounted. It is a totally self-contained air compressor package.

A standard compressor is composed of the following:

- Inlet air filtration
- Compressor and motor assembly
- Pressurized coolant system with cooler
- Separation system
- Capacity control system
- Motor starting control system
- Instrumentation
- Safety provisions
- Aftercooler
- Moisture separator and drain trap

Optional accessories can provide for such things as remote starting or stopping and sequencer.

4.2 AIR COOLED COMPRESSORS

Design Temperatures

The standard compressor is designed for operation in an ambient range of 35°F. to 115°F. (1.7°C. to 46°C.). When conditions other than design levels described are encountered, we recommend you contact your nearest Ingersoll-Rand representative for additional information.

The standard maximum temperature (115°F.) is applicable up to an elevation of 3300 ft. (1000 meters) above sea level. Above this altitude, significant reductions in ambient temperature are required if a standard drive motor is to be used.

Coolant Cooler

The cooler is an integral assembly of core, fan and fan-motor, mounted in the compressor. The cooling air flows in through the left side of the enclosure, through the vertically mounted cooler core, and discharges upward through the top of the enclosure.

Cooling Fan Motor

In a standard compressor, the cooling fan motors are wired at the factory. They are three-phase-motors. Each is protected by a fan motor starter/overload. The fan motor is energized at the same time the compressor drive motor is energized. The fan motor starter/overload is wired in series with the compressor drive motor overload. If an overload occurs in the fan motor circuit, both the fan motor and compressor drive motor will stop.

Aftercooler

The discharge air aftercooling system consists of a heat exchanger (located at the cooling air discharge of the machine), a condensate separator, and an automatic drain trap.

By cooling the discharge air, much of the water vapor naturally contained in the air is condensed and eliminated from the downstream plant-piping and equipment.

4.3 COOLANT SYSTEM

Coolant is forced by pressure from the receiver-separator sump to the inlet port of the coolant cooler and the bypass port of the thermostatic control valve.

The thermostatic control valve controls the quantity of coolant necessary to provide a suitable compressor injection temperature. When the compressor starts cold, part of the coolant will bypass the cooler. As the system temperature rises above the valve setting, the coolant will be directed to the cooler. During periods of operation in higher ambient temperatures, all the coolant flow will be directed through the cooler.

The compressor injection minimum temperature is controlled to preclude the possibility of water vapor condensing in the receiver. By injecting coolant at a sufficiently high temperature, temperature of the discharge air and lubricant mixture will be kept above the dew point.

The controlled temperature coolant passes through a filter to the airend under constant pressure.

4.4 COMPRESSED AIR SYSTEM

The air system is composed of:

1. Inlet air filter
2. Inlet valve
3. Rotors
4. Coolant/air separator
5. Minimum pressure/check valve
6. Aftercooler
7. Moisture separator/drain trap

Air enters the compressor, passing through the inlet air filter and inlet valve.

Compression in the screw-type air compressor is created by the meshing of two helical rotors (male and female) on parallel shafts, enclosed in a heavy-duty cast iron housing, with air inlet and outlet ports located on opposite ends. The grooves of the female rotor mesh with, and are driven by, the male rotor. Tapered roller bearings at the discharge end prevent axial movement of the rotors.

The air-coolant mixture discharges from the compressor into the separation system. This system, self-contained in the receiver tank, removes all but a few PPM of the coolant from the discharge air. The coolant is returned to the system and the air passes to the aftercooler. The aftercooling system consists of a heat exchanger, a condensate separator, and a drain trap. By cooling the discharge air, much of the water vapor naturally contained in the air is condensed and eliminated from the downstream plant-piping and equipment.

During unloaded operation, the inlet valve closes and the blowdown solenoid valve opens, expelling any compressed air back to the compressor inlet.

4.5 COOLANT/AIR SEPARATION SYSTEM

The coolant/air separation system is composed of a separator tank with specially designed internals, a two-stage, coalescing-type separator element, and provision for return of the separated fluid back to the compressor.

Operation

The coolant and air discharging from the compressor flow into the separator tank through a tangential inlet. This inlet directs the mixture along the inner circumference of the separator tank, allowing the coolant stream to collect and drop to the separator tank sump.

Internal baffles maintain the circumferential flow of remaining coolant droplets and air. In an almost continuous change of direction of flow, more and more droplets are removed from the air by inertial action and then returned to the sump.

The air stream, now essentially a very fine mist, is directed to the separator element.

The separator element is constructed with two concentric, cylindrical sections of closely packed fibers, each held in steel mesh. It is flange-mounted at the receiver-outlet-cover.

The air stream enters the separator element radially and the mist coalesces to form droplets. The droplets collected on the outer first stage fall to the receiver sump. Those collected on the inner second stage collect near the outlet of the element, and are drawn back to the compressor inlet through a filter-screen and orifice fitting installed in the separator scavenge line.

The air stream, now essentially free of coolant, flows from the separator to the aftercooler, then to the condensate separator, and on to the plant air system.

4.6 ELECTRICAL SYSTEM

The electrical system of each SSR compressor is built around the microprocessor-based Intellisys controller.

The standard electrical/electronic components, enclosed in a readily accessible enclosure include:

1. SSR Intellisys controller
2. Control transformers and fuses
3. Compressor motor starter, with auxiliary contacts and overload relays
4. Cooling fan motor starter/overload

4.7 COMPRESSOR CONTROL SYSTEM

The Intellisys® controls the various operating modes of the compressor, monitors key compressor operating parameters, and shuts the compressor down in the case of an operating problem. The control system has customer adjustable inputs as described in the Intellisys® section 3.0. The compressor control system has the following standard features.

- Automatic Unloaded Start.
- On/Off Line Capacity Control.
- Unloaded Stop.
- Automatic Start/Stop.
- Compressor Fault Warning.
- Compressor Fault Alarm Shutdown.

The following paragraphs provide a description of the standard features. Please also refer to the flow schematic in section 7.0.

Automatic Unloaded Start

Pushing the start button signals the Intellisys® to engage the starter coils and opens the oil stop valve (5SV). The compressor will always start in the unloaded mode, with the inlet valve in the closed position and the blowdown valve open to vent the pressure from the separator tank. The unloaded start ensures that the compressor has a low starting torque requirement and that proper oil flow is established before the compressor loads. Compressors with full voltage starters will not load for seven seconds after the starter button is pressed. Compressors with optional star-delta starters will not load until two seconds after star-delta transition. If system pressure is below the on line set point pressure, the compressor will automatically load at this time. Press the load/unload button to prevent the compressor from loading.

Adjustment Of Unloaded Sump Pressure.

During unloaded operation, the inlet valve must allow some air flow past it to maintain sump pressure for proper lubricant flow. This air is compressed by the compression module and vented through the blowdown valve (3SV). By adjusting the closed position of the inlet valve plate, the unloaded sump pressure can be varied. The unloaded sump pressure is set at the factory and should not need adjustment under most circumstances. If adjustment is required use the following procedure.

Tools Required

- 1/2" open end wrench.
- 9/16" open end wrench.
- Loctite® 242 or equivalent.

With the compressor shut down remove the nut that fastens the inlet valve pivot anchor to the bracket on the inlet valve. Apply Loctite® 242 or equivalent to threads on spacer and loosely install nut. Start compressor and press the unload button so that the compressor will not load. Use the display select button to indicate sump pressure on the display. Move the position of the pivot anchor to alter the sump pressure until the sump pressure is between 25-35 psig (1.7-2.4 bar). Moving the pivot towards the inlet valve will raise the sump pressure. Moving the pivot away from the inlet valve will lower the sump pressure. Once the position is correct, fully tighten the nut.

On/Off Line Control

The standard control system provides for either full compressor capacity flow or zero flow based on the system pressure. If the system pressure falls below the on line set point, the Intellisys® energizes the load/unload solenoid (1SV) and the blowdown solenoid (3SV). This causes the inlet valve to open and the blowdown valve to close. Compressed air flows into the system.

If system pressure reaches the off line setting, the compressor unloads to minimize power demands. The Intellisys® de-energizes the load/unload solenoid (1SV) and the blowdown solenoid (3SV). This causes the inlet valve to close and vents the separator tank. The minimum pressure check valve (MPCV) closes to prevent back flow from the compressed air system. The compressor operates at minimum power until the system pressure falls to the on-line pressure setting.

Delay Load Time

This is the amount of time the line pressure must remain below the on line set point before the compressor will load or start (if the unit was stopped due to an auto start/stop situation). This timer will not delay loading after a start or if the time is set to zero. The delay load time feature is useful if the compressor is operating as a backup to another compressor and is normally stopped in auto start/stop mode. The delay load time prevents the compressor from starting and loading if the system air pressure momentarily drops below the on line setting of the backup compressor. If no delay is desired the delay load time setting should be set to zero.

Unloaded Stop

If the compressor is running at full load and the unloaded stop button is depressed, the compressor will unload and stop only after running unloaded for seven seconds. If the compressor is already unloaded, the compressor will stop immediately. Use of the unloaded stop button is the preferred method of stopping the compressor. If an immediate shutdown is required the EMERGENCY STOP button should be used.

Automatic Start/Stop Control

Many plant air systems have widely varying air demands or large air storage capacity which allows for automatic standby air capacity control.

The Intellisys system has been designed to carry out this function utilizing a software option module. Automatic Start/Stop is available as a factory installed option or as a field installation kit.

During periods of low air demand, if the line pressure rises to the upper set point, the Intellisys begins to time out. If the line pressure remains above the lower set point for as long as the set time, the compressor will stop. At the same time, the display will indicate the compressor has shut down automatically and will restart automatically. An automatic restart will occur when the line pressure drops to the lower set point.

The upper and lower set points and shutdown delay time are set on the Intellisys control panel. There is a 10 second delay after shutdown during which the compressor will not restart even if line air pressure drops below the lower set point. This is to allow the motor to come to a complete stop and the Intellisys controller to collect current data of operating conditions. If line air pressure is below the lower set point at the end of 10 seconds, the unit will start unless the load delay timer is set greater than 10 seconds.

Delay Load Time

This is the amount of time the line pressure must remain below the online set point before the compressor will load or start (if the unit was stopped due to an auto start/stop situation). This timer will not delay loading after a start or if the time is set to 0. When the delay load timer becomes active, the display will show the delay load countdown. Once the countdown reaches 0, the unit will load or start.

Automatic Start/Stop Operation

When in operation, the compressor must meet two specific timing intervals before the Intellisys controller will stop the unit in an Automatic Start/Stop situation.

For this discussion, the timers will be called timer "A" and timer "B".

FIRST

Timer "A" prevents the compressor from automatically starting more than 6 times an hour by requiring the unit to run at least 10 minutes after each automatic start.

This 10 minute run period can be loaded, unloaded or a combination of the two and allows dissipation of heat generated within the motor windings at start.

SECOND

After the compressor has started and reached the off-line setting and has unloaded, timer "B" requires the unit to run unloaded for a period of time that the operator can adjust between 2 and 60 minutes.

The setting of timer "B" is part of the options setpoint routine and the timer cancels any accumulated time if the compressor reloads before the timer cycle has finished.

An important point... This unloaded run time may, or may not, be included in the mandatory 10 minute run time used to cool the motor windings.

When the compressor has completed the settings of both timer "A" and timer "B", the Intellisys controller stops the compressor and displays "STOPPED IN AUTO RESTART."

Pressure sensor 3APT continues to monitor the package discharge pressure and sends information to the controller which automatically restarts the compressor when the pressure falls to the on-line setting.

An advantage to this method of automatic start/stop control is allowing the compressor to stop much sooner in certain situations and timer settings, thereby reducing power costs.

Some Examples of Operation

EXAMPLE 1

The operator selects an unloaded run time of 2 minutes in the OPTION routine and starts the compressor. The unit runs loaded for 8 minutes, unloads and then runs unloaded for two more minutes.

The total running time is 10 minutes which satisfies timer "A" plus the unit ran two minutes unloaded which also satisfies timer "B," therefore, the unit stops automatically.

This example shows how timer "B" can sometimes be included within the timer "A" interval. Think of the two timers as running parallel.

EXAMPLE 2

The operator selects an unloaded run time of 3 minutes in the OPTION routine and starts the compressor. The unit runs loaded for 10 minutes and then unloads.

At this point, timer "A" has been satisfied but timer "B" still wants the compressor to run unloaded 3 more minutes before allowing an automatic stop.

The total run time for this example will be 13 minutes.

Remember.... If the unit reloads before timer "B" finishes the 3 minute setting, the partial time is canceled and timer "B" must restart the 3 minute cycle when the compressor unloads again.

EXAMPLE 3

The operator selects an unloaded run time of 10 minutes in the OPTION routine and starts the compressor. The unit runs loaded 12 minutes and then unloads.

After 12 minutes of running, the 10 minute mandatory run-time for timer "A" has been met but the compressor must continue to run unloaded an additional 10 minutes to satisfy timer "B".

After 10 minutes of unloaded run time, the compressor is stopped automatically and the total run time was 22 minutes.

4.8 OPTIONS

Several options are available with the Intellisys® control. These include starter options, remote start/stop option, power outage restart, sequencer control, and modulation control.

4.8.1 Starter Options

The standard compressor is supplied with an automatic across-the-line (full voltage) starter. This starter is fully controlled by the Intellisys® and supplies full line voltage to the compressor motor at startup.

Optional reduced voltage (star-delta) starting is available, fully installed, at the factory and is also controlled by the Intellisys®. This starter initially provides a reduced voltage to the compressor motor to reduce starting current spike. After the compressor motor is at full speed, the starter transitions to supply full line voltage to the compressor motor.

4.8.2 Remote Start/Stop

The remote start/stop option allows the operator to control the compressor from a remote mounted start/stop station. This option may be factory installed or a field installation kit is available. This feature requires a software option module.

With the optional plug-in module installed, two different switches can be wired to the controller for remote start/stop. (Refer to Electrical Schematics 7.1 or 7.2 for wiring locations). The switches are customer supplied and must be of momentary type. The stop switch contacts are normally closed and the start switch contacts are normally open.

When starting the compressor from the remote location, the Start button must be held **depressed for approximately 2 seconds** to activate the remote start function and then **released within a maximum of 7 seconds** or a Remote Start Failure alarm will occur.

4.8.3 Power Outage Restart

For customers that have interruption in their incoming power supply to the compressor and must maintain an uninterrupted supply of compressor air, the Power Outage Restart Option allows an Intellisys® compressor to automatically restart after incoming power is restored.

The Power Outage Restart Option is turned on by plugging in the required option module and enabling it through the set point routine. The restart time delay, which is adjustable from 10-120 seconds, can also be adjusted while in the set point routine on the Intellisys® controller. Any time power is restored to the compressor after a power interruption, a horn located on the side of the starter box will sound during the restart time delay (10-120 seconds) , after which the compressor will automatically start. After starting, the compressor will return to the mode of operation that the compressor was in prior to the power interruption.

This option may be installed at the factory or in the field by using an available kit. The remote start/stop option is included with this option.

4.8.4 Sequencer Control

Sequencer control capability can be added to the Intellisys® system by using a sequencer interface. This option is available as a field installation kit.

4.8.5 Modulation

On/Off Line control is the most efficient mode of operation for the compressor. For compressed air systems that have a continuous demand near the full capacity of the compressor, modulation control will prevent excessive cycling of the compressor and provide a more constant supply pressure. Modulation control will also prevent excessive cycling if the compressed air system volume is small. An air compressor should never be installed in a compressed air system volume with a ratio of receiver volume (in gallons) to total compressor capacity (in cubic feet per minute) of less than one.

On/Off Line Control

The modulation control system retains all the features of on-line/off-line control but provides for throttling of the compressed air flow to match system demand. The compressor can be set to operate in "ON/OFF LINE" control using the set point procedure even if the compressor has the modulation option. If the compressor is set in the on line/off line control mode, it operates as described in section 4.7.

Modulation Only

The "MODULATION" control mode can be selected during the set point procedure on a compressor that has the modulation option installed. To load, the Intellisys® energizes the load solenoid (1SV) and blowdown solenoid (3SV) as in on line/off line control. The Intellisys® also energizes the modulation solenoids (2SV and 6SV). This connects regulated pressure from the modulator valve (MV) to the air cylinder. The regulated pressure decreases with increasing system pressure near the set point of the modulation valve. This causes the inlet valve to throttle the compressor flow. The modulator valve is factory set such that the compressor will modulate to approximately 60% of rated capacity before the off line pressure is reached. If the system pressure continues to increase, the compressor will unload at the off line pressure setting. If the system pressure falls below the on line set point, the compressor will load in the modulation control mode.

Modulate/ACS Control

In compressors equipped with the modulation option the "MOD/ACS" control mode allows the Intellisys® to select the most appropriate control mode to match system demands. This eliminates the need for manual selection of the control mode to accommodate various compressed air demand cycles.

When operating in the MOD/ACS" control mode, the compressor automatically defaults to the on line/off line control mode. If the compressor completes three load/unload cycles within a three minute time period the Intellisys® determines that there is a high demand for compressed air. The Intellisys® switches to modulation control in an attempt to match the compressed air demand by regulating the flow. The compressor continues to operate in the modulation control mode until the compressor operates unloaded for three minutes. This is an indication that compressed air usage has fallen off and that on/off line is a more appropriate control mode. The Intellisys® changes the control mode to on/off line and continues to operate in this manner until three load/unload cycles occur within three minutes.

Modulate Control Valve Adjustment

Tools Required

- 7/16" open end wrench.
- Pressure Gauge 0-100 PSIG (0-6.9 barg)
- Loctite® PST or equivalent.

The modulator valve is set at the factory to modulate at the compressor's rated pressure. For example a compressor with a 125 psig (8.6 bar) pressure rating will modulate up to 60% capacity when the system pressure is near the default off line setting of 128 psig. (8.8 bar). The following procedure describes the method of setting the modulation valve. The desired pressure should never be more than 3 psig (.2 bar) below the off line pressure entered during the set point routine. For example if the off line pressure is set at 96 psig (6.6 bar), the desired set point pressure should be 93 psig (6.4 bar).

Ensure that the compressor is isolated from the compressed air system by closing the isolation valve and venting pressure from the system.

Ensure that the main power disconnect switch is locked open and tagged.

1. Remove the 1/8" NPT plug from the tee in the control piping and connect a pressure gauge to this port.
2. Reconnect power to the compressor. When display reads "READY TO START," enter the set points routine and set control mode to "MODULATION".
3. Start the compressor and elevate system pressure to desired set point pressure. This pressure must be maintained while adjusting the modulator valve.
4. Loosen the lock nut on the bottom of the modulator valve and turn the adjusting screw to modify the modulation valve set pressure. Turning the screw counterclockwise (as viewed from the top) raises the set point pressure. Turning the screw clockwise lowers the set point pressure.
5. Adjust the screw while maintaining system pressure at the desired value until the output pressure of the modulator valve is 30 psig (2.1 bar). Tighten the locknut.
6. Stop the compressor and lock open the main disconnect. Ensure that all pressure is vented from the system.
7. Remove pressure gauge from modulation valve and re-install 1/8" NPT plug in tee in control piping using Loctite® PST or equivalent to seal threads.

NOTES:

5.0 SCHEDULED PREVENTATIVE MAINTENANCE

5.1 MAINTENANCE SCHEDULE

THE MAINTENANCE SCHEDULE SPECIFIES ALL RECOMMENDED MAINTENANCE REQUIRED TO KEEP THE COMPRESSOR IN GOOD OPERATING CONDITION. **SERVICE AT THE INTERVAL LISTED OR AFTER THAT NUMBER OF RUNNING HOURS, WHICHEVER OCCURS FIRST.**

Action	Part or Item	Running Hours	Time Interval (whichever comes first)					
			1 Week	1 Mo.	3 Mo.	6 Mo.	Yearly	2 Years
Inspect	Coolant level	Weekly	x					
Inspect	Discharge temperature (air)	Weekly	x					
Inspect	Separator element differential	Weekly	x					
Inspect	Air filter Delta P (at full load)	Weekly	x					
Replace	Coolant filter*	150	x (initial change only)					
Check	Temperature sensor	1000			x			
Replace	Food grade coolant (when used)	1000				x		
Inspect	Hoses	1200			x			
Replace	Coolant filter*	2000				x	(subsequent changes)	
Clean	Separator scavenge screen and orifice	4000					x	
Clean	Cooler cores**	4000				x		
Replace	Air filter*	4000				x		
Replace	Separator element*	*See special note.						
Replace	Ultra Coolant*	8000						x
Inspect	Starter contactors	8000					x	
Service	Drive/Fan motor lubrication		See Section 5.10.					

* In very clean operating environments and where inlet filter is changed at the above prescribed intervals.
In extremely dirty environments change coolant, filters, and separator elements more frequently.

** Clean cooler cores if discharge air temperature is excessive or if unit shutdown occurs on high air temperature.

5.2 MAINTENANCE RECORDS

It is very important that you, the owner, keep accurate and detailed records of all maintenance work you, or the Ingersoll-Rand Distributor or Air Center perform on your compressor. This includes but is not limited to coolant filter, separator, inlet air filter and so forth. This information must be kept by you, the owner, should you require warranty service work by your Ingersoll-Rand Distributor or Air Center. Maintenance record sheets are located at the back of this manual.

5.3 MAINTENANCE PROCEDURES

Before starting any maintenance, be certain the following is heeded.

1. Read Safety Instructions.
2. Use correct tools.
3. Have recommended spares on hand.

SPECIAL NOTE:

Replace separator element when the separator differential pressure (ΔP) reaches three times the initial pressure drop or a maximum pressure differential of 12 psi (.8 bar) at full load or if the Intellisys warning CHG SEPR ELEMENT is displayed. See Section 3.6.

5.4 INLET AIR FILTER

The filter should be changed when the filter indicator shows red.

The filter should be changed every 4000 hours and more frequently in dirty environments because coolant, coolant filter, separator element, and airend life are a direct function of how well you maintain and replace the inlet air filter.

To change inlet filter elements, loosen wing nut on top of inlet filter housing. Lift cover up and away to expose element/s.

Carefully remove the old element/s to prevent dirt from entering the inlet valve. Discard old element/s.

Thoroughly clean the element housing and wipe all surfaces.

Install new element/s and inspect to ensure that they have seated properly.

Install top of inlet filter housing.

Inspect the rubber seal on the retainer wing nut and replace seal if required.

Tighten wing nut.

Start machine and run in the load mode to verify filter condition.

5.5 COOLANT FILTER

The coolant filter should be changed after the first 150 hours of operation and every 2000 hours thereafter, or when the coolant is being changed. In dirty operating environments the filter should be changed more frequently.


Use a suitable device and loosen the old element. Use drain pan to catch any leakage during removal. Discard old element.

Wipe the sealing surface of the filter with a clean, lint-free rag to prevent the entry of dirt into the system.

Remove the replacement element from its protective package. Apply a small amount of clean lubricant on the rubber seal and install the element.

Screw element/s on until the seal makes contact with the head of the filter assembly. Tighten approximately one-half turn additional.

Start unit and check for leaks.

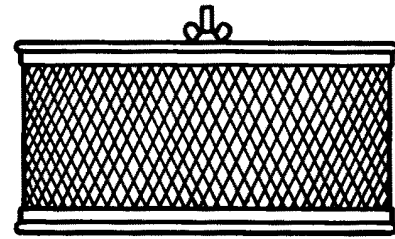


**INLET AIR FILTER
75-100 HP (55-75 kw)
REQUIRES TWO (2) ELEMENTS**

NOTICE

**Improper coolant filter replacement
will cause compressor damage.**

Replace filter element after first 150
hours of operation and every 2000 hours
thereafter or when coolant is changed.

Ingersoll-Rand
Rotary-Recip Compressor Division
Davidson, NC

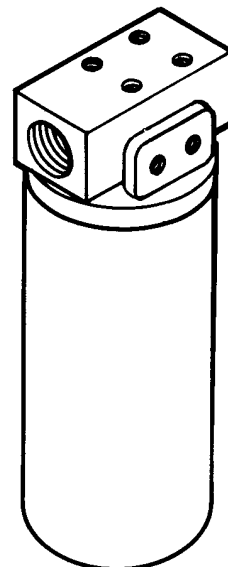

COOLANT FILTER 50-100 HP (37-75 kw)

5.6 COOLANT

- SSR Ultra Coolant (Standard Factory Fill)
- SSR H1-F Food Grade (Optional)

SSR Ultra Coolant is a polyglycol base coolant. Change Ultra Coolant after every 8000 hours or every two years, whichever comes first.

SSR Food Grade Coolant is a polyalphaolefin base coolant. Change after every 1000 hours or every 6 months whichever comes first. Do not operate unit beyond this 1000 hour lubricant change interval, as lubricant degradation will occur.

Items Required

In addition to the tools normally found in any reasonably equipped serviceman's toolbox, the following items should be available at the work site:

- 1) Suitable drain pan and container to hold lubricant drained from unit.
- 2) A quantity of proper lubricant sufficient to refill the compressor.
- 3) A minimum of one replacement coolant filter element of the proper type for the unit to be worked on.

There is a coolant drain hose supplied with each compressor. The drain hose is placed in the starter box when shipped from the factory.

The coolant should be drained soon after the compressor has been shut down. When the coolant is hot, drainage will be more complete and any particles in suspension in the coolant will be carried out with the coolant.

Hot coolant can cause severe injury. Use care when draining separator tank.

To drain the unit, remove plug from drain valve located on the bottom of the separator tank. Install supplied drain hose and fitting assembly in end of drain valve and place end of hose in a suitable pan. Open drain valve to start drainage. After draining is complete, close valve, remove hose and fitting assembly from valve, and store in a suitable location for future use. Replace plug in end of drain valve.

Do not store drain hose in starter box after it has been used to drain the separator tank.

Coolant fill quantity

50 hp (37 kw)	5.0 gallons (19.0 liters)
60 hp (45 kw)	5.0 gallons (19.0 liters)
75/100 hp (55-75 kw)	9.0 gallons (34.2 liters)



5.6 COOLANT (Continued)

After the unit is drained and a new coolant filter element is installed, refill the system with fresh coolant. Bring the receiver level of coolant up to the midpoint of the sight glass. Replace the fill cap. Start the compressor and run it for a short time. The correct coolant level is at the midpoint of the sight glass with the unit running in the 'UNLOADED' mode.

5.7 SEPARATOR TANK SCAVENGE SCREEN/ORIFICE

Tools Required

- Open end wrench
- Pliers

Procedure

The screen/orifice assemblies are similar in appearance to a straight tubing connector and will be located between two pieces of 1/4 inch O.D. scavenge line tubing.


The main body is made from 1/2 inch hexagon shaped steel and the diameter of the orifice and a direction-of-flow arrow is stamped in flat areas of the hexagon.

A removable screen and orifice is located in the exit end of the assembly (See Figure 5.7-1) and will require cleaning as outlined in the Maintenance Schedule, Section 5.1.

To remove the screen/orifice, disconnect the scavenge line tubing from each end. Hold the center section firmly and use a pair of pliers to gently grasp the exit end of the assembly that seals against the scavenge line tubing. Pull the end out of the center section while using care to prevent damage to the screen or sealing surfaces.

Clean and inspect all parts prior to reinstallation.

When the assembly is installed, confirm the direction of flow to be correct. Observe the small arrow stamped in the center section and ensure the direction flow to be from the separator tank to the airend.

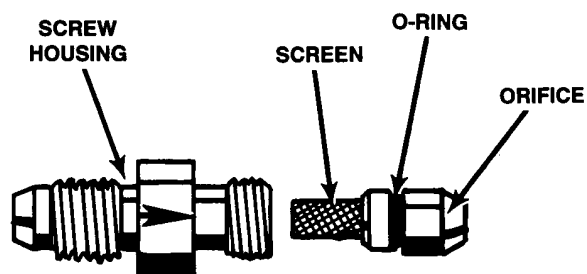

**FIGURE 5.7-1 SEPARATOR TANK SCAVENGE
SCREEN/ORIFICE**

5.8 COOLANT SEPARATOR ELEMENT

To check condition of separator element, run compressor in full load mode and at rated pressure and select "SEPARATOR PRESSURE DROP" in display table. If display says "XX PSI", then no maintenance is required. If warning light is on and display says "CHG SEPR ELEMENT" then the separator should be replaced.

Loosen the fitting that holds the scavenge tube into the tank and withdraw the tube assembly.

Disconnect blowdown valve from elbow in tank cover.

Disconnect tube from fitting on minimum pressure check valve. Loosen tube nut on same tube at aftercooler inlet then swing tube away from tank cover.

Use a suitable wrench and remove the bolts that hold the tank cover in position. Remove cover by lifting up and away.

Carefully lift the separator element up and out of the tank. Discard the faulty element.

Clean the gasket surface on both the tank and its cover. Exercise care to prevent pieces of the old gasket from falling down into the tank.

Check the tank to be absolutely certain that no foreign objects such as rags or tools have been allowed to fall into the tank. Install replacement element down into the tank after checking the new element gaskets for possible damage. Center the element up within the tank.

Place the tank cover in its correct position and install bolts. Tighten the bolts in a cross-pattern (Reference Figure 5.8-1) to prevent over-tightening one side of the cover. An improperly tightened cover will likely result in a leak.

Tank Cover Bolt Torque Values	
5/8 UNC	150 ft. lb.(203 N-M)

Inspect tank scavenge screen and orifice. Clean if necessary following instructions in Section 5.7.

Install scavenge tube down into the tank until the tube just touches the separator element. Tighten fittings.

Install the regulation lines in their original position.

Start unit, check for leaks, place in service.



RECOMMENDED BOLT TIGHTENING CROSS PATTERN

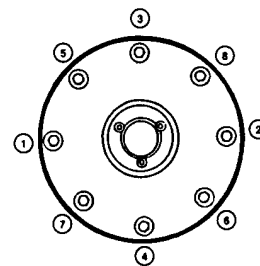


FIGURE 5.8-1

5.9 COOLER CORES: CLEANING

Ensure that the compressor is isolated from the compressed air system by closing the isolation valve and venting pressure from the drip leg.

Ensure that the main power disconnect switch is locked open and tagged. (See Figure 5.9-1).

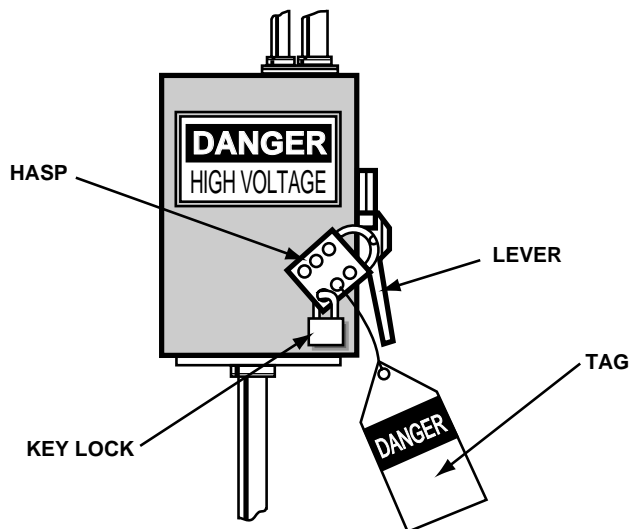


FIGURE 5.9-1 MAIN DISCONNECT LOCKED AND TAGGED

Tools Required

- Screwdriver
- Wrench set
- Air hose equipped with approved O.S.H.A. nozzle.

On units sold outside the U.S.A. consult local codes.

5.9-1 Air Cooled Coolers

Procedure

Visually check the outside of the cooler cores to be certain that a complete outside cleaning of the cooler is required. Frequently, dirt, dust or other foreign material, may only need to be removed with an air hose to remedy the problem.

When the cooler is covered with a combination of oil, grease or other heavy substances that may affect the unit's cooling, then it is recommended that the cooler cores be thoroughly cleaned on the outside.

If it is determined that the compressor operating temperature is higher than normal due to the internal passages of the cooler cores being restricted with deposits or foreign material, then the cooler should be removed for internal cleaning.

Coolant Coolers

Following are instructions for removal and internal cleaning of coolant/aftercooler.

- 1) Remove right side panel.
- 2) Remove 6 screws in right side plenum wall and remove plenum wall.
- 3) Remove 8 screws in left side plenum wall and remove plenum wall.
- 4) Remove hose from aftercooler discharge (right side) and plug hole.
- 5) Disconnect tube from aftercooler inlet (left side). Loosen tube nut on opposite end of tube and rotate tube away. Plug hole in aftercooler.
- 6) Loosen hose nuts 1/4 turn on oil cooler inlet and outlet hoses. This will allow hose fittings to swivel without causing kink in hose.
- 7) Remove 6 screws in cooler support panel to allow cooler to swing out on hinges.
- 8) Cover opening that exposes fan and fan motor to ensure water does not spray onto motors.
- 9) Before cleaning coolers, check to ensure all connections are plugged to prevent contamination of compressor system.



CAUTION

Strong cleaners can harm aluminum cooler parts. Follow cleaner manufacturer's instructions for use.

Wear appropriate safety equipment.

- 10) After cleaning is complete, reassemble in reverse order.
- 11) Replace enclosure panels.

5.9-2 Water Cooled Coolers

Procedure

A periodic inspection and maintenance program should be implemented for water cooled heat exchangers. The following steps should be taken.

1. Inspect filters in system and replace or clean as required.
2. Carefully examine tubes for scale and clean if necessary. If a cleaning solution is used, be sure to wash out all chemicals thoroughly with clean water before returning the compressor to service. After cleaning, examine the cooler for erosion or corrosion.

5.9-2 Water Cooled Coolers (Continued)

Cleaning

The interior tube surfaces can be cleaned by several methods. Flushing a high velocity stream of water through the tubes will remove many forms of deposits. More severe deposits may require running wire brushes or rods through the tubes. Also, rubber plugs can be forced through the tubes if a special air or water gun is available for this procedure.

A qualified cleaning service should be used for the cleaning process. These organizations can evaluate the type of deposit to be removed and supply the appropriate solution and method for a complete cleaning job.

Precautions

When re-installing bonnets to cooler shell, tighten bolts uniformly in a cross-pattern. Overtightening can result in cracking of bonnet.

Cleaning solutions must be compatible with metallurgy of cooler.

Care must be taken to avoid damaging tubes if mechanical cleaning procedure is used.

5.10 MOTOR LUBRICATION

The induction-type squirrel cage motors have antifriction ball or roller bearings front and rear. At periodic intervals they require relubrication.

NOTICE: 50 Hz TEFC motors have sealed bearings that do not require relubrication.

Relubrication Interval
(or 9 months, whichever comes first)


1000 hours.....all 60 Hz TEFC drive motors
2000 hours..... all 60 Hz ODP drive motors
and all fan motors

Relubrication amount

Motor Frame Size	in³	Lubricant Amount		
		cc	oz.	grams
56-145*				
182-215	.5	8	.4	11
254-286	1.0	16	.8	23
324-365	1.5	25	1.2	34
404-449	2.5	40	2.0	57

* No greasing required (permanently lubricated bearings)

Improper lubrication can be a cause of motor bearing failure. The quantity of grease added should be carefully controlled. The smaller motors must be greased with a lesser amount of grease than larger motors.

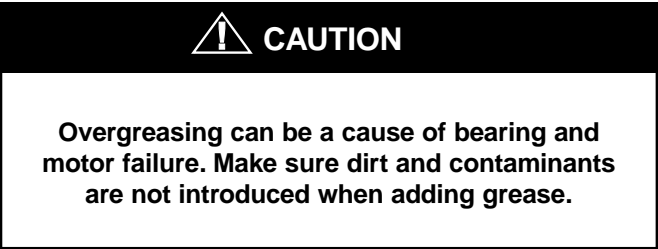

Procedure for relubrication



When regreasing, stop motor. Disconnect power; lock out and tag. Remove outlet plugs (or spring-loaded grease relief plugs if present). The outlet plug may not be accessible on the fan end of some TEFC motors.

5.10 MOTOR LUBRICATION (Continued)

Grease relief along shaft can occur, precluding necessity of removing this plug if inaccessible. The inlet grease gun fittings and outlet plugs (or spring-loaded reliefs) are located at each end of the motor housing. The drive end reliefs protrude out the circumference of the lower portion of the end bell near a flange bolt. The drive end outlet plugs are located just behind the flange in the air intake area at about the 5 or 6 o'clock position.

- 1) Free drain hole of any hard grease (use piece of wire if necessary).
- 2) Use a hand lever type grease gun. Determine in advance the quantity of grease delivered with each stroke of the lever. A graduated cylinder showing cubic centimeters (cc) may be used, or a 35mm film canister can give a close approximation for 2 cubic inches when filled.
- 3) Add the recommended volume of the recommended lubricant. **Do not expect grease to appear at the outlet, but if it does, discontinue greasing at once.**
- 4) Run motor for about 30 minutes before replacing outlet plugs or reliefs. **BE SURE TO SHUT MOTOR DOWN, DISCONNECT POWER, LOCK OUT AND TAG, AND REPLACE THESE DRAIN FITTINGS TO PRECLUDE LOSS OF NEW GREASE AND ENTRANCE OF CONTAMINANTS!**

Recommended Motor Grease


Most motors require:

Mobilith SHC 220.....Mobil

Use the grease as indicated on a special grease information nameplate on the motor. Use of alternative greases can result in shortened motor life due to incompatibility of greases. If there is not a grease nameplate on the motor use:

Chevron Black Pearl #2
(Preferred).....Standard Oil of California

Chevron SRI 2.....Standard Oil of California

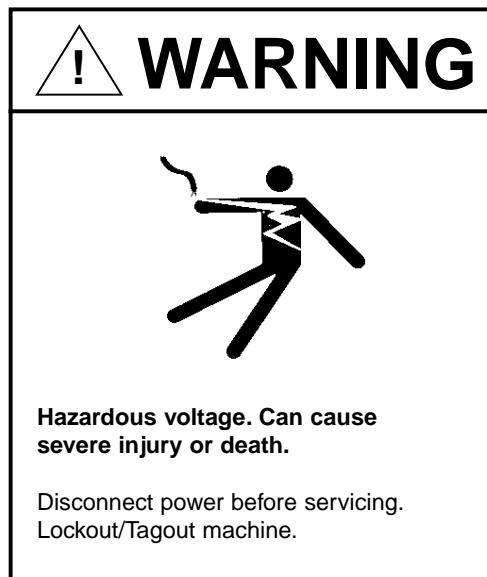

Motor Bearing Maintenance (Stored Units)

To ensure that complete contact is maintained between the motor bearings and the bearing grease on units to be placed in storage for extended intervals, the following motor maintenance procedure should be adhered to:

- 1) Prior to placing a unit in storage, rotate the motor several revolutions by hand in the proper direction of rotation.
- 2) Thereafter, rotate the motor as described in Step 1 at three month intervals until such time as the unit is placed in service.
- 3) If the storage time is to exceed a total of nine (9) months duration, the compressor must be ordered with long term storage option.

5.11 LONG TERM STORAGE

General

The factory, upon special request, prepares compressor units for long term storage. In such cases, a special bulletin is supplied for storage and start-up procedures.

The bulletin provides special procedures for rotation and lubrication of compressors during storage.

Before actual start-up of the compressor, the unit must be drained of coolant containing vapor space inhibitors. Procedure for long term storage start-up is covered in the special bulletin APDD 339.


5.12 COOLANT/LUBRICANT CHANGEOUT

Ingersoll-Rand does not recommend changeout of coolant/lubricants, however, if a coolant/lubricant change cannot be avoided, procedure APDD 106E-87 should be obtained from your Ingersoll-Rand representative.

5.13 INTELLISYS REMOVAL

Ensure that the compressor is isolated from the compressed air system by closing the isolation valve and venting pressure from the drip leg.

Ensure that the main power disconnect switch is locked open and tagged (See Figure 5.13-1).

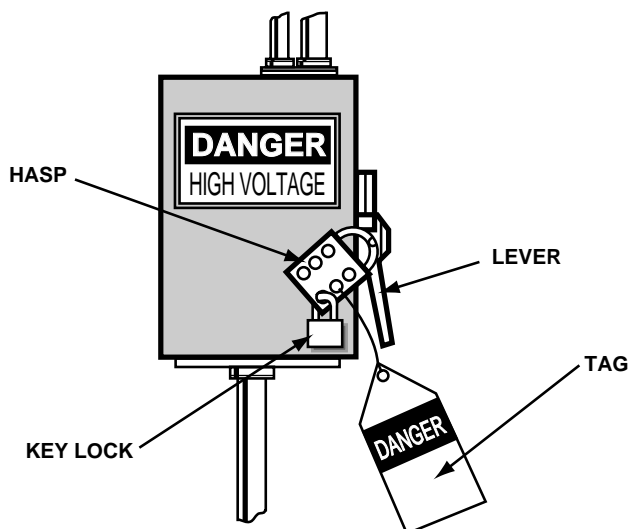

**FIGURE 5.13-1 MAIN DISCONNECT
LOCKED AND TAGGED**

Follow these **precautions to minimize damage** from static electricity. Static can cause severe damage to microcircuits.

- 1) Make the least possible movement to avoid building up static electricity from your clothing or tools.
- 2) Discharge potential static electricity by touching (grounding) yourself to the starter box.
- 3) Handle circuit boards only by their edges.
- 4) Do not place the controller or power supply assembly on any metal surface.
- 5) Leave the replacement parts in their protective bags until ready for installation.

Tools:

Screwdriver Size #1, flathead
3/8 inch hex driver

Before removing any components, open the starter box door and check all wiring for tightness. A loose wire or bad connection may be the cause of problems.

Controller Removal:

- 1) Open the starter box door.
- 2) Remove the five electrical plug-in connectors from the top of the controller.
- 3) Remove (2) mounting rails that attach the Intellisys® Controller at the side of the control box.
- 4) Remove the controller. Remove any option modules which must be installed in the new controller.

5.14 COOLANT HOSES

The flexible hoses that carry coolant to and from the oil cooler may become brittle with age and will require replacement. Have your local Ingersoll-Rand distributor check them every 2 years.

Ensure that the compressor is isolated from the compressed air system by closing the isolation valve and venting pressure from the drip leg.

Ensure that the main power disconnect switch is locked open and tagged.

Removal

Remove enclosure panels.

Drain coolant into a clean container. Cover the container to prevent contamination. If the coolant is contaminated, a new charge of coolant **must** be used.

Hold fitting securely while removing hose.

Installation

Install the new hoses and reassemble the package by reversing the disassembly procedure. Start the compressor and check for leaks.

5.15 AIREND DISCHARGE HOSE

The flexible hose from the airend discharge to separator tank may become brittle with age and require replacement. Check this hose as per the maintenance schedule in Section 5.1.

Removal

Ensure that the compressor is isolated from the compressed air system by closing the isolation valve and venting pressure from the drip leg.

Ensure that the main power disconnect switch is locked and tagged.

50 & 60 HP (37-45 KW) Machines:

Disconnect hose nut from piping at each end of discharge hose and remove. Hold fittings securely while removing hose.

75 & 100 HP (55-75 KW) Machines:

Remove (4) bolts in flange at each end of discharge hose. Retain flanges and bolts for replacement.

6.0 TROUBLE SHOOTING CHART


TROUBLE	CAUSE &/OR DISPLAY	WHAT TO DO
Compressor fails to start.	110/120V control voltage not available. "STARTER FAULT 1SL (2SL)" "EMERGENCY STOP" "MAIN MTR OVER LD" or "FAN MTR OVERLOAD" "PRES SENSOR FAIL" or "TEMP SENSOR FAIL"	<ul style="list-style-type: none"> — Check fuses. Check transformers and wiring connections. — Inspect contactors. — Rotate emergency stop button to disengage, and press "SET" button twice. — Manually reset main or fan motor overload relay, and press "SET" button twice. — Check for defective sensor, bad sensor connection, or broken sensor wires.
Compressor shuts down. NOTE: If a shutdown occurs, press the DISPLAY SELECT button once to activate the L.E.D. display table. Using the adjacent up and down arrows, the values displayed will be those immediately preceding shutdown. Use these values when trouble shooting a problem.	"HIGH AIREND TEMP" "HIGH AIR PRESS" "LOW SUMP PRESS" "PRES SENSOR FAIL" or "TEMP SENSOR FAIL" "CK MOTOR ROTATION" "MAIN MTR OVERLD" "FAN MTR OVERLOAD" "STARTER FAULT 1SL (2SL)"	<ul style="list-style-type: none"> — Insure that installation area has adequate ventilation. — Insure that cooling fan is operating. If not reset circuit breaker inside starter box. — Check coolant level. Add if required. — Cooler cores dirty. Clean coolers. — Check for restricted or malfunctioning blowdown valve or minimum pressure check valve. — Check for air leak from tank or blowdown piping. — Adjust sump pressure. — Check for defective sensor, bad sensor connection, or broken sensor wires. — Interchange any two line connections (L1,L2,L3) at the starter. — Check for loose wires. — Check supply voltage. — Check heater size. — Check for loose wires. — Check supply voltage. — Fan motor overload tripped — Check for dirty cooler cores. — Inspect starter contactors. — Check for loose wires.
Low system air pressure	Compressor running in "Unload" Mode. Controller off-line set point too low. Dirty air filter element. Air leak. Moisture separator trap drain stuck open. Inlet valve not fully open. System demand exceeds compressor delivery.	<ul style="list-style-type: none"> — Press "UNLOAD/LOAD" button. — Press "UNLOAD/STOP" button, set off-line set point at a higher value. — Check filter condition. Replace as required. — Check air system piping. — Inspect and repair. — Inspect and repair. Check control system operation. — Install larger or an additional compressor.

TROUBLE SHOOTING CHART (Continued)

TROUBLE	CAUSE &/OR DISPLAY	WHAT TO DO
High coolant consumption/coolant in air system	<p>Excessive coolant level.</p> <p>Plugged separator element.</p> <p>Separator element leak.</p> <p>Plugged separator scavenge orifice/screen.</p> <p>Compressor operating at low pressure (75 psig / 5 barg) or below.</p> <p>Coolant system leak.</p>	<ul style="list-style-type: none"> — Check level, lower if necessary by draining. — Check separator pressure drop. — Check separator pressure drop. If low, replace element. — Remove and inspect orifice/screen. Clean if required. — Operate at rated pressure. — Reduce system load. — Inspect and repair leaks.
Water in Air System	<p>Defective moisture separator/drain trap</p> <p>Trap drain or drain piping plugged.</p> <p>Aftercooler core dirty.</p> <p>Enclosure panels not in place.</p> <p>Drain line/drip leg incorrectly installed.</p> <p>No refrigerated or desiccant dryer in air system.</p>	<ul style="list-style-type: none"> — Inspect and clean if required. Replace separator/trap if defective. — Inspect and clean. — Inspect and clean. — Install enclosure panels. — Slope drain line away from trap. Install drip leg. — Contact local Ingersoll-Rand Distributor or Air Center.
Excessive noise level	<p>Compressor defective. (Bearing failure or rotor contact.)</p> <p>Enclosure panels not in place.</p> <p>Loose component mounting.</p>	<ul style="list-style-type: none"> — Contact authorized Distributor or Air Center immediately, do not operate unit. — Install enclosure panels. — Inspect and tighten.
Excessive vibration	<p>Loose components</p> <p>Motor or compressor bearing failure.</p> <p>External sources.</p>	<ul style="list-style-type: none"> — Inspect and tighten. — Contact authorized Distributor or Air Center immediately, do not operate unit. — Inspect area for other equipment.
Pressure relief valve opens	<p>Compressor operating over pressure.</p> <p>Defective valve.</p>	<ul style="list-style-type: none"> — Adjust Intellisys set points. — Replace valve.


7.0 REFERENCE DRAWINGS

39899794
REV 01

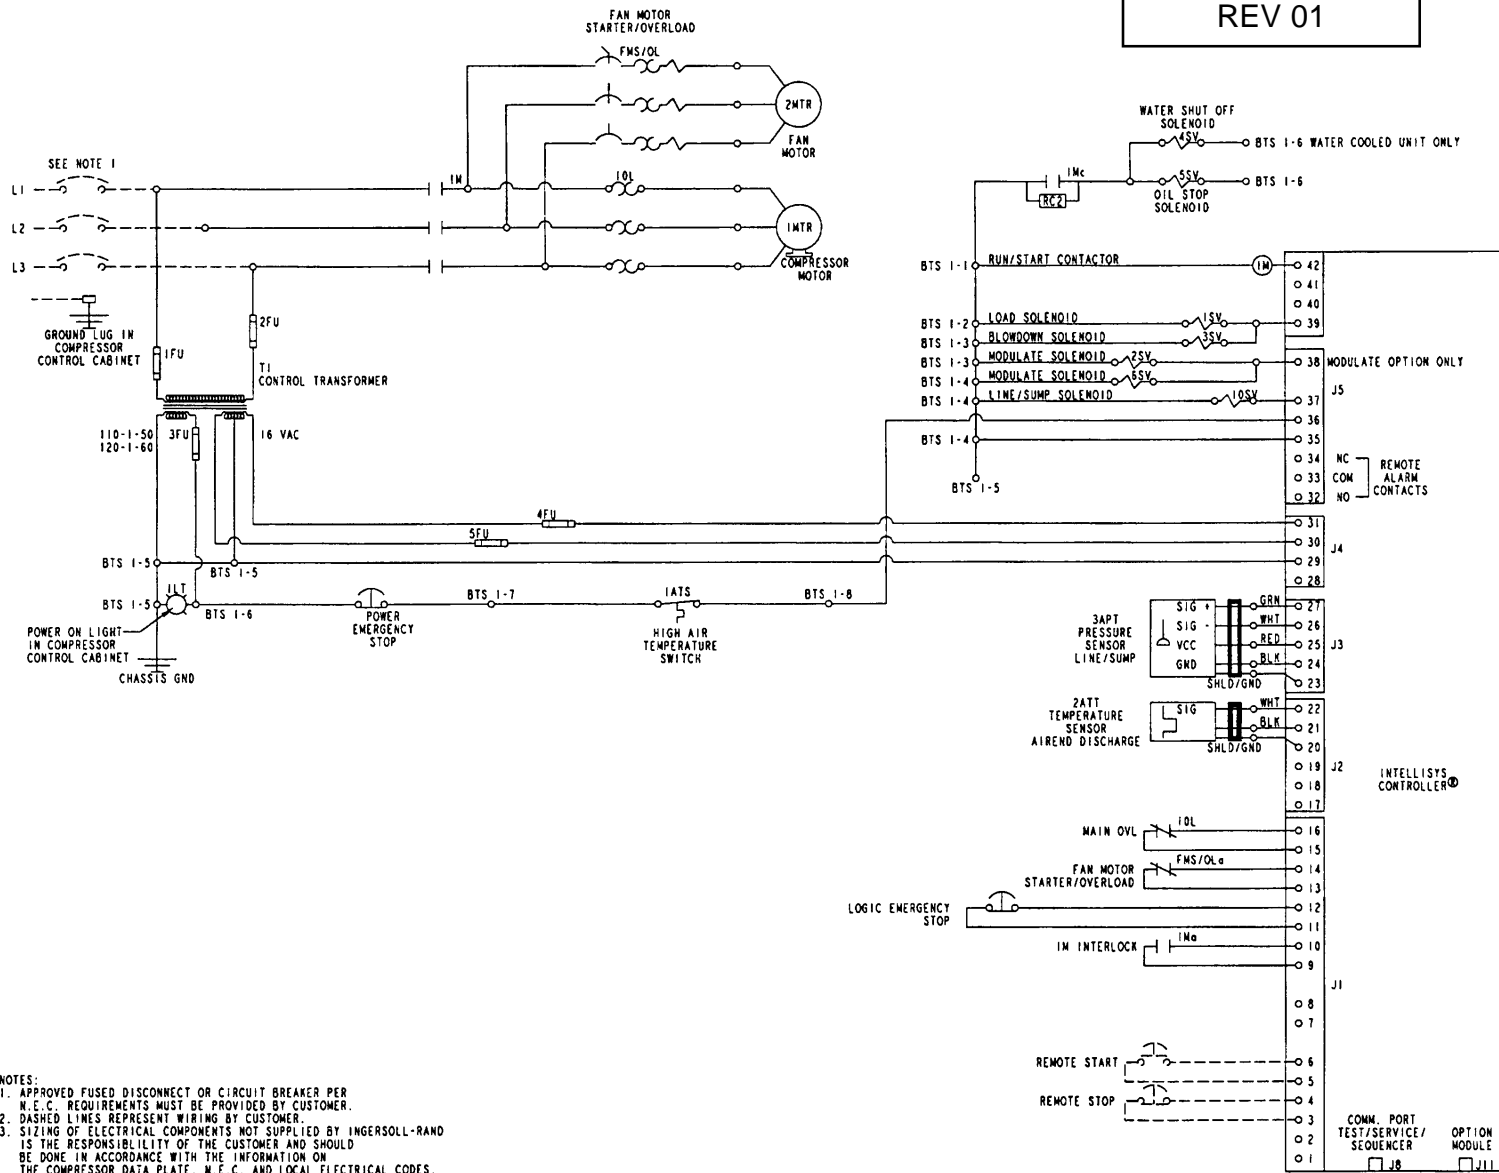


7.1 ELECTRICAL SCHEMATIC-FULL VOLTAGE

39899786
REV 01

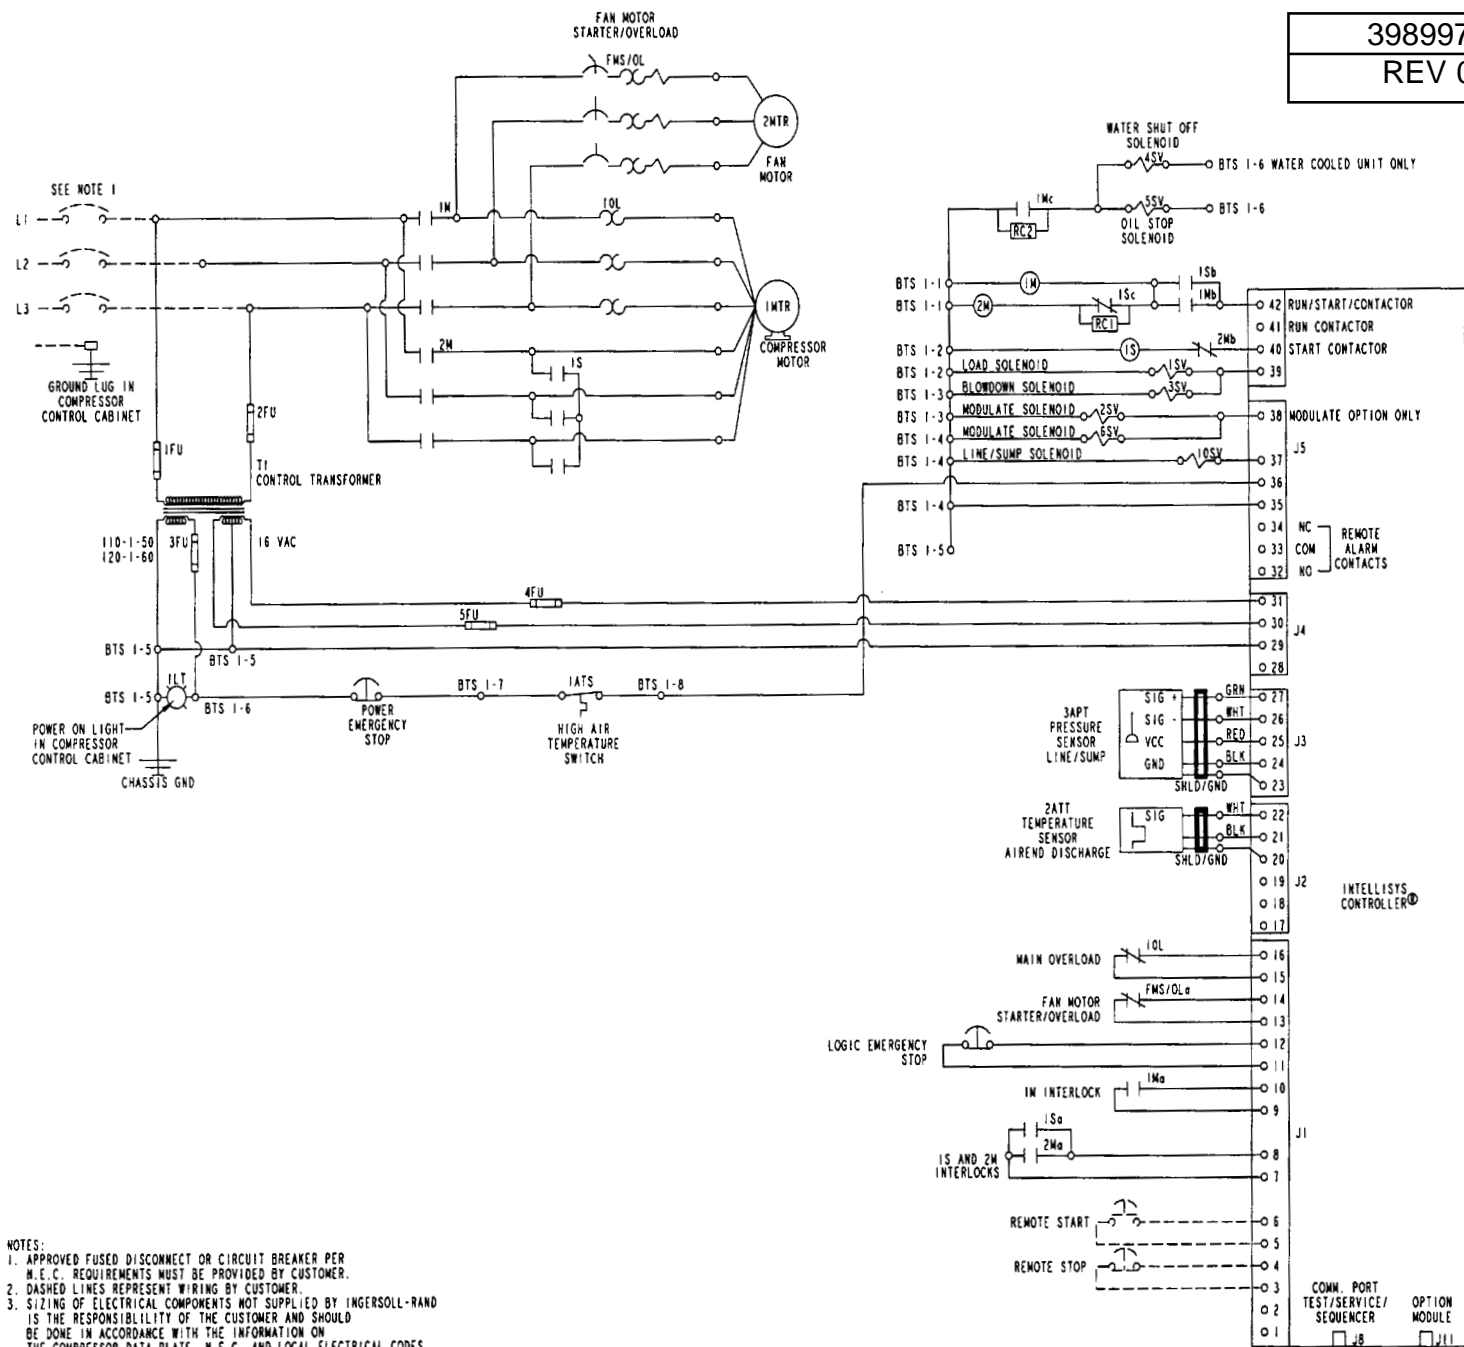

7.2 ELECTRICAL SCHEMATIC-STAR-DELTA

7.3 FOUNDATION PLAN (AIR COOLED)

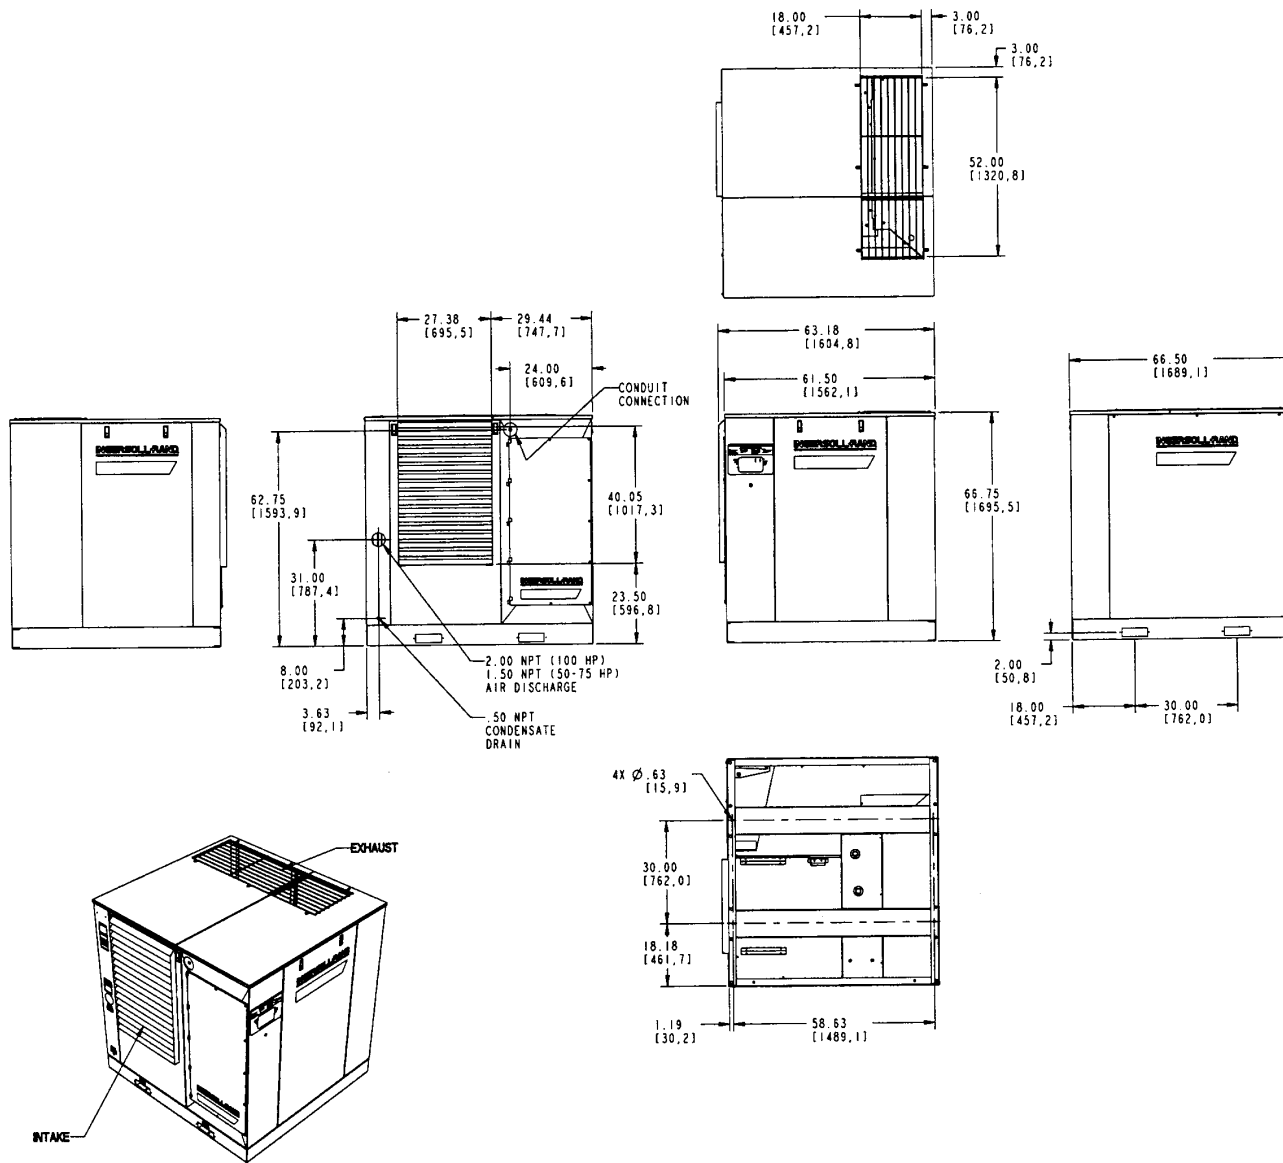

39894472







REV 03

NOTES:


1. WEIGHT (APPROXIMATE) 50 HP - 2,000 LBS. (907 KG)
60 HP - 2,100 LBS. (953 KG)
75 HP - 2,800 LBS. (1,270 KG)
100 HP - 2,900 LBS. (1,315 KG)
2. COOLANT - LUBRICANT FILL QTY (APPROXIMATE)
DRY - 9 GAL (34.2 L)
TANK ONLY - 6.2 GAL (23.5 L)
3. TOLERANCE ON ALL DIMENSIONS +/- .1213 MM
4. ALL DIMENSIONS IN INCHES (MM).
5. 36.00 (914.4) MINIMUM LENGTH OF WIRE FROM POWER INLET OPENING TO STARTER.
6. AIR FLOW - 50-60 HP 6500 CFM (3.1 M3/S).
AIR FLOW - 75-100 HP 7200 CFM (3.4 M3/S).
7. RECOMMENDED CLEARANCE ON THREE SIDES
36.00 (914.4); 42.00 (1067) IN FRONT OF
STARTER DOOR OR MINIMUM AS REQUIRED
BY LATEST NATIONAL ELECTRICAL CODE OR
APPLICABLE LOCAL CODES.
8. EXTERNAL PIPING SHALL NOT EXERT ANY UNRESOLVED
MOMENTS OR FORCES ON UNIT.
9. THERE SHOULD BE NO PLASTIC PIPING
ATTACHED TO THIS UNIT OR USED FOR
ANY LINES DOWNSTREAM.
10. FORKLIFT HOLE COVERS MUST BE INSTALLED
AFTER UNIT IS IN PLACE.
11. FIELD INSTALLED DUCTING TO AND FROM
COMPRESSOR CANNOT ADD MORE THAN 0.25
INCHES OF WATER AIR RESISTANCE.

NOTES:

1. WEIGHT (APPROXIMATE) 50 HP - 2,000 LBS. (907 KG)
60 HP - 2,100 LBS. (953 KG)
75 HP - 2,800 LBS. (1,270 KG)
100 HP - 2,900 LBS. (1,315 KG)
2. COOLANT - LUBRICANT FILL QTY (APPROXIMATE)
DRY - 9 GAL (34.2 L)
TANK ONLY - 6.2 GAL (23.5 L)
3. TOLERANCE ON ALL DIMENSIONS +/- .12(3 MM)
4. ALL DIMENSIONS IN INCHES (MM).
5. 36.00 (914.4) MINIMUM LENGTH OF WIRE FROM POWER INLET OPENING TO STARTER.
6. AIR FLOW - 50-60 HP 6500 CFM (3.1 M3/S).
AIR FLOW - 75-100 HP 7200 CFM (3.4 M3/S).
7. RECOMMENDED CLEARANCE ON THREE SIDES
36.00 (914.4); 42.00 (1067) IN FRONT OF
STARTER DOOR OR MINIMUM AS REQUIRED
BY LATEST NATIONAL ELECTRICAL CODE OR
APPLICABLE LOCAL CODES.
8. EXTERNAL PIPING SHALL NOT EXERT ANY UNRESOLVED
MOMENTS OR FORCES ON UNIT.
9. THERE SHOULD BE NO PLASTIC PIPING
ATTACHED TO THIS UNIT OR USED FOR
ANY LINES DOWNSTREAM.
10. FORKLIFT HOLE COVERS MUST BE INSTALLED
AFTER UNIT IS IN PLACE.
11. FIELD INSTALLED DUCTING TO AND FROM
COMPRESSOR CANNOT ADD MORE THAN 0.25
INCHES OF WATER AIR RESISTANCE.

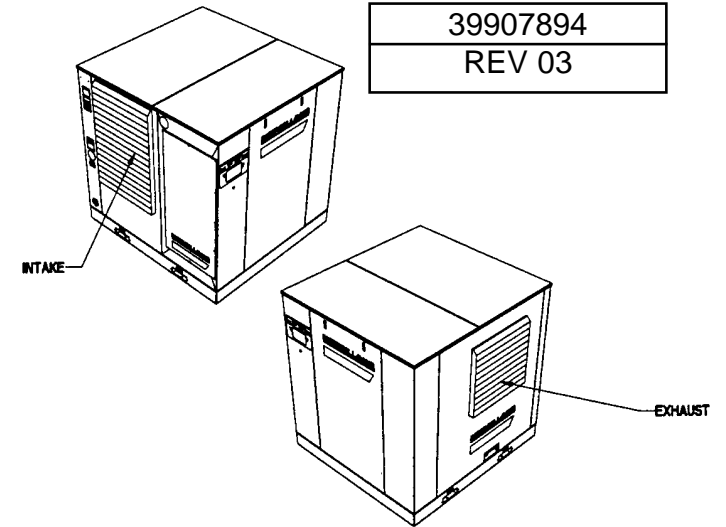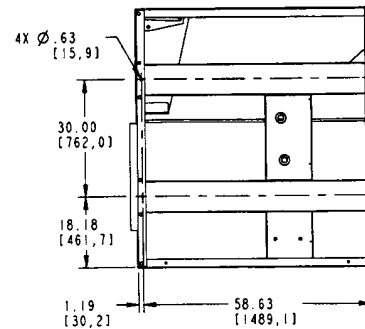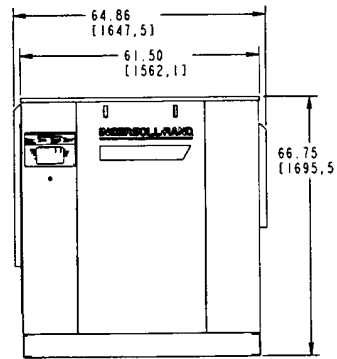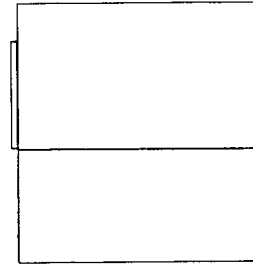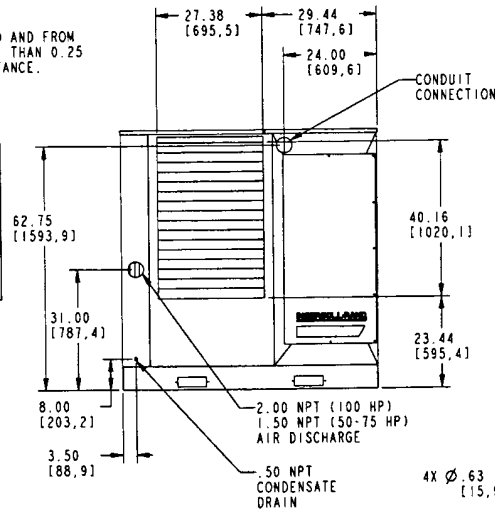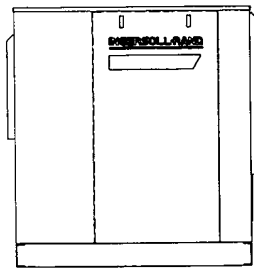

39907894
REV 03

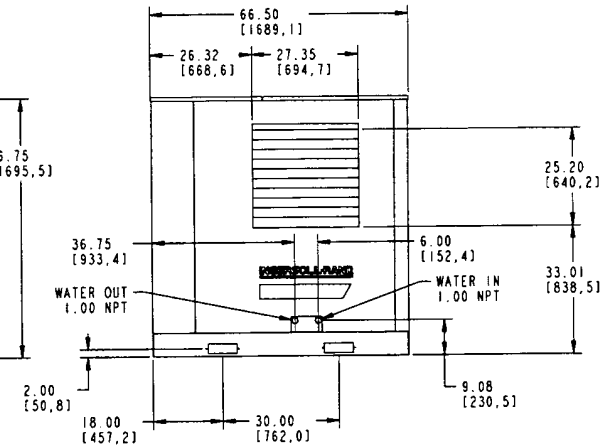


7.4 FOUNDATION PLAN
(WATER COOLED)


7.5 FOUNDATION PLAN - OUTDOOR MOD

NOTES:

1. WEIGHT (APPROXIMATE) 50 HP - 2,000 LBS. (907 KG)
60 HP - 2,100 LBS. (953 KG)
75 HP - 2,800 LBS. (1,270 KG)
100 HP - 2,900 LBS. (1,315 KG)
2. COOLANT - LUBRICANT FILL QTY (APPROXIMATE)
DRY - 9 GAL (34.2 L)
TANK ONLY - 6.2 GAL (23.5 L)
3. TOLERANCE ON ALL DIMENSIONS +/- .12 (3 MM)
4. ALL DIMENSIONS IN INCHES (MM).
5. 36.00 (914.4) MINIMUM LENGTH OF WIRE FROM POWER INLET OPENING TO STARTER.
6. AIR FLOW - 50-60 HP 6500 CFM (3.1 M³/S).
AIR FLOW - 75-100 HP 7200 CFM (3.4 M³/S).
7. RECOMMENDED CLEARANCE ON THREE SIDES
36.00 (914.4); 42.00 (1067) IN FRONT OF
STARTER DOOR OR MINIMUM AS REQUIRED
BY LATEST NATIONAL ELECTRICAL CODE OR
APPLICABLE LOCAL CODES.
8. EXTERNAL PIPING SHALL NOT EXERT ANY UNRESOLVED
MOMENTS OR FORCES ON UNIT.
9. THERE SHOULD BE NO PLASTIC PIPING
ATTACHED TO THIS UNIT OR USED FOR
ANY LINES DOWNSTREAM.
10. FORKLIFT HOLE COVERS MUST BE INSTALLED
AFTER UNIT IS IN PLACE.
11. FIELD INSTALLED DUCTING TO AND FROM
COMPRESSOR CANNOT ADD MORE THAN 0.25
INCHES OF WATER AIR RESISTANCE.

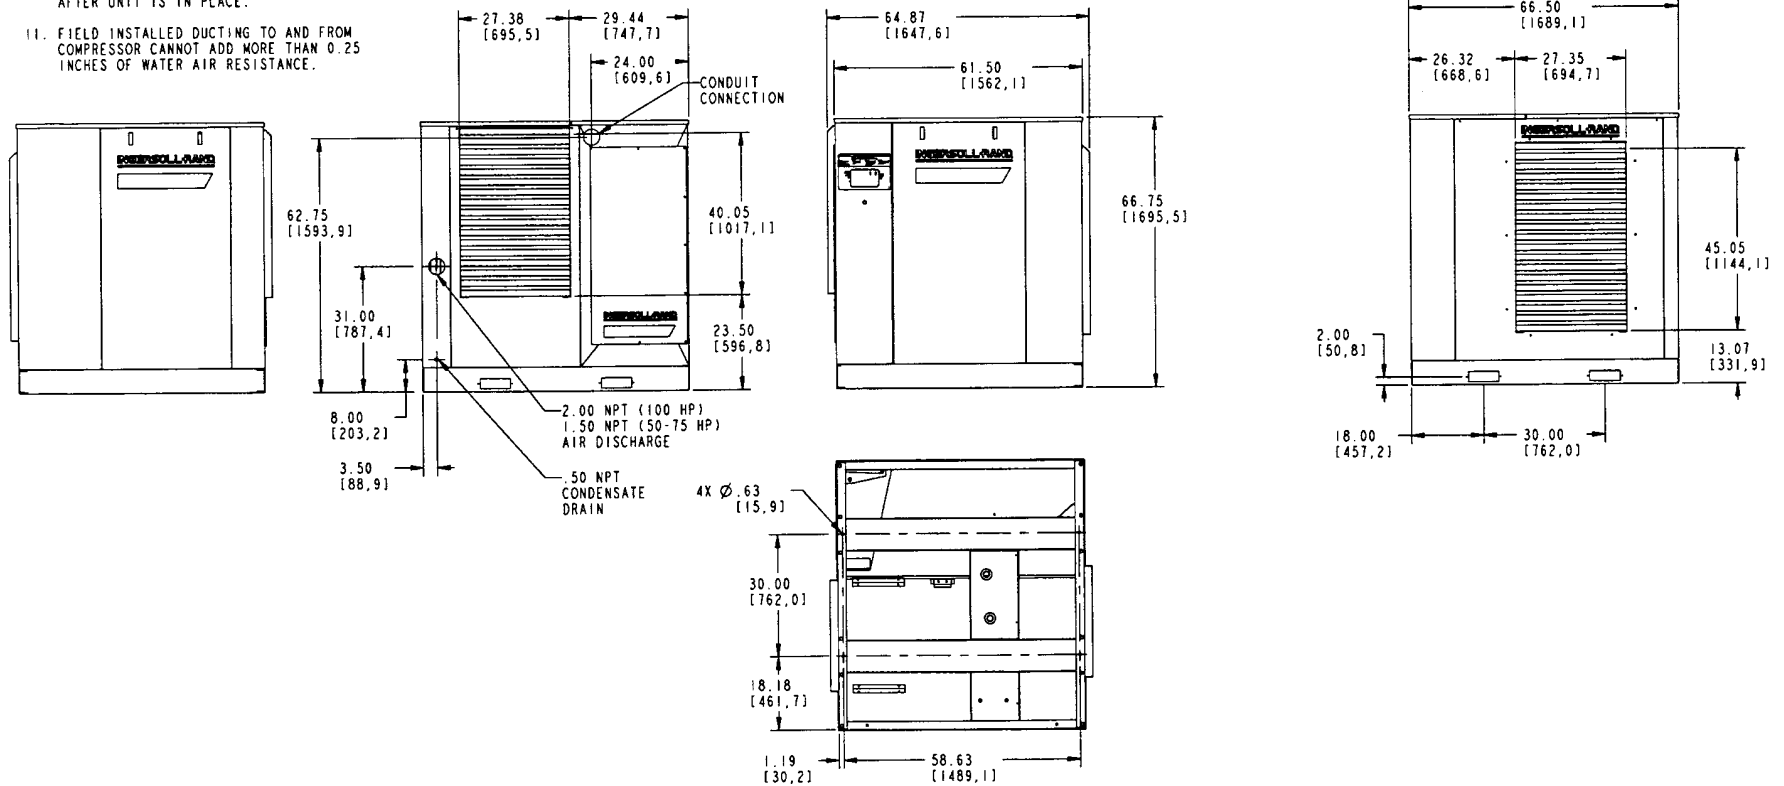


39907886
REV 03

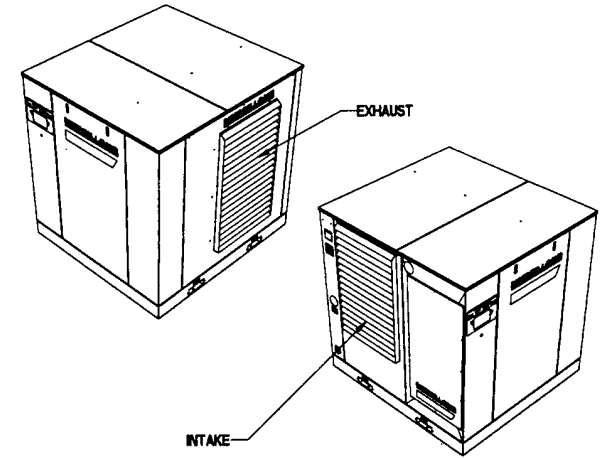

REV 01

ABBR	DESCRIPTION
A/E	AIREND
ST	SEPARATOR TANK
STE	SEPARATOR TANK ELEMENT
AF	INLET AIR FILTER
BFV	AIR INLET CONTROL VALVE
OCV	DISCHARGE CHECK VALVE
MPCV	MINIMUM PRESSURE CHECK VALVE
RV	SEPARATOR TANK RELIEF VALVE
CF	COOLANT FILTER
TCV	THERMOSTATIC CONTROL VALVE
DV	COOLANT DRAIN VALVE
LSV	LOAD SOLENOID VALVE
2SV	MODULATION SOLENOID VALVE(OPTIONAL)
3SV	BLOWDOWN SOLENOID VALVE
5SV	COOLANT STOP SOLENOID VALVE
6SV	MODULATION SOLENOID VALVE (OPTIONAL)
10SV	LINE/SUMP SOLENOID VALVE
CLR	COOLANT COOLER
AFCTCL	AFTERCOOLER
MS	MOISTURE SEPARATOR
SSO	SEPARATOR TANK SCAVENGE ORIFICE
3APT	LINE/SUMP PRESSURE TRANSDUCER
2ATT	AIREND DISCHARGE TEMPERATURE SENSOR
IATS	HIGH AIR TEMPERATURE SWITCH
MV	MODULATION VALVE(OPTIONAL)
SHV	SHUTTLE VALVE (OPTIONAL)
CYL	PNEUMATIC CYLINDER
IND	MECHANICAL AIR FILTER INDICATOR
CT	CONDENSATE TRAP
SSFLT	ST SCAVENGE SCREEN AND ORIFICE

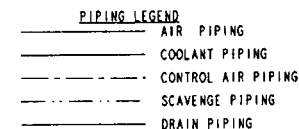


1. FOR CUSTOMER CONNECTION SIZES AND LOCATIONS
SEE FOUNDATION PLAN OF UNIT.
2. COMPONENTS INSIDE DOUBLE LINES ARE FOR
MODULATION ONLY. REMOVE LINE BETWEEN POINTS A1-A1
AND CONNECTS POINTS A TO A1 FOR MODULATION.

7.6 BASIC FLOW SCHEMATIC - AIR COOLED

7.7 BASIC FLOW SCHEMATIC - WATER COOLED

LEGEND

ABBR	DESCRIPTION																																																		
A/E	AIR/END																																																		
ST	SEPARATOR TANK																																																		
STE	SEPARATOR TANK ELEMENT																																																		
AF	INLET AIR FILTER																																																		
BFV	AIR INLET CONTROL VALVE																																																		
DCV	DISCHARGE CHECK VALVE <tr> <td>MPCV</td><td>MINIMUM PRESSURE CHECK VALVE</td></tr> <tr> <td>RV</td><td>SEPARATOR TANK RELIEF VALVE</td></tr> <tr> <td>CF</td><td>COOLANT FILTER</td></tr> <tr> <td>TCV</td><td>THERMOSTATIC CONTROL VALVE</td></tr> <tr> <td>DV</td><td>COOLANT DRAIN VALVE</td></tr> <tr> <td>1SV</td><td>LOAD SOLENOID VALVE</td></tr> <tr> <td>2SV</td><td>MODULATION SOLENOID VALVE(OPTIONAL)</td></tr> <tr> <td>3SV</td><td>BLOWDOWN SOLENOID VALVE</td></tr> <tr> <td>4SV</td><td>WATER SHUT OFF SOLENOID VALVE</td></tr> <tr> <td>5SV</td><td>COOLANT STOP SOLENOID VALVE</td></tr> <tr> <td>6SV</td><td>MODULATION SOLENOID VALVE (OPTIONAL)</td></tr> <tr> <td>10SV</td><td>LINE/SUMP SOLENOID VALVE</td></tr> <tr> <td>CLR</td><td>COOLANT COOLER</td></tr> <tr> <td>AFTCLR</td><td>AFTERCOOLER</td></tr> <tr> <td>MS</td><td>MOISTURE SEPARATOR</td></tr> <tr> <td>SSO</td><td>SEPARATOR TANK SCAVENGE ORIFICE</td></tr> <tr> <td>3APT</td><td>LINE/SUMP PRESSURE TRANSDUCER</td></tr> <tr> <td>2ATT</td><td>AIR/END DISCHARGE TEMPERATURE SENSOR</td></tr> <tr> <td>IATS</td><td>HIGH AIR TEMPERATURE SWITCH</td></tr> <tr> <td>MV</td><td>MODULATION VALVE(OPTIONAL)</td></tr> <tr> <td>SHV</td><td>SHUTTLE VALVE (OPTIONAL)</td></tr> <tr> <td>CYL</td><td>PNEUMATIC CYLINDER</td></tr> <tr> <td>IND</td><td>MECHANICAL AIR FILTER INDICATOR</td></tr> <tr> <td>CT</td><td>CONDENSATE TRAP</td></tr> <tr> <td>SSFLT</td><td>ST SCAVENGE SCREEN AND ORIFICE</td></tr>	MPCV	MINIMUM PRESSURE CHECK VALVE	RV	SEPARATOR TANK RELIEF VALVE	CF	COOLANT FILTER	TCV	THERMOSTATIC CONTROL VALVE	DV	COOLANT DRAIN VALVE	1SV	LOAD SOLENOID VALVE	2SV	MODULATION SOLENOID VALVE(OPTIONAL)	3SV	BLOWDOWN SOLENOID VALVE	4SV	WATER SHUT OFF SOLENOID VALVE	5SV	COOLANT STOP SOLENOID VALVE	6SV	MODULATION SOLENOID VALVE (OPTIONAL)	10SV	LINE/SUMP SOLENOID VALVE	CLR	COOLANT COOLER	AFTCLR	AFTERCOOLER	MS	MOISTURE SEPARATOR	SSO	SEPARATOR TANK SCAVENGE ORIFICE	3APT	LINE/SUMP PRESSURE TRANSDUCER	2ATT	AIR/END DISCHARGE TEMPERATURE SENSOR	IATS	HIGH AIR TEMPERATURE SWITCH	MV	MODULATION VALVE(OPTIONAL)	SHV	SHUTTLE VALVE (OPTIONAL)	CYL	PNEUMATIC CYLINDER	IND	MECHANICAL AIR FILTER INDICATOR	CT	CONDENSATE TRAP	SSFLT	ST SCAVENGE SCREEN AND ORIFICE
MPCV	MINIMUM PRESSURE CHECK VALVE																																																		
RV	SEPARATOR TANK RELIEF VALVE																																																		
CF	COOLANT FILTER																																																		
TCV	THERMOSTATIC CONTROL VALVE																																																		
DV	COOLANT DRAIN VALVE																																																		
1SV	LOAD SOLENOID VALVE																																																		
2SV	MODULATION SOLENOID VALVE(OPTIONAL)																																																		
3SV	BLOWDOWN SOLENOID VALVE																																																		
4SV	WATER SHUT OFF SOLENOID VALVE																																																		
5SV	COOLANT STOP SOLENOID VALVE																																																		
6SV	MODULATION SOLENOID VALVE (OPTIONAL)																																																		
10SV	LINE/SUMP SOLENOID VALVE																																																		
CLR	COOLANT COOLER																																																		
AFTCLR	AFTERCOOLER																																																		
MS	MOISTURE SEPARATOR																																																		
SSO	SEPARATOR TANK SCAVENGE ORIFICE																																																		
3APT	LINE/SUMP PRESSURE TRANSDUCER																																																		
2ATT	AIR/END DISCHARGE TEMPERATURE SENSOR																																																		
IATS	HIGH AIR TEMPERATURE SWITCH																																																		
MV	MODULATION VALVE(OPTIONAL)																																																		
SHV	SHUTTLE VALVE (OPTIONAL)																																																		
CYL	PNEUMATIC CYLINDER																																																		
IND	MECHANICAL AIR FILTER INDICATOR																																																		
CT	CONDENSATE TRAP																																																		
SSFLT	ST SCAVENGE SCREEN AND ORIFICE																																																		

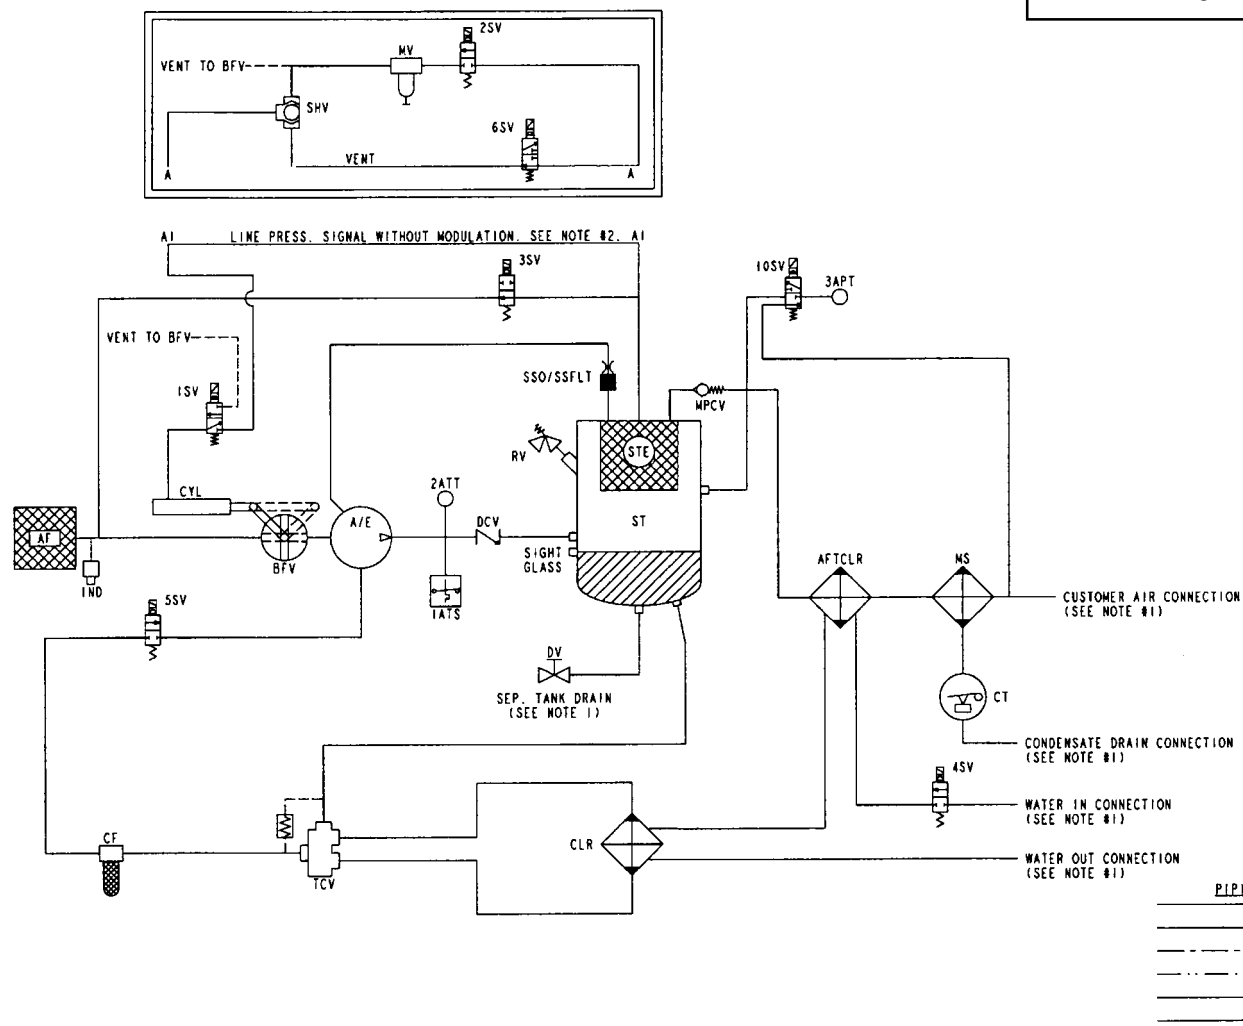


NOTES:

- FOR CUSTOMER CONNECTION SIZES AND LOCATIONS SEE FOUNDATION PLAN OF UNIT.
- COMPONENTS INSIDE DOUBLE LINES ARE FOR MODULATION ONLY. REMOVE LINE BETWEEN POINTS A1-A1 AND CONNECTS POINTS A TO A1 FOR MODULATION.

39899836

REV 01

TYPICAL SYSTEM FLOW DIAGRAM

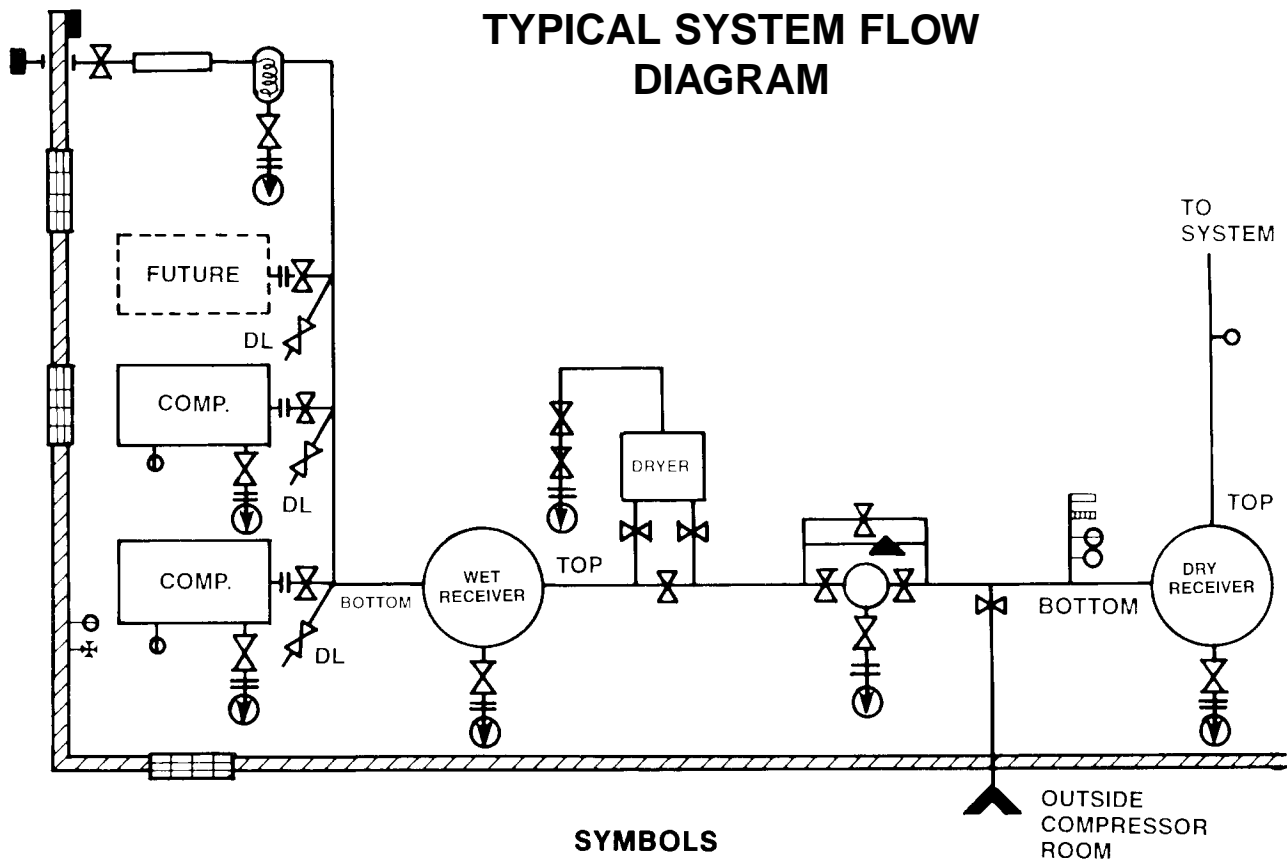


SYMBOLS

	GLADHAND	Emergency Standby Air Hook Up. Complete with Necessary Fitting for Portable or IR Rental Air Unit from Local IR Distributor
	VALVE	Water, Or Ball Type Valve
	UNION	Aids in Disconnecting Compressor from the System
	PRESSURE GAUGE	
	THERMOMETER	
	DL	DRIP LEG
	MANOMETER	
	DIFFERENTIAL PRESSURE INDICATOR	
	I-R AUTOMATIC DRAIN VALVE	
	FALSE LOADER	Blows off Air Outside of Compressor Room
	SYSTEM INSTRUMENTATION INCLUDES: Nephelometer; Hygrometer; Pressure; Temperature	
	VENTILATION	Motorized Louvers, Exhaust Fans
	AFTERCOOLER/SEPARATOR, ISOLATION VALVE, UNION, STRAINER AND TRAP	


7.8 TYPICAL SYSTEM FLOW DIAGRAMS

REMOTE INLET FILTER AND PIPING

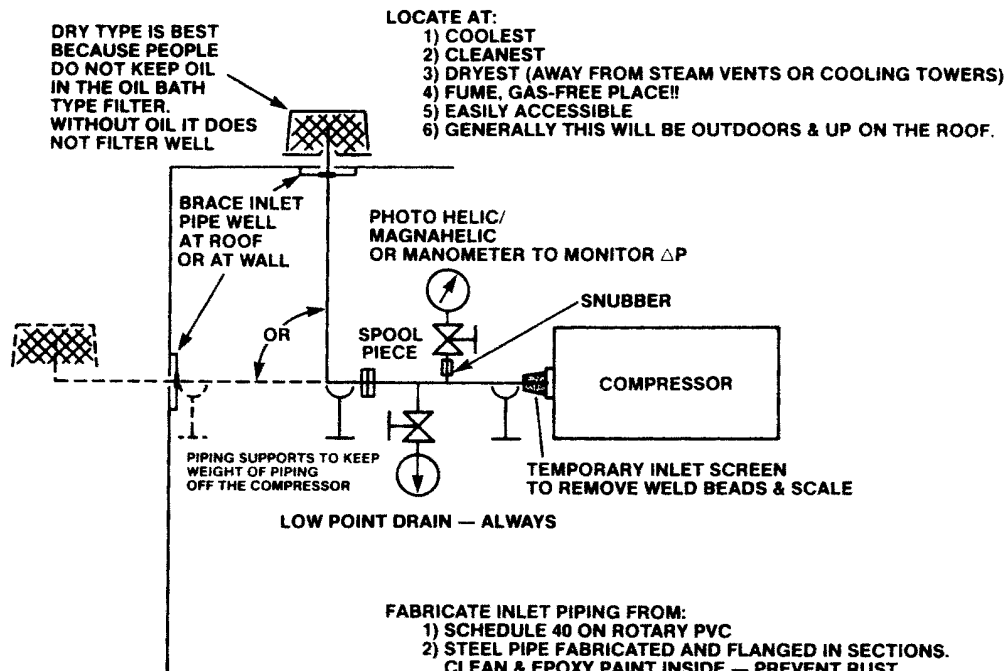


FABRICATE INLET PIPING FROM:

- 1) SCHEDULE 40 ON ROTARY PVC
- 2) STEEL PIPE FABRICATED AND FLANGED IN SECTIONS. CLEAN & EPOXY PAINT INSIDE — PREVENT RUST
- 3) STAINLESS STEEL
- 4) ALUMINUM
- 5) ALWAYS CLEAN INTAKE PIPE THOROUGHLY (WELD BEADS, SCALE, RUST, DIRT, ETC.)

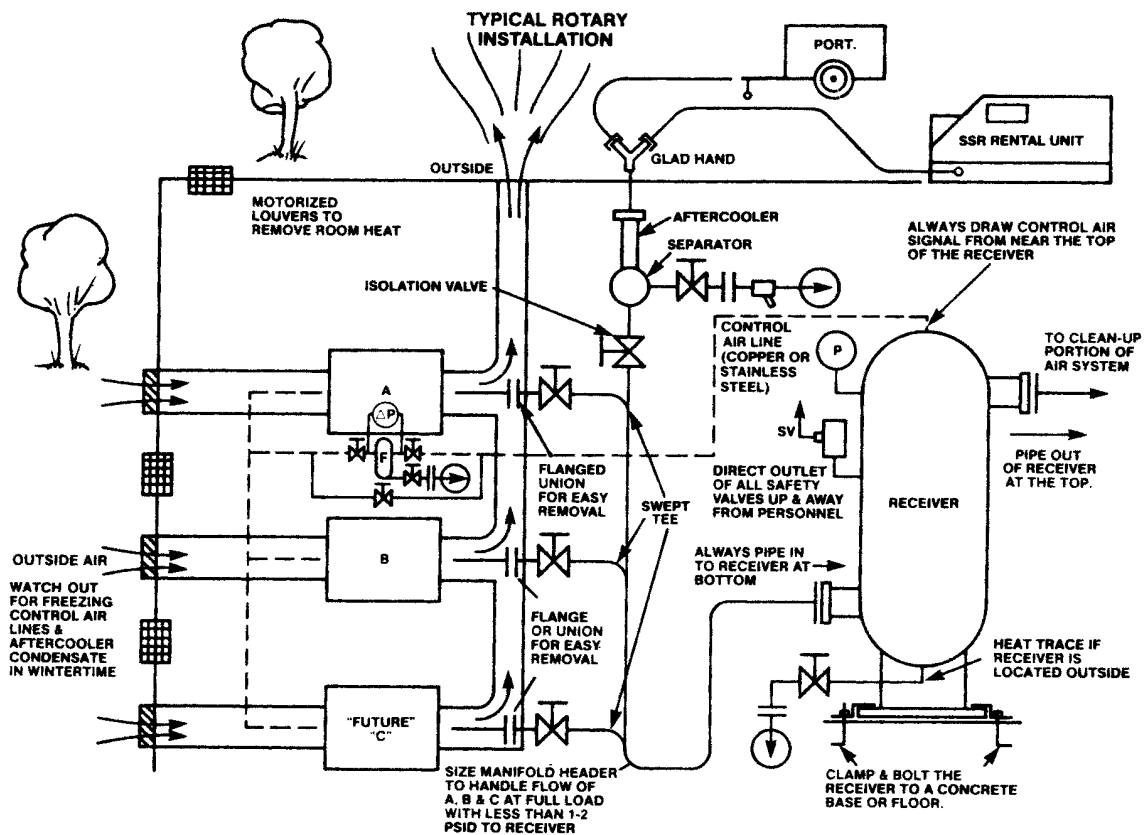


7.8 TYPICAL SYSTEM FLOW DIAGRAMS

RECEIVER AND NLM CLEANUP PIPING

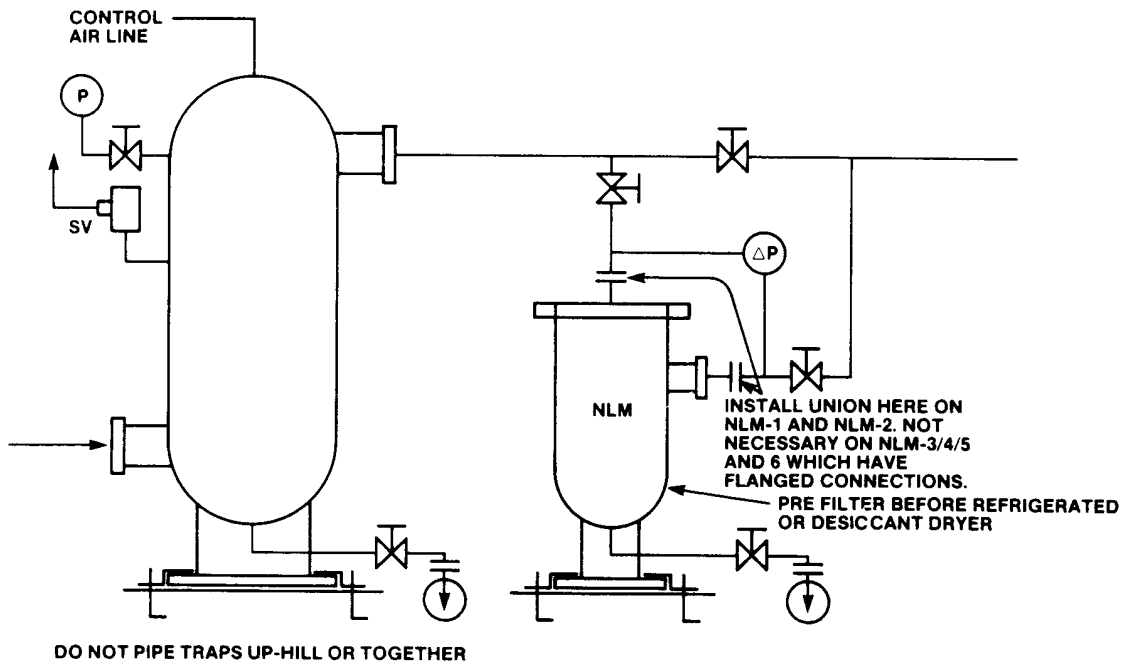


PRE-FILTER & DRYER WITH BLOCK & BYPASS

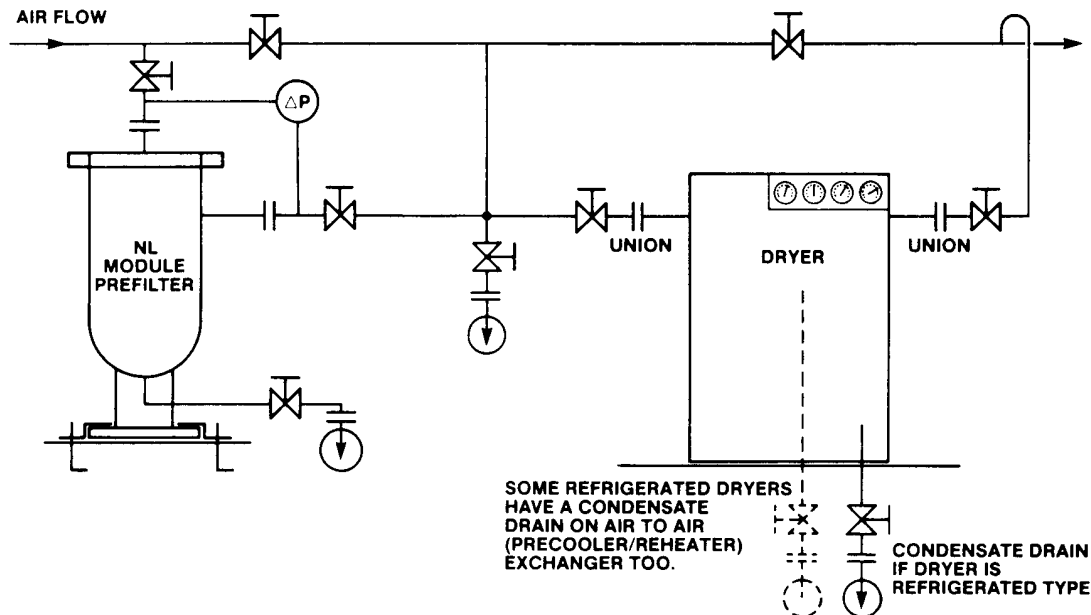


7.8 TYPICAL SYSTEM FLOW DIAGRAMS


DRYER WITH POLISHING (NLM OR IR C SERIES) OR PARTICULATE IR P SERIES (FOR DESICCANT DRYERS)

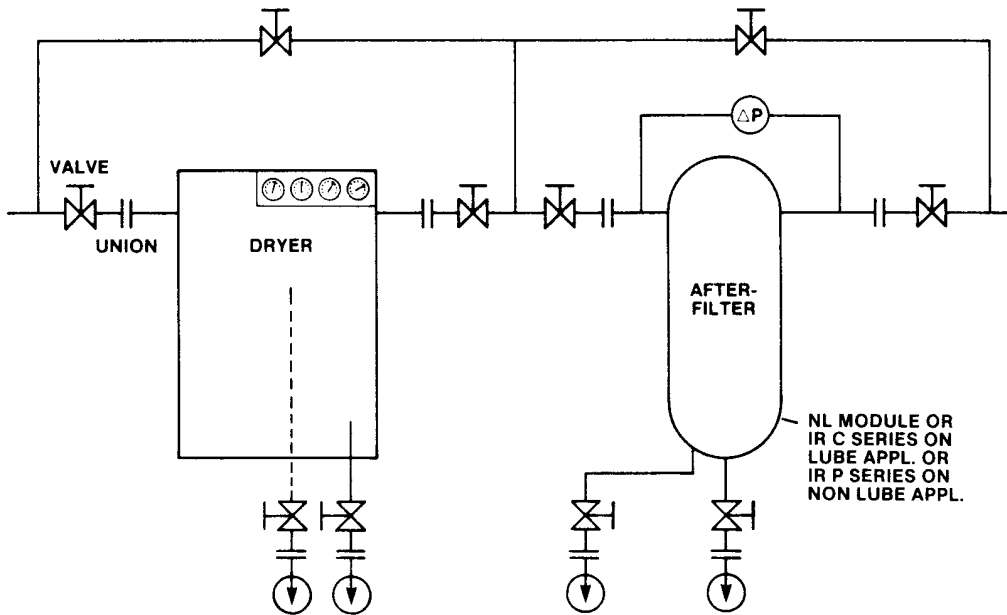

DRY RECEIVER AND MONITORING DEVICES ON AIR QUALITY

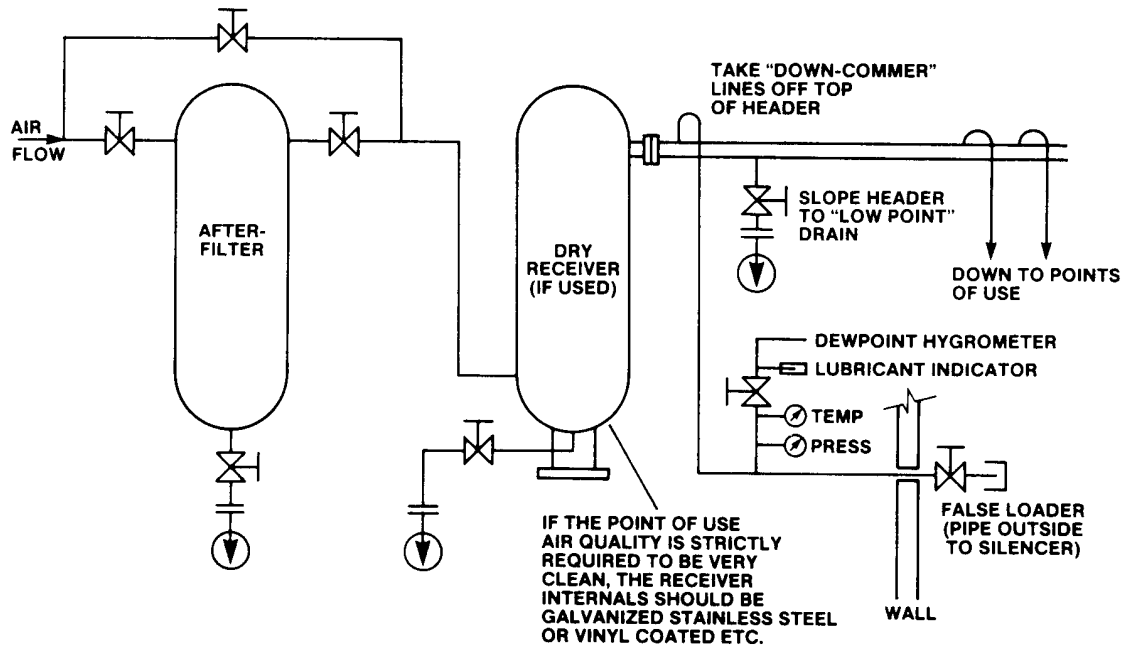

7.8 TYPICAL SYSTEM FLOW DIAGRAMS

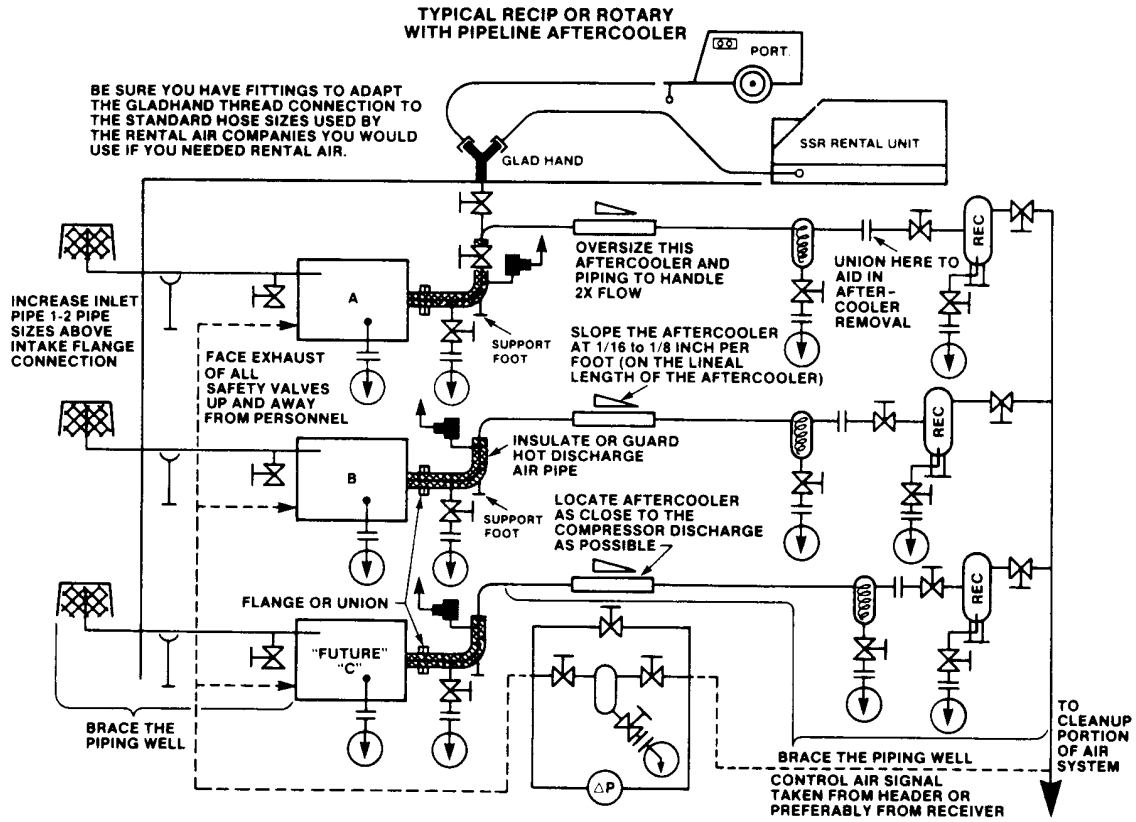

7.8 TYPICAL SYSTEM FLOW DIAGRAMS

8.0 WATER QUALITY RECOMMENDATIONS

Water quality is often overlooked when the cooling system of a water cooled air compressor is examined. Water quality determines how effective the heat transfer rate, as well as the flow rate will remain during the operation life of the unit. It should be noted that the quality of water used in any cooling system does not remain constant during the operation of the system. The water makeup is affected by evaporation, corrosion, chemical and temperature changes, aeration, scale, and biological formations. Most problems in a cooling system show up first in a reduction in the heat transfer rate, then in a reduced flow rate, and finally with damage to the system.

There are many constituents in the water system that must be balanced to have a good stable system. The following is a list of the major components that should be monitored:

SCALE

Scale formation inhibits effective heat transfer, yet it does help prevent corrosion. Therefore, a thin uniform coating of calcium carbonate is desired on the inner surfaces.

Perhaps the largest contributor to scale formation is the precipitation of calcium carbonate out of the water. This is dependent on temperature and pH. The higher the pH value the greater the chance of scale formation. Scale can be controlled with water treatment.

CORROSION

In contrast to scale formation is the problem of corrosion. Chlorides cause problems because of their size and conductivity. Low pH levels promote corrosion, as well as high levels of dissolved oxygen.

FOULING

Biological and organic substances (slime) can also cause problems, but in elevated temperature environments such as cooling processes, they are not major concerns. If they create problems with clogging, commercial shock treatments are available.

To ensure good operation life and performance of the compressor cooling system, the recommended acceptable ranges for different water constituents are included below:

<u>PARAMETER</u>	<u>CONCENTRATION</u>	<u>FREQUENCY OF ANALYSIS</u>
Corrosivity (hardness, pH, total dissolved solids, temperature at inlet, alkalinity)	Langelier Index 0 to 1	Monthly (if stable for 3 to 4 months, analyze quarterly)
Iron	< 2 ppm	Monthly
Sulfate	< 50 ppm	Monthly
Chloride	< 50 ppm	Monthly
Nitrate	< 2 ppm	Monthly
Silica	< 100 ppm	Monthly
Dissolved oxygen	0 ppm (as low as possible)	Daily (if stable, analyze weekly)
Oil and grease	< 5 ppm	Monthly
Ammonia	< 1 ppm	Monthly

Recommended equipment for on-site analysis includes a thermometer, pH meter, and dissolved oxygen meter. Dissolved oxygen and temperature must be measured on-site and it is recommended that pH be measured on-site. All other analyses should be performed by a professional water quality analyst. The Langelier Index (LI) is calculated using the following equation and the tables found on the following pages.

$$LI = pH - (9.30 + \text{Total Dissolved Solids chart value} + \text{Temperature chart value}) + \text{Hardness chart value} + \text{Alkalinity chart value}$$

The LI is zero when the water is in chemical balance. If the LI is greater than zero, there is a tendency to form scale. If the LI is less than zero, the water tends to be corrosive.

Dissolved oxygen may be controlled in closed cooling towers. Several types of treatments are commercially available to remove dissolved oxygen. For open cooling towers, dissolved oxygen is not an easily controlled parameter. Also, a filtration system is recommended for the water going into the air compressor when using an open cooling tower.

It should be noted that Ingersoll-Rand's guidelines and recommendations should be used in evaluating the water systems and the problems that may occur in the normal operation of our air compressors. If water problems persist or are not covered above, you should consult a professional.

LANGELIER INDEX CHART VALUES

Total dissolved solids (ppm)

TOTAL SOLIDS (PPM)	50	.07
	75	.08
	100	.10
	150	.11
	200	.13
	300	.14
	400	.16
	600	.18
	800	.19
	1000	.20

Temperature (°F)

TENS	UNITS				
	0	2	4	6	8
	30	2.60	2.67	2.54	2.81
	40	2.48	2.45	2.43	2.40
	50	2.34	2.31	2.28	2.25
	60	2.20	2.17	2.14	2.11
	70	2.06	2.04	2.03	2.00
	80	1.95	1.92	1.90	1.88
	90	1.84	1.82	1.80	1.78
	100	1.74	1.72	1.71	1.09
110	1.05	1.64	1.62	1.60	
120	1.67	1.63	1.53	1.51	
130	1.48	1.46	1.44	1.43	
140	1.40	1.38	1.37	1.35	
150	1.32	1.31	1.29	1.28	
160	1.26	1.24	1.23	1.22	
170	1.19	1.18	1.17	1.10	

Hardness (ppm)

TENS	UNITS									
	0	1	2	3	4	5	6	7	8	9
	0			0.08	0.20	0.30	0.38	0.43	0.51	0.56
	10	0.60	0.64	0.68	0.72	0.73	0.78	0.81	0.83	0.86
	20	0.90	0.92	0.94	0.96	0.98	1.00	1.02	1.03	1.05
	30	1.08	1.09	1.11	1.12	1.13	1.15	1.16	1.17	1.18
	40	1.20	1.21	1.23	1.24	1.25	1.26	1.26	1.27	1.28
	50	1.30	1.31	1.32	1.33	1.34	1.34	1.35	1.36	1.37
	60	1.38	1.39	1.39	1.40	1.41	1.42	1.42	1.43	1.44
	70	1.45	1.45	1.46	1.47	1.47	1.48	1.48	1.49	1.50
TENS	80	1.51	1.51	1.52	1.52	1.53	1.53	1.54	1.55	1.55
	90	1.56	1.56	1.57	1.57	1.58	1.58	1.58	1.59	1.60
	100	1.60	1.61	1.61	1.61	1.62	1.62	1.63	1.63	1.64
	110	1.64	1.65	1.65	1.66	1.66	1.66	1.67	1.67	1.68
	120	1.68	1.68	1.69	1.69	1.70	1.70	1.70	1.71	1.71
	130	1.72	1.72	1.72	1.73	1.73	1.74	1.74	1.74	1.75
	140	1.75	1.75	1.75	1.76	1.76	1.76	1.77	1.77	1.78
	150	1.78	1.78	1.78	1.79	1.79	1.80	1.80	1.80	1.80
	160	1.81	1.81	1.81	1.81	1.82	1.82	1.82	1.83	1.83
	170	1.83	1.84	1.84	1.84	1.84	1.85	1.85	1.85	1.85
TENS	180	1.86	1.86	1.86	1.86	1.87	1.87	1.87	1.87	1.88
	190	1.88	1.88	1.89	1.89	1.89	1.89	1.89	1.90	1.90
	200	1.90	1.91	1.91	1.91	1.91	1.92	1.92	1.92	1.92

Alkalinity (ppm)

TENS	UNITS									
	0	1	2	3	4	5	6	7	8	9
	0	0.00	0.30	0.48	0.60	0.70	0.78	0.85	0.90	0.93
	10	1.00	1.04	1.08	1.11	1.15	1.18	1.20	1.23	1.26
	20	1.30	1.32	1.34	1.36	1.38	1.40	1.42	1.43	1.45
	30	1.48	1.49	1.51	1.52	1.53	1.54	1.56	1.67	1.58
	40	1.60	1.61	1.62	1.63	1.64	1.65	1.66	1.67	1.68
	50	1.70	1.71	1.72	1.72	1.73	1.74	1.75	1.76	1.77
	60	1.78	1.79	1.79	1.80	1.81	1.81	1.82	1.83	1.84
	70	1.85	1.85	1.86	1.86	1.87	1.88	1.88	1.89	1.89
TENS	80	1.90	1.91	1.91	1.92	1.92	1.93	1.93	1.94	1.95
	90	1.95	1.96	1.96	1.97	1.97	1.98	1.98	1.99	1.99
	100	2.00	2.00	2.01	2.01	2.02	2.02	2.03	2.03	2.04
	110	2.04	2.05	2.05	2.05	2.06	2.06	2.06	2.07	2.08
	120	2.08	2.08	2.09	2.09	2.09	2.10	2.10	2.10	2.11
	130	2.11	2.12	2.12	2.12	2.13	2.13	2.13	2.14	2.14
	140	2.15	2.15	2.15	2.16	2.16	2.16	2.16	2.17	2.17
	150	2.18	2.18	2.18	2.18	2.19	2.19	2.19	2.20	2.20
	160	2.20	2.21	2.21	2.21	2.21	2.22	2.22	2.23	2.23
	170	2.23	2.23	2.23	2.24	2.24	2.24	2.24	2.25	2.25
TENS	180	2.26	2.26	2.26	2.26	2.26	2.27	2.27	2.27	2.28
	190	2.28	2.28	2.28	2.29	2.29	2.29	2.29	2.29	2.30
	200	2.30	2.30	2.30	2.31	2.31	2.31	2.31	2.32	2.32

HUNDREDS	TENS									
	0	10	20	30	40	50	60	70	80	90
	200	1.92	1.94	1.96	1.98	2.00	2.02	2.03	2.03	2.06
	300	2.08	2.09	2.11	2.12	2.13	2.13	2.16	2.17	2.18
	400	2.20	2.21	2.23	2.24	2.23	2.26	2.26	2.27	2.28
	500	2.30	2.31	2.32	2.33	2.34	2.34	2.35	2.36	2.37
	600	2.38	2.39	2.39	2.40	2.41	2.42	2.42	2.43	2.44
	700	2.45	2.45	2.46	2.47	2.47	2.48	2.48	2.49	2.50
	800	2.51	2.51	2.52	2.52	2.53	2.53	2.54	2.54	2.55
	900	2.56	2.56	2.57	2.57	2.58	2.58	2.58	2.59	2.60

HUNDREDS	TENS									
	0	10	20	30	40	50	60	70	80	90
	200	2.32	2.34	2.36	2.38	2.40	2.42	2.43	2.43	2.46
	300	2.48	2.49	2.51	2.52	2.53	2.54	2.56	2.57	2.58
	400	2.60	2.61	2.62	2.63	2.64	2.65	2.66	2.67	2.68
	500	2.70	2.71	2.72	2.72	2.73	2.74	2.75	2.76	2.77
	600	2.78	2.79	2.79	2.80	2.81	2.81	2.82	2.83	2.84
	700	2.85	2.85	2.86	2.86	2.87	2.88	2.88	2.89	2.89
	800	2.90	2.91	2.91	2.92	2.92	2.93	2.93	2.94	2.95
	900	2.95	2.96	2.96	2.97	2.97	2.98	2.98	2.99	3.00

9.0 MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

INGERSOLL-RAND®



XFE/EPE/HPE 50
XF/EP/HP 60
XF/EP/HP/XP 75-100
ML/MM/MH 37-75

PARTS LIST
RECOMMENDED SPARES

Before installation or starting the compressor for the first time, this manual should be studied carefully to obtain a clear knowledge of the unit and of the duties to be performed while operating and maintaining the unit.

RETAIN THIS MANUAL WITH UNIT.

This Technical manual contains **IMPORTANT SAFETY DATA** and should be kept with the air compressor at all times.

More Than Air. Answers.

Online answers: <http://www.air.ingersoll-rand.com>

APDD 751

December 1999

**AIR COMPRESSOR GROUP
BONDED WARRANTY & REGISTERED START UP**

Warranty

The Company warrants that the equipment manufactured by it and delivered hereunder will be free of defects in material and workmanship for a period of twelve months (see extended airend warranty) from the date of placing the Equipment in operation or eighteen months (see extended airend warranty) from the date of shipment from Davidson, NC, whichever shall first occur. The Purchaser shall be obligated to promptly report any failure to conform to this warranty, in writing to the Company in said period, whereupon the Company shall, at its option, correct such nonconformity, by suitable repair to such equipment or, furnish a replacement part F.O.B. point of shipment, provided the Purchaser has stored, installed maintained and operated such Equipment in accordance with good industry practices and has complied with specific recommendations of the Company. Accessories or equipment furnished by the Company, but manufactured by others, shall carry whatever warranty the manufacturers have conveyed to the Company and which can be passed on to the Purchaser. The Company shall not be liable for any repairs, replacements, or adjustments to the Equipment or any costs of labor performed by the Purchaser or others without Company's prior written approval.

The effects of corrosion, erosion and normal wear and tear are specifically excluded. Performance warranties are limited to those specifically stated within the Company's proposal. Unless responsibility for meeting such performance warranties are limited to specified tests, the Company's obligation shall be to correct in the manner and for the period of time provided above.

THE COMPANY MAKES NO OTHER WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED.

Correction by the Company of nonconformities whether patent or latent, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of the Company for such nonconformities whether based on contract, warranty negligence, indemnity, strict liability or otherwise with respect to or arising out of such Equipment.

The purchaser shall not operate Equipment which is considered to be defective, without first notifying the Company in writing of its intention to do so. Any such Equipment will be at Purchaser's sole risk and liability.

Limitation or Liability

The remedies of the Purchaser set forth herein are exclusive, and the total liability of the Company with respect to this contract or the Equipment and services furnished hereunder, in connection with the performance or breach thereof, or from the manufacture, sale, delivery, installation, repair or technical direction covered by or furnished under this contract, whether passed on contract, warranty negligence, indemnity, strict liability or otherwise, shall not exceed the purchase price of the unit of Equipment upon which such liability is based.

The Company and its suppliers shall in no event be liable to the Purchaser, any successors in interest or any beneficiary or assignee of this contract for any consequential, incidental, indirect, special or punitive damages arising out of this contract or any breach thereof, or any defect in, or failure of, or malfunction of the Equipment hereunder, whether based upon loss of use, lost profits or revenue, interest, lost goodwill, work stoppage, impairment of other goods, loss by reason of shutdown or non-operation, increased expenses of operation, cost of purchase of replacement power or claims of Purchaser or customers of Purchaser for service interruption whether or not such loss or damage is based on contract, warranty, negligence, indemnity, strict liability or otherwise.

EXTENDED DRIVETRAIN WARRANTY

**Intellisys Compressors
50-450 HP**

The Ingersoll-Rand Company Rotary Screw Air Compressor that has been filled prior to its original shipment from Ingersoll-Rand Company with ULTRA COOLANT and which has been operated solely on ULTRA COOLANT thereafter shall have its DRIVETRAIN warranted for twenty four (24) months from the date of placing the COMPRESSOR in operation or thirty (30) months from the date of shipment, whichever occurs first.

Except for the above warranty period, the standard warranty provisions shall apply and the conditions outlined herein are understood to be a supplement to the standard Ingersoll-Rand Company warranty.

This EXTENDED DRIVETRAIN WARRANTY applies only to 50-450 HP Intellisys COMPRESSORS operating on ULTRA COOLANT after February 1, 1990.

TABLE OF CONTENTS

Safety and Warnings	2
Introduction	3
Controller Assembly	4,5
Control Piping (NEMA I) - No Modulation	6,7
Control Piping (NEMA 1) - With Modulation	8,9
Control Piping (NEMA 4) - No Modulation	10,11
Control Piping (NEMA 4) - With Modulation	12,13
Electrical Components - All Units	14,15
Starter - Full Voltage (C85 & B110)	16
Starter - Full Voltage (B180 & B250)	17
Starter - Star-Delta (C43 w/C37) & (C60 w/C43)	18
Starter - Star-Delta (C72 w/C60) & (C85 w/C60)	19
Starter - Star-Delta (B110 w/A75) & (B180 w/B110)	20
Starter - Star-Delta (B250 w/B180)	21
50-60 HP & Gear	22,23
37-45 KW Motor & Gear	24,25
50-60 HP & 37-45 KW Motor Support	26,27
75 HP Motor & Gear w/Motor Support	28,29
55 KW Motor & Gear w/Motor Support	30,31
100 HP Motor & Gear w/Motor Support	32,33
75 KW Motor & Gear w/Motor Support	34,35
50-60 HP (37-45 KW) Airend Piping and Support	36,37
75-100 HP (55-75 KW) Airend Piping and Support	38,39
Inlet Valve Assembly	40,41
50-60 HP (37-45 KW) Air Filter Assembly	42,43
75-100 HP (55-75 KW) Air Filter Assembly	44,45
50-60 HP (37-45 KW) Separator Tank	46,47
75-100 HP (55-75 KW) Separator Tank	48,49
Temperature Control Valve and Piping	50,51
Cooler Frame	52,53
Air Cooled Cooler	54,55
50-75 HP (37-55 KW) Moisture Separator	56,57
100 HP (75 KW) Moisture Separator	58,59
Water Cooled (Common)	60,61
50-60 HP (37-45 KW) Water Cooled	62,63
75-100 HP (55-75 KW) Water Cooled	64,65
Enclosure Assembly	66,67
Intake Assembly	68,69
Recommended Spares	70-73

ROTARY SCREW AIR COMPRESSOR

This unit was purchased from

Ingersoll-Rand Company reserves the right to make changes or add improvements without notice and without incurring any obligation to make such changes or add such improvements to products sold previously.

No. of units on order: _____

Customer Order No.: _____

Ingersoll-Rand Co. Order No.: _____

For ready reference:

Record the serial number and model number of your unit here.

Serial Number: _____

Model Number: _____

0.0 SAFETY AND WARNINGS

0.1 SAFETY INSTRUCTIONS

Before you install this air compressor you should take the time to carefully read all the instructions contained in the operators manual APDD 696. Operator manuals may be obtained from your local Ingersoll-Rand Distributor or Air Center.

Electricity and compressed air have the potential to cause severe personal injury or property damage.

Before installing, wiring, starting, operating or making any adjustments, identify the components of the air compressor using this manual as a guide.

The operator should use common sense and good working practices while operating and maintaining this unit. Follow all codes, pipe adequately, understand the starting and stopping sequence. Check the safety devices by following the procedure contained in this manual.

Maintenance should be done by qualified personnel, adequately equipped with proper tools. Follow the maintenance schedules as outlined in the operators manual to ensure problem free operation after start up.

Safety instructions in the operators manual are bold-faced for emphasis. The signal words **DANGER**, **WARNING** and **CAUTION** are used to indicate hazard seriousness levels as follows:



Danger is used to indicate the presence of a hazard which *will cause severe* personal injury, death, or substantial property damage if the warning is ignored.



Warning is used to indicate the presence of a hazard which *can cause severe* personal injury, death, or substantial property damage if the warning is ignored.



Caution is used to indicate the presence of a hazard which *will or can cause minor* personal injury or property damage if the warning is ignored.



Notice is used to notify people of installation, operation, or maintenance information which is important but not hazard-related.

0.2 SAFETY PRECAUTIONS

SAFETY PRECAUTIONS

BEFORE PROCEEDING, READ CAREFULLY BEFORE INSTALLING THE COMPRESSOR OR PERFORMING ANY MAINTENANCE

WARNING

COMPRESSED AIR AND ELECTRICITY ARE DANGEROUS.

BEFORE DOING ANY WORK ON THIS UNIT, BE SURE THE ELECTRICAL SUPPLY HAS BEEN CUT OFF-LOCKED & TAGGED AND THE ENTIRE COMPRESSOR SYSTEM HAS BEEN VENTED OF ALL PRESSURE.

1. Do not remove the covers, loosen or remove any fittings, connections or devices when this unit is in operation. Hot liquid and air under pressure that are contained within this unit can cause severe injury or death.

2. The compressor has high and dangerous voltage in the motor starter and control box. All installations must be in accordance with recognized electrical codes. Before working on the electrical system, be sure to remove voltage from the system by use of a manual-disconnect-switch. A circuit breaker or fuse safety switch must be provided in the electrical supply line leading to the compressor.

Those responsible for installation of this equipment must provide suitable grounds, maintenance clearance and lightning arrestors for all electrical components as stipulated in O.S.H.A. 1910.308 through 1910.329.

3. Do not operate the compressor at higher discharge pressure than those specified on the Compressor Nameplate or motor overload will occur. This condition will result in compressor motor shutdown.

4. Use only safety solvent for cleaning the compressor and auxiliary equipment.

5. Install a manual shut off valve (isolation type) in the discharge line. When a safety valve is installed between the isolation valve and the compressor, it must have sufficient capacity to relieve the full capacity of the compressor(s).

6. Whenever pressure is released through the pressure relief valve, it is due to excessive pressure in the system. The cause for the excessive pressure should be investigated immediately.

7. Before doing any mechanical work on the compressor:

a.) Shut the unit down.

b.) Electrically isolate the compressor by use of the manual disconnect switch in the power line to the unit. Lock and tag the switch so that it cannot be operated.

c.) Vent pressure from the compressor and isolate the unit from any other source of air.

8. There can be adverse effects if compressor lubricants are allowed to enter plant air systems.

Air line separators, properly selected and installed, will minimize any liquid carry-over.

The use of plastic bowls on line filters without metal guards can be hazardous. From a safety standpoint, metal bowls should be used on any pressurized system. Review of your plant air line system is recommended.

9. When a receiver is installed, it is recommended that occupational safety and health standards as covered in the Federal Register, Volume 36, number 105, part 11, paragraph 1910.169 be adhered to in the installation and maintenance of this receiver.

10. Before starting the compressor, its maintenance instructions should be thoroughly read and understood.

11. After maintenance functions are completed, covers and guards must be replaced.

PARTS LIST

INTRODUCTION

GENERAL

This manual, which contains an illustrated parts breakdown, has been prepared as an aid in identifying and ordering parts in the SSR compressor. All of the compressor parts listed in the parts breakdown, are manufactured with the same precision as the original equipment.

Ingersoll-Rand Company service facilities and parts are available worldwide. There are Ingersoll-Rand Company Branch Offices and authorized distributors located in the principle cities of the United States. In Canada, our customers are serviced by the Canadian Ingersoll-Rand Company, Limited. There are also Ingersoll-Rand Company subsidiaries and authorized distributors located in the principle cities throughout the world.

DESCRIPTION

The illustrated parts breakdown illustrates the various assemblies, sub-assemblies and detailed parts which make up this particular SSR compressor. A series of illustrations show each part clearly and in it's

correct location relative to the other parts in the illustration. Each part on an illustration is referenced with a number. The number, description and quantity needed per assembly is listed in numerical order on the following pages.

OPTIONAL EQUIPMENT

Several optional accessories items are available for convenience or special application. These accessories have been selected as being particularly suitable for use on the SSR compressor.

For complete details on Optional Equipment, contact your Sales Representative.

HOW TO USE THIS PARTS MANUAL

1. Turn to the Parts Section to locate the desired illustrations.
2. Locate the part on the illustration by visual identification and the reference number.
3. Find the referenced number on the Tabulated page, along with the Part Number and Description.

SERIAL NUMBER BREAK

When a part is changed and it doesn't supersede the previous part this change must be docu-

mented by a serial number break. By using the last (6) of the serial number, as outlined below, this change is recorded in the parts list.


→→ **U99240** indicates part is used on units up to and including serial number ending in **U99240**.


U99241→→ indicates part is used on units with serial number ending in **U99241** or higher.

HOW TO ORDER PARTS


In order that all avoidable errors be eliminated when ordering parts, please specify the following:

1. The model number of the unit as shown on the Compressor Data Plate.
2. The serial number of the unit as shown on the Compressor Data Plate.
3. The form number of this manual.
4. The reference number, part number, description and quantity needed exactly as listed.
5. The motor data code shown on the motor data plate.

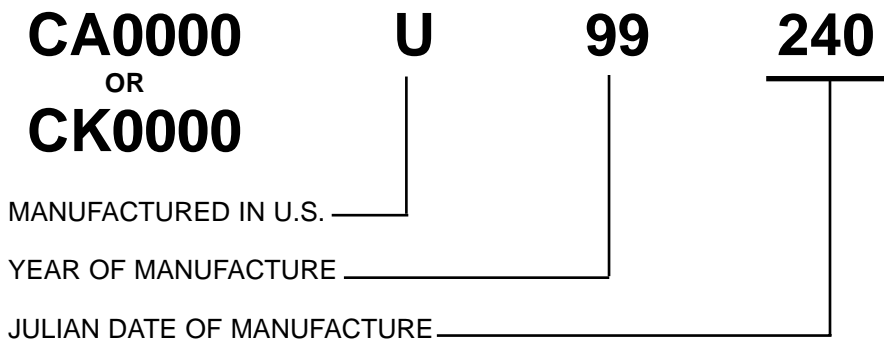

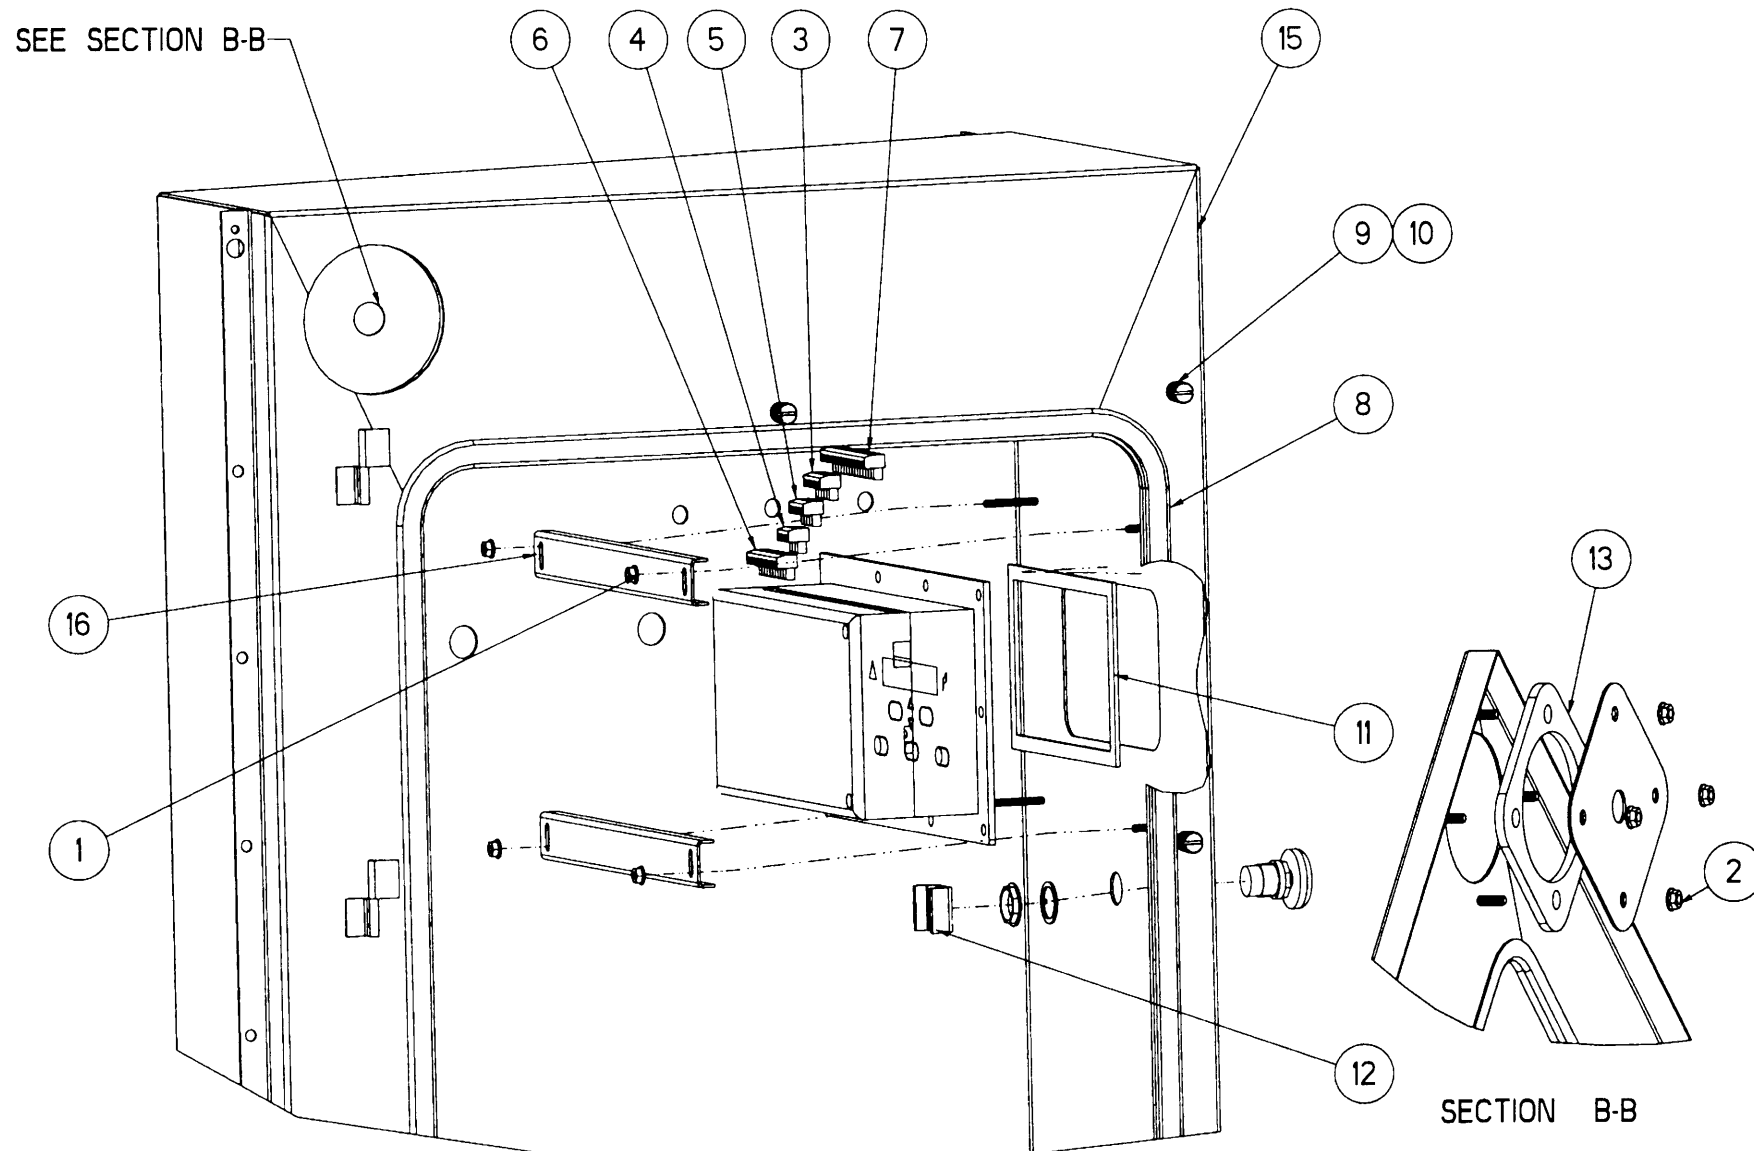


CONTROLLER ASSEMBLY			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39128533	4	NUT, WHIZ LOCK #10 ZINC PLATED
2	39128541	4	NUT, WHIZ LOCK .25 ZINC PLATED
3	39186093	1	PLUG, 6 POSITION
4	39186101	1	PLUG, 4 POSITION
5	39191630	1	PLUG, 5 POSITION
6	39191648	1	PLUG, 11 POSITION
7	39191655	1	PLUG, 16 POSITION
8	39249875	1	GASKET, SEALING EDGE 130 IN. LONG
9	39256318	7	SCREW, KNURL HEAD .25 X 1.00 LONG
10	39256326	7	RETAINER, BOLT .25
11	39495874	1	GASKET, INTELLISYS STARTER BOX
12	39549167	1	SWITCH, EMERGENCY STOP
13	39589007	1	GASKET, CONDUIT PLATE
14	39817655	1	CONTROLLER/INTELLISYS
15	39894621	1	BOX, STARTER
16	39896634	2	ANGLE, CONTROLLER

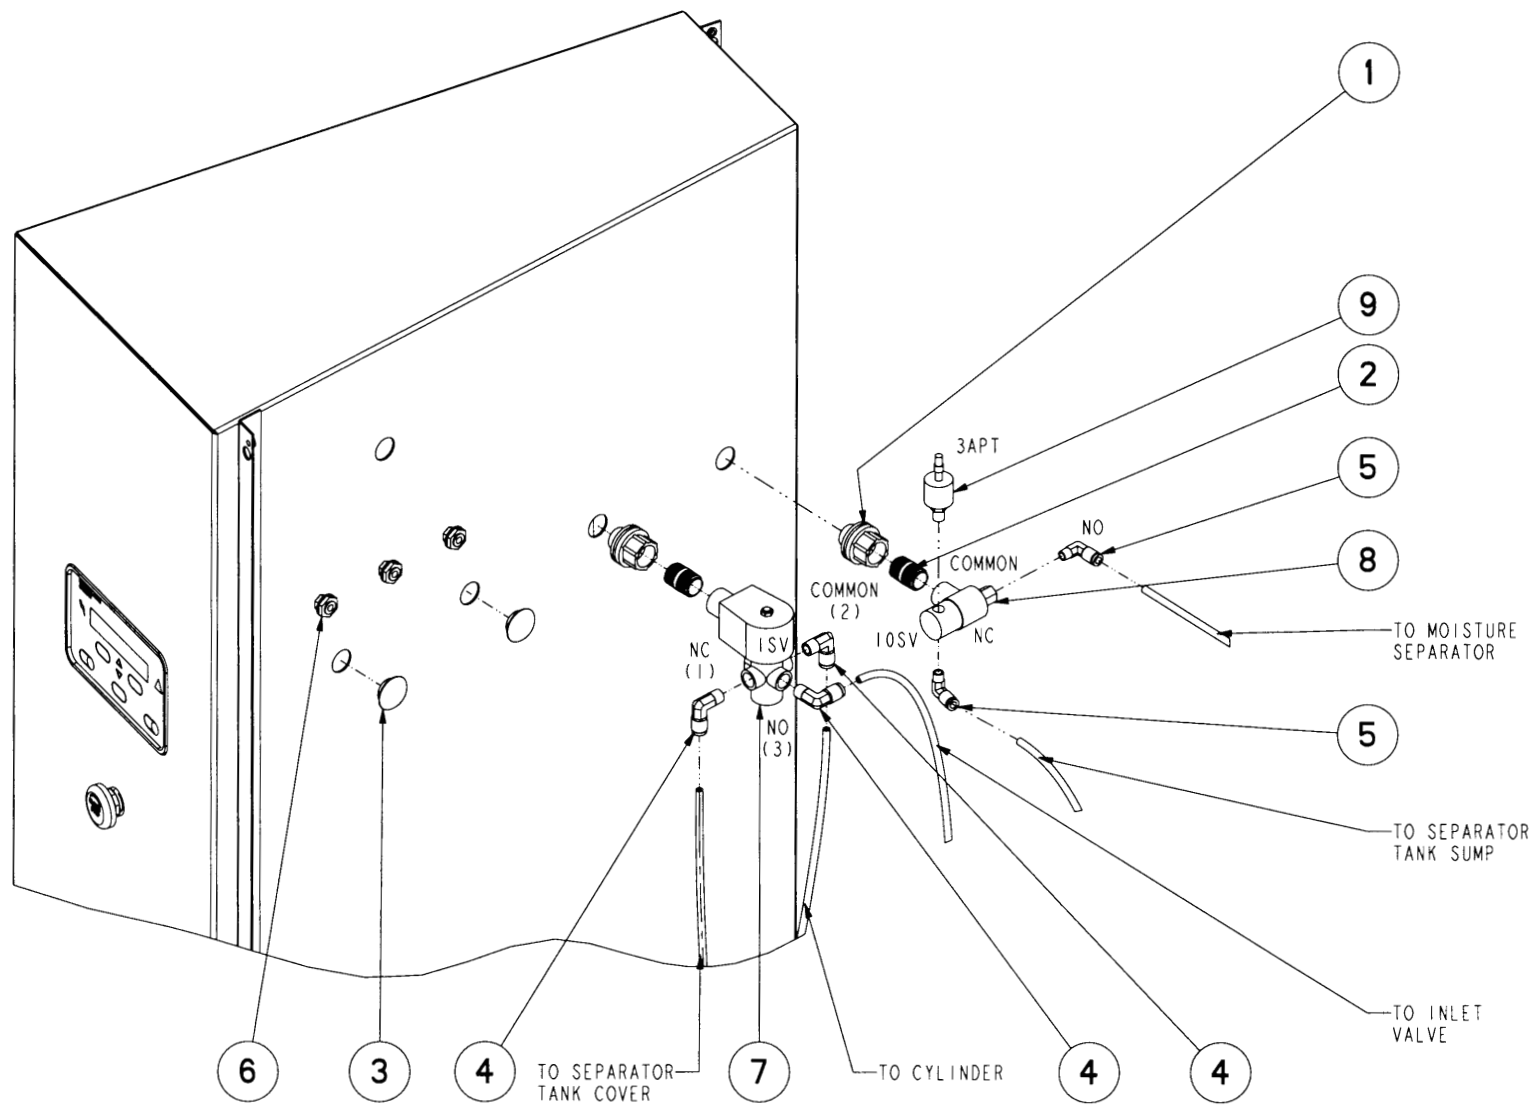

CONTROL PIPING NEMA I - NO MODULATION			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	35275494	2	HUB
2	39108592	2	NIPPLE, .50 NPT X 1.19 LONG
3	39140785	2	PLUG, LIQUID TIGHT .50 CONDUIT
4	39155478	3	ELBOW, .25 NPT X .25 TUBE
5	39155577	2	ELBOW, .13 NPT X .25 TUBE
6	39173927	3	GLAND, WIRE
7	39418926	1	VALVE, .25 NPT
8	39583943	1	VALVE, SOLENOID 3-WAY (DC COIL)
9	39853809	1	TRANSDUCER, PRESSURE


ALL TUBING IS PART NUMBER 39124813

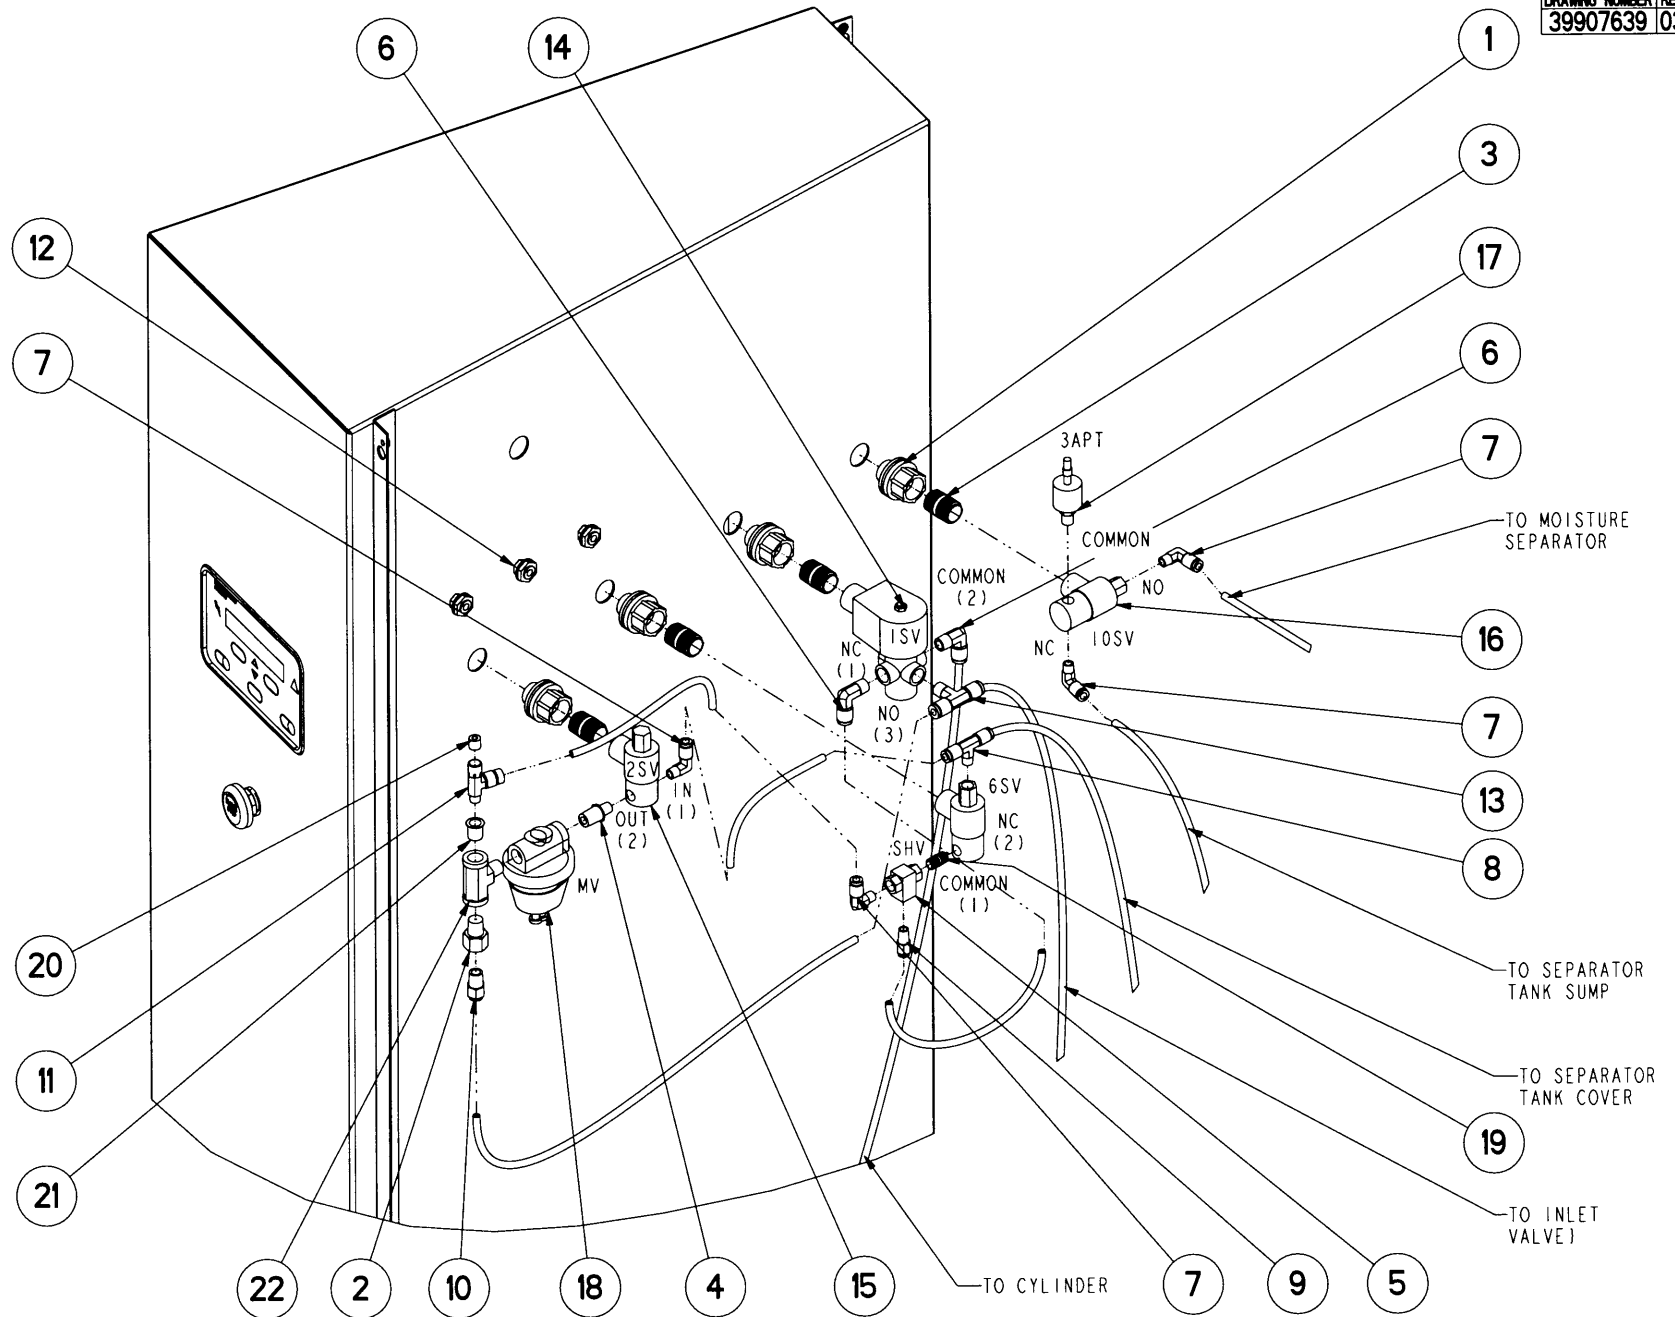

CONTROL PIPING NEMA 1 WITH MODULATION


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	35275494	4	HUB
2	37081528	1	ORIFICE, NPT .063 -
3	39108592	4	NIPPLE, .50 NPT X 1.19 LONG
4	39127253	1	NIPPLE, .25 NPT X .13 NPT BRASS
5	39127261	1	VALVE, SHUTTLE
6	39155478	2	ELBOW, .25 NPT X .25 TUBE
7	39155577	4	ELBOW, .13 NPT X .25 TUBE
8	39156385	1	TEE, BRANCH .13 NPT X .25 TUBE
9	39156393	1	CONNECTOR, .13 NPT X .25 TUBE
10	39156435	1	CONNECTOR, .25 NPT X .25 TUBE
11	39156468	1	TEE, RUN .13 NPT X .13 FNPT X .25 TUBE
12	39173927	3	GLAND, WIRE
13	39181342	1	TEE, BRANCH .25 NPT X .25 TUBE
14	39418926	1	VALVE, .25 NPT
15	39530852	1	VALVE, SOLENOID 3-WAY
16	39583943	2	VALVE, SOLENOID 3-WAY (DC COIL)
17	39853809	1	TRANSDUCER, PRESSURE
18	39905542	1	VALVE, REGULATOR (100 & 125 PSIG)
-	39905682	1	VALVE, REGULATOR (140 & 165 PSIG)
19	95343679	1	NIPPLE, .13 NPT X .75 LONG
20	95837233	1	PLUG, SOCKET .13 NPT -
21	95930301	1	BUSHING, REDUCER .25 NPT X .13 FNPT
22	95940672	1	TEE, BRANCH .25 FNPT X .25 NPT X .25 FNPT

ALL TUBING IS PART NUMBER 39124813

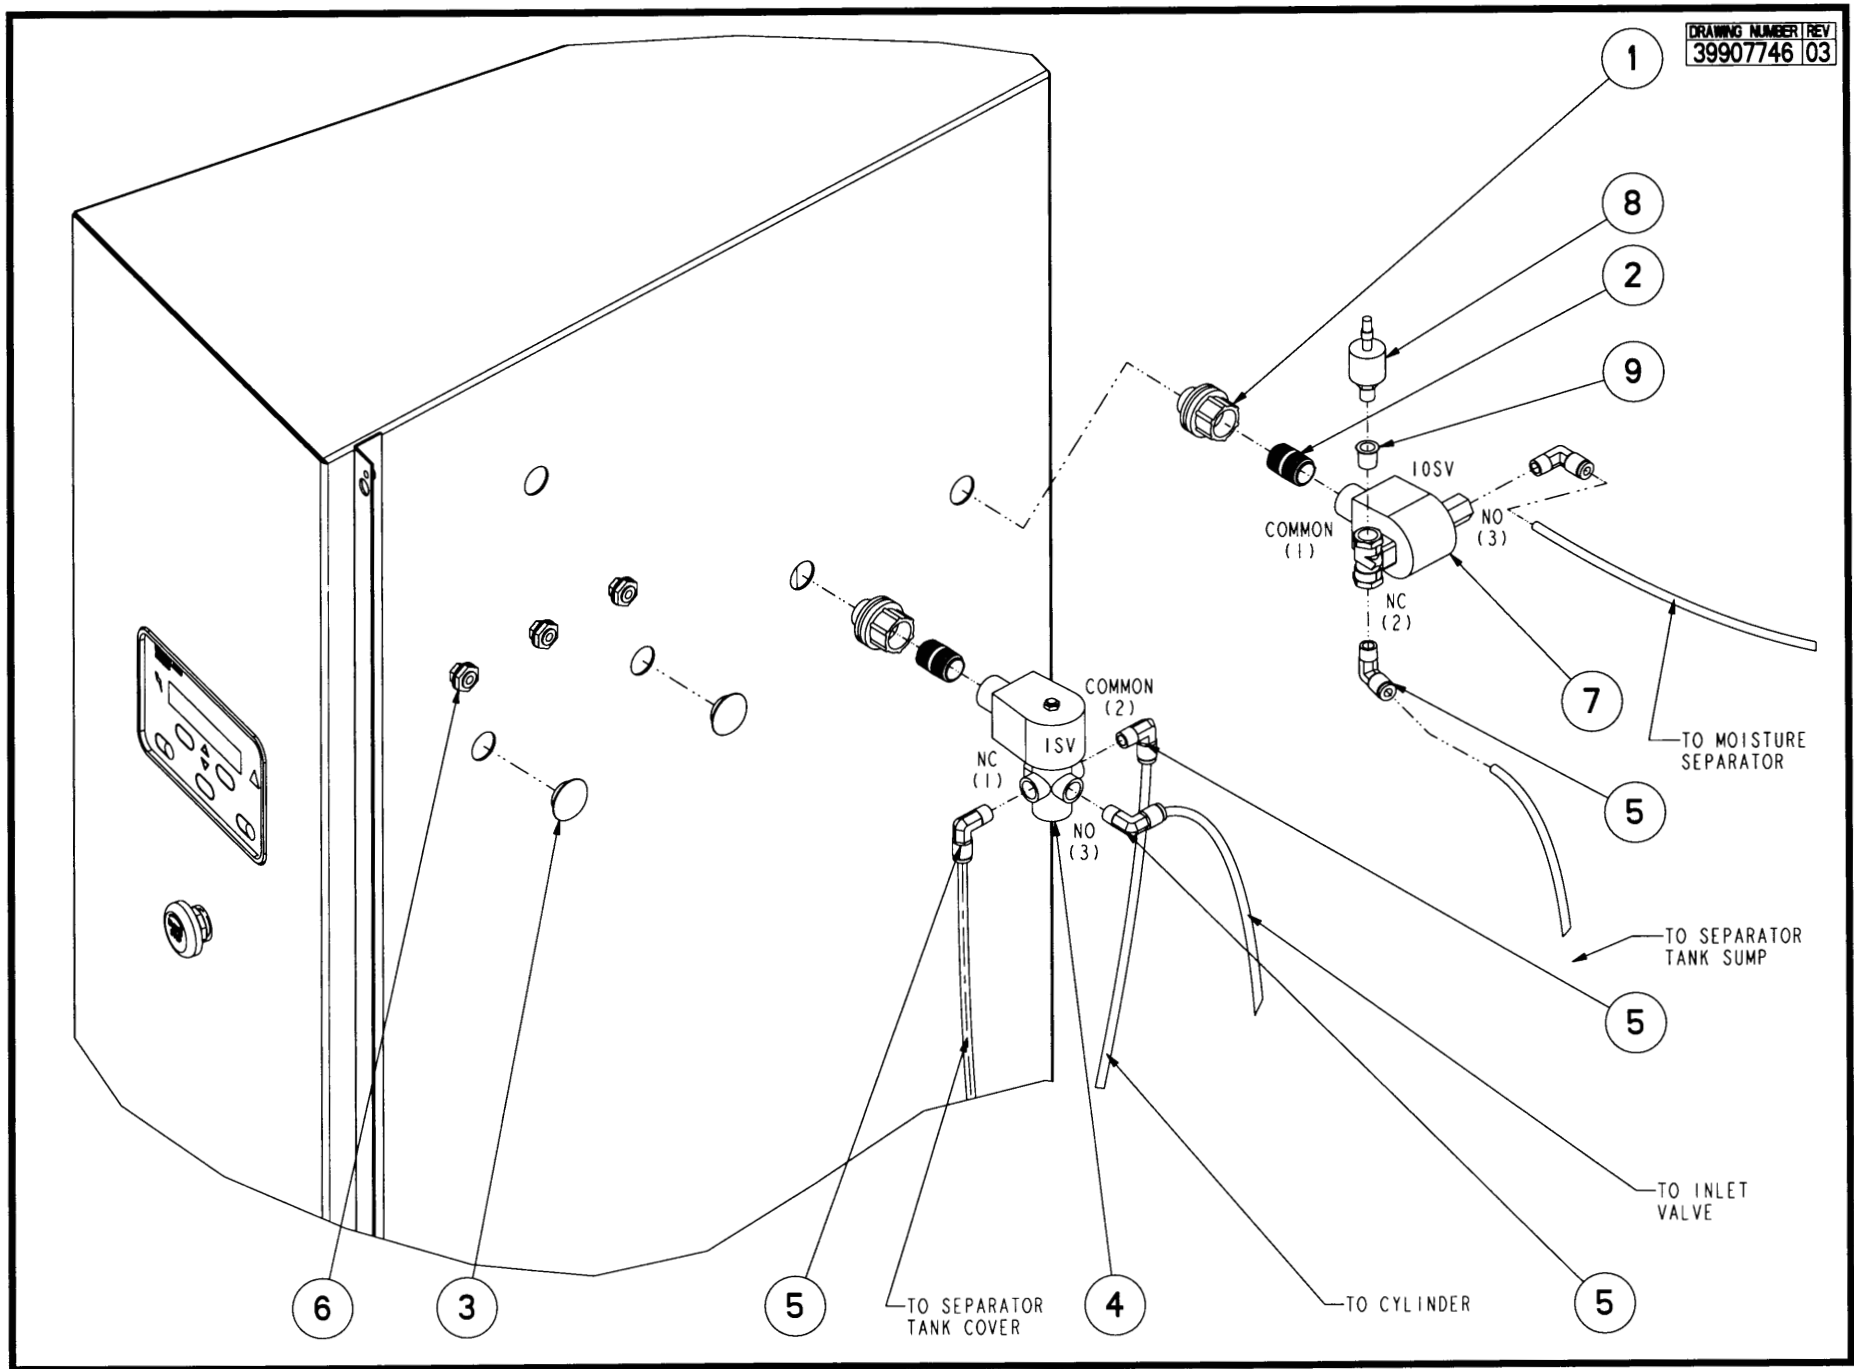

CONTROL PIPING NEMA 4 - NO MODULATION			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	35275494	2	HUB
2	39108592	2	NIPPLE, .50 NPT X 1.19 LONG
3	39140785	2	PLUG, LIQUID TIGHT .50 CONDUIT
4	39146741	1	VALVE, " .25 NPT
5	39155478	5	ELBOW, .25 NPT X .25 TUBE
6	39173927	3	GLAND, WIRE
7	39497672	1	VALVE, CONTROL 3 WAY NEMA 4
8	39853809	1	TRANSDUCER, PRESSURE
9	95930301	1	BUSHING, REDUCER .25 NPT X .13 FNPT


ALL TUBING IS PART NUMBER 39497847

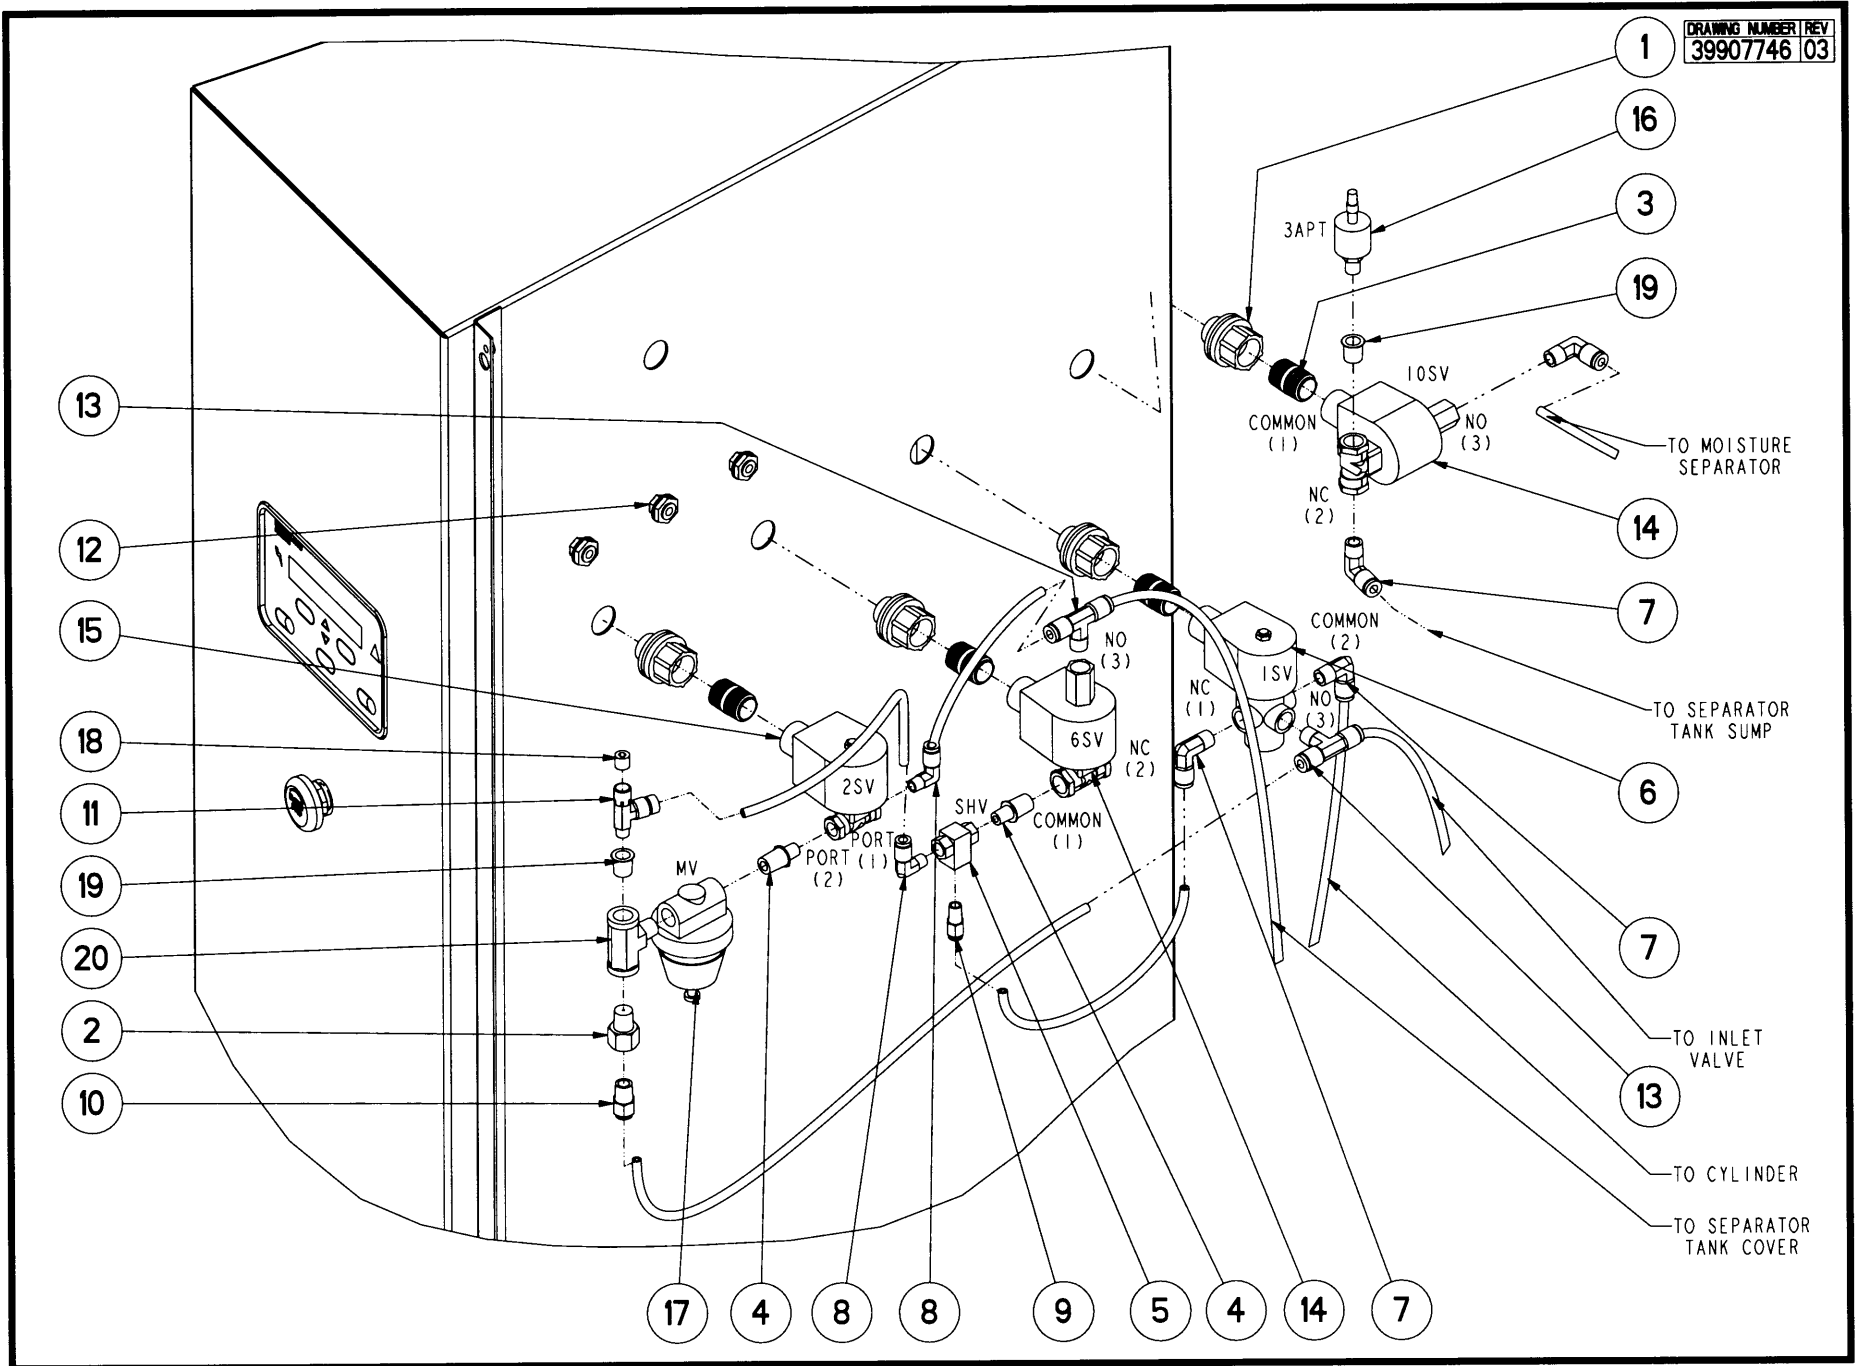

CONTROL PIPING NEMA 4 WITH MODULATION

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	35275494	4	HUB
2	37081528	1	ORIFICE, NPT .063 -
3	39108592	4	NIPPLE, .50 NPT X 1.19 LONG
4	39127253	2	NIPPLE, .25 NPT X .13 NPT BRASS
5	39127261	1	VALVE, SHUTTLE
6	39146741	1	VALVE, " .25 NPT
7	39155478	4	ELBOW, .25 NPT X .25 TUBE
8	39155577	2	ELBOW, .13 NPT X .25 TUBE
9	39156393	1	CONNECTOR, .13 NPT X .25 TUBE
10	39156435	1	CONNECTOR, .25 NPT X .25 TUBE
11	39156468	1	TEE, RUN .13 NPT X .13 FNPT X .25 TUBE
12	39173927	3	GLAND, WIRE
13	39181342	2	TEE, BRANCH .25 NPT X .25 TUBE
14	39497672	2	VALVE, CONTROL 3 WAY NEMA 4
15	39497680	1	VALVE, BLOWDOWN .13 NPT
16	39853809	1	TRANSDUCER, PRESSURE
17	39905542	1	VALVE, REGULATOR (100 & 125 PSIG)
-	39905682	1	VALVE, REGULATOR (140 & 165 PSIG)
18	95837233	1	PLUG, SOCKET .13 NPT -
19	95930301	2	BUSHING, REDUCER .25 NPT X .13 FNPT
20	95940672	1	TEE, BRANCH .25 FNPT X .25 NPT X .25 FNPT

ALL TUBING IS PART NUMBER 39497847

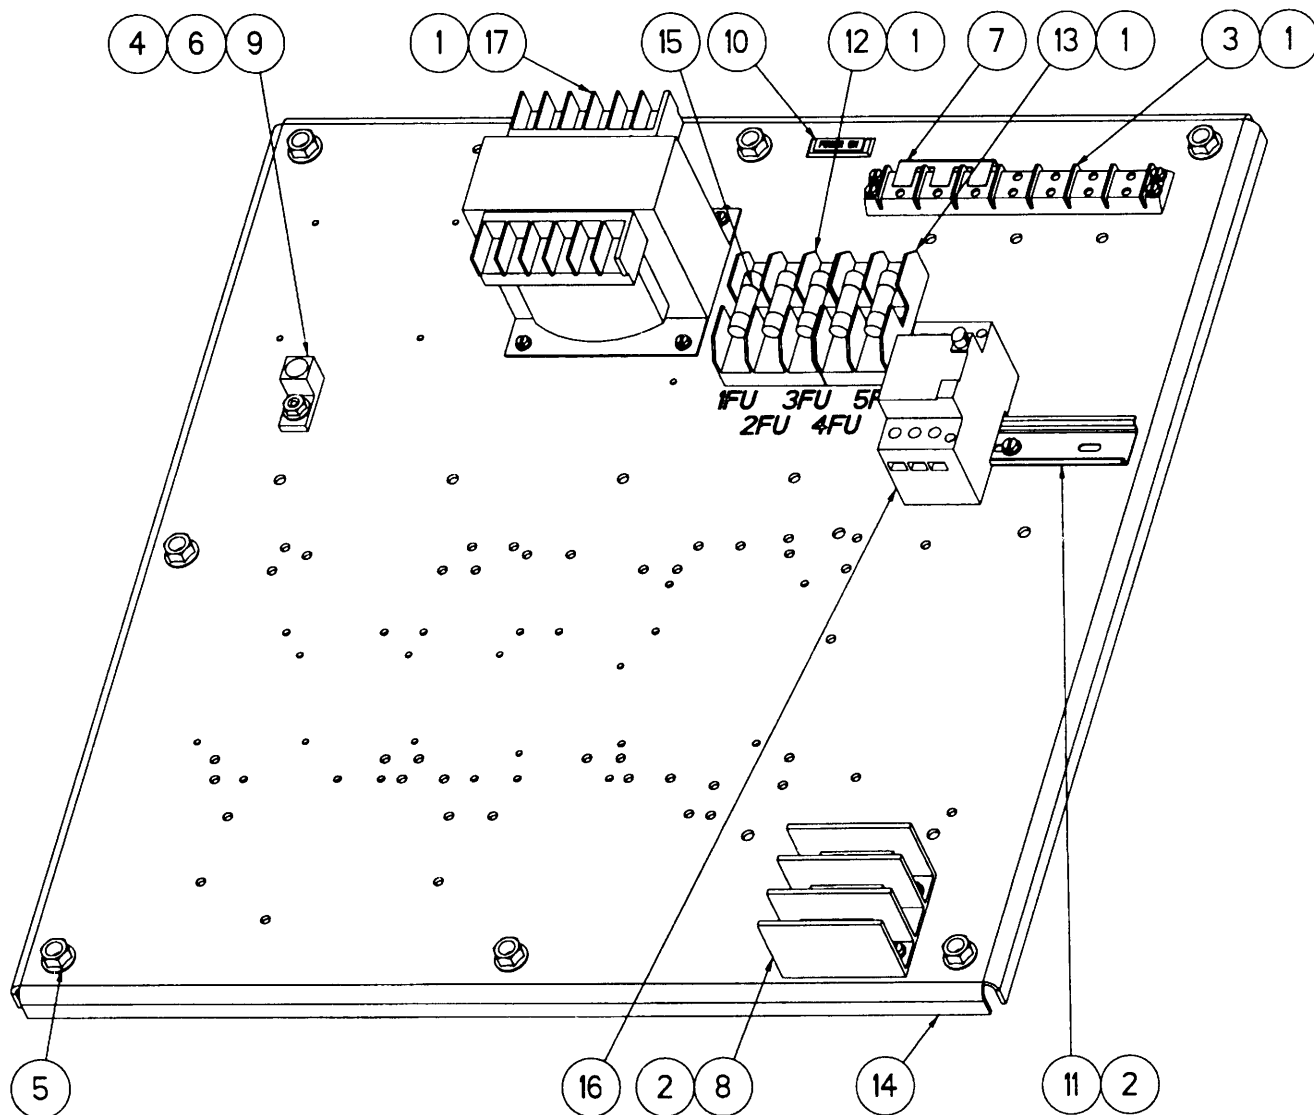

ELECTRICAL COMPONENTS, ALL UNITS



REF. NO.	PART NUMBER	QTY.	DESCRIPTION	COMMENTS
1	35249721	12	SCREW, SLOTTED WASHER HEAD TAPPING #8 X .63 LONG	
2	35252279	6	SCREW, SLOTTED WASHER HEAD TAPPING #10 X .50 LONG	
3	35267202	1	BLOCK, TERMINAL DOUBLE ROW - 14 TERMINALS	
4	39128541	1	NUT, WHIZ LOCK 25 ZINC PLATED	
5	39128566	7	NUT, FLANGE .38 ZINC PLATED	
6	39141809	1	SCREW, WASHER HEAD TAPPING .25 X .63 LONG	
7	39141999	1	JUMPER, TERMINAL 3-POSITION	
8	39164520	1	BLOCK, TERMINAL	
9	39190939	1	LUG, GROUNDING	
10	39196225	1	LIGHT, POWER ON	
11	39325485	1	DIN RAIL, 125 mm	
12	39479035	1	FUSE, HOLDER	
13	39480504	1	FUSE, HOLDER	
14	39899778	1	PANEL, STARTER	
15	SEE CHART	-	FUSE, VOLTS AMPS	SEE FUSE/TRANSFORMER CHART
16	SEE CHART	-	STARTER, FAN MOTOR	SEE FAN MOTOR STARTER CHART
17	SEE CHART	-	TRANSFORMER	SEE FUSE/TRANSFORMER CHART

FUSE/TRANSFORMER CHART

PART NUMBER	QTY.	DESCRIPTION	COMMENTS
BACKPANEL, FOR 60 HZ STARTER SIZES C43, C60 & C72			
39113535	3	FUSE, 250 VOLTS 2 AMPS	3FU, 4FU & 5FU
39178710	2	FUSE, REJECTION TYPE 600 VOLTS 18 AMPS	1FU & 2FU
39301981	1	TRANSFORMER 230 VA	
BACKPANEL, FOR 50 HZ STARTER SIZES C43, C60 & C72			
39113535	3	FUSE, 250 VOLTS 2 AMPS	3FU, 4FU & 5FU
39178710	2	FUSE, REJECTION TYPE 600 VOLTS 18 AMPS	1FU & 2FU
39318134	1	TRANSFORMER 50 HZ 230 VA	
BACKPANEL, FOR 60 HZ STARTER SIZES C85, B110, B180 & B250			
39113527	1	FUSE, 250 VOLTS 32 AMPS	3FU
39113535	2	FUSE, 250 VOLTS 2 AMPS	4FU & FU
39178728	2	FUSE, REJECTION TYPE 600 VOLTS 25 AMPS	1FU & 2FU
39491519	1	TRANSFORMER, CONTROL MULTI-TAP 60 HZ 330 VA	
BACKPANEL, FOR 50 HZ STARTER SIZES C85, B110, B180 & B250			
39113527	1	FUSE, 250 VOLTS 32 AMPS	3FU
39113535	2	FUSE, 250 VOLTS 2 AMPS	4FU & FU
39178728	2	FUSE, REJECTION TYPE 600 VOLTS 25 AMPS	1FU & 2FU
39318142	1	TRANSFORMER, CONTROL 330VA 50HZ	

FAN MOTOR STARTER CHART

QTY.	PART NUMBER	DESCRIPTION
1	39251236	STARTER, FAN MOTOR 4.0 AMP MN0400
1	39251244	STARTER, FAN MOTOR 6.3 AMP MN0630
1	39251251	STARTER, FAN MOTOR 10.0 AMP MN1000
1	39251269	STARTER, FAN MOTOR 16.0 AMP MN1600
1	39251277	STARTER, FAN MOTOR 20.0 AMP MN2000

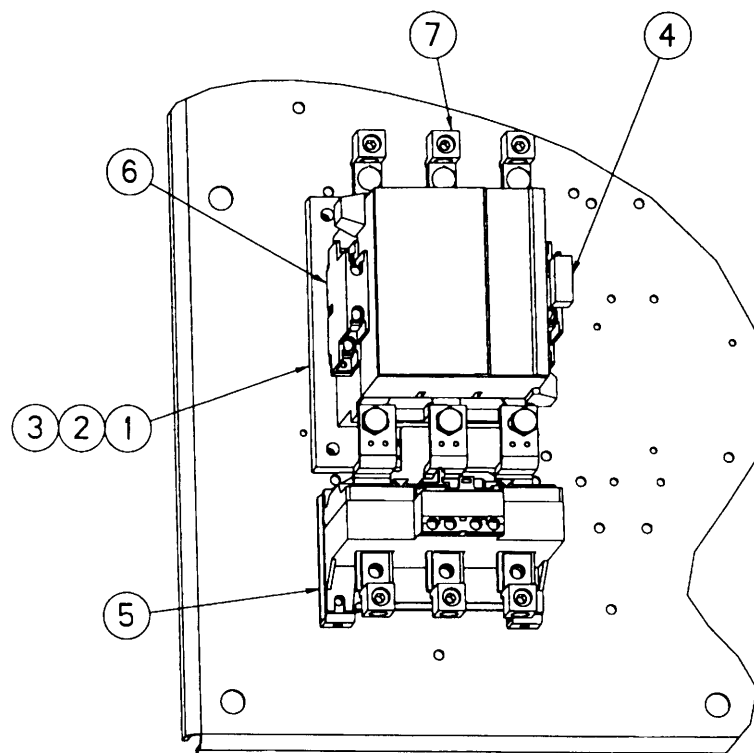
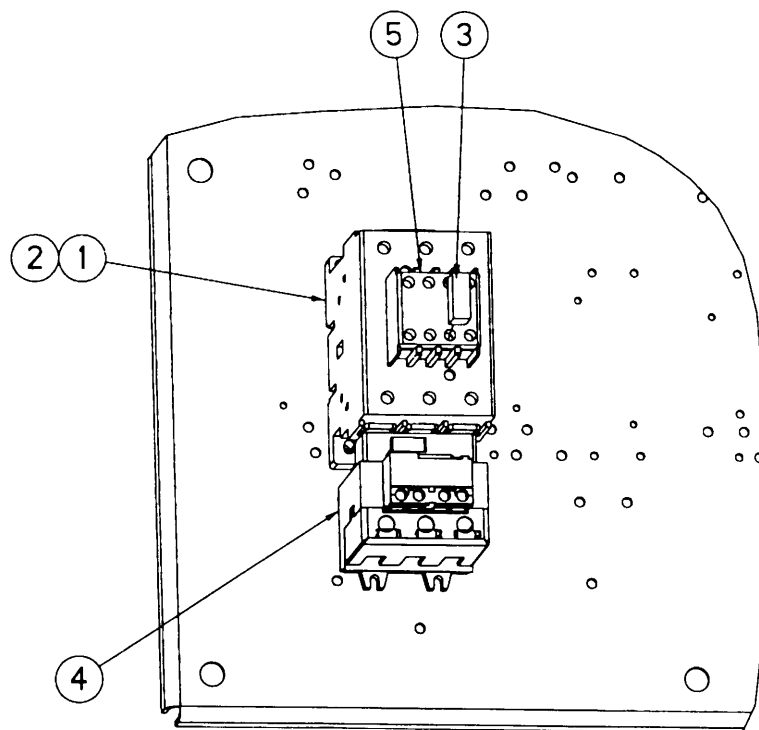


STARTER, C85 FULL VOLTAGE IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251020	1	CONTACTOR, 85 AMP
2	39251335	1	COIL, CONTACTOR
3	39203443	1	ARC SUPPRESSOR
4	39251087	1	RELAY, OVER LOAD
5	39251129	1	SWITCH, AUXILIARY (4) NO

STARTER, B110 FULL VOLTAGE IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251038	1	CONTACTOR, 110 AMP W/(1) N/O CONTACT
2	39251350	1	COIL, CONTACTOR
3	39251392	1	KIT, CONTACT
4	39203443	1	ARC SUPPRESSOR
5	39251095	1	RELAY, OVER LOAD
6	39251160	1	SWITCH, AUXILIARY (2) NO
7	39251434	6	LUG

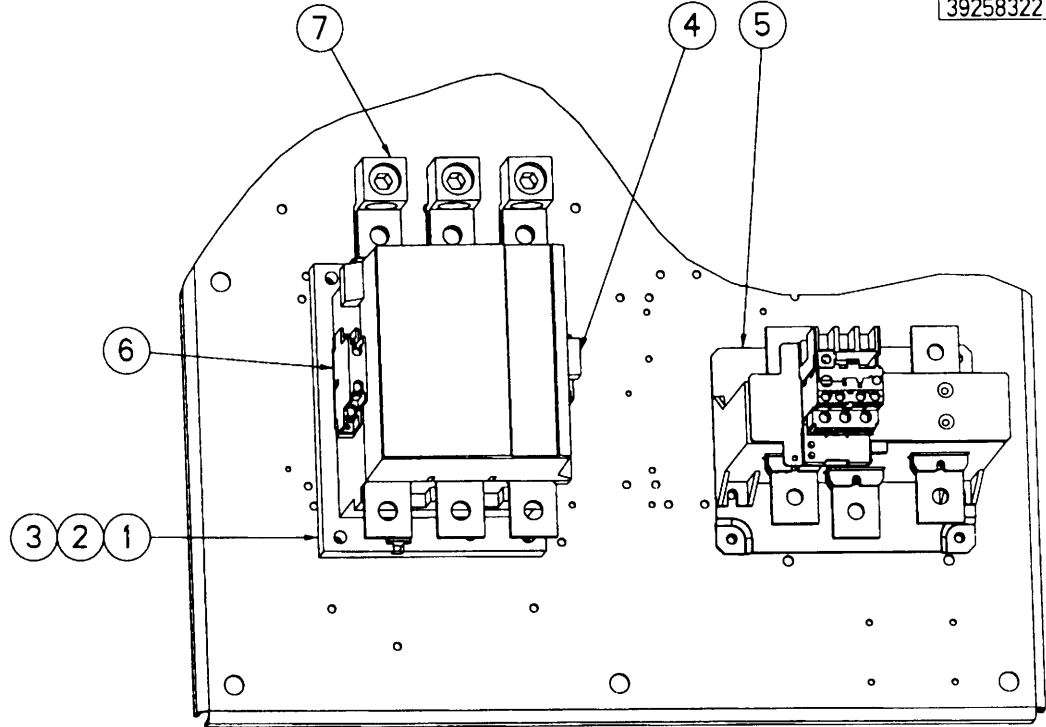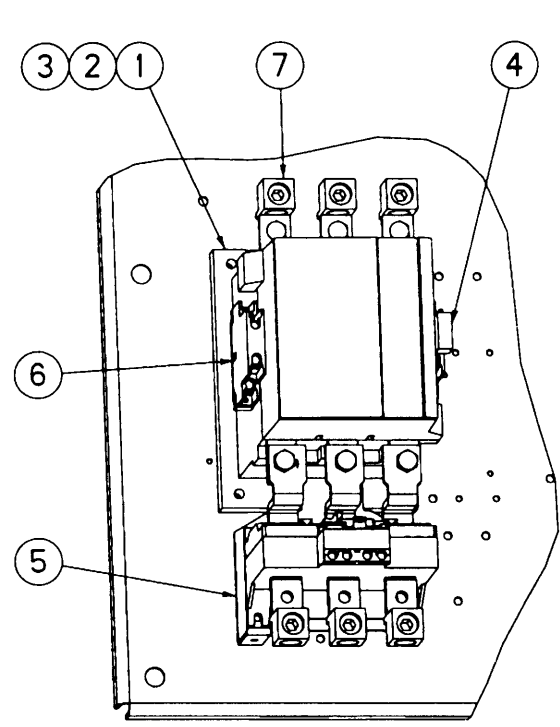


STARTER, B180 FULL VOLTAGE IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251046	1	CONTACTOR, 180 AMP W/(1) N/O CONTACT
2	39251368	1	COIL, CONTACTOR
3	39251400	1	KIT, CONTACT
4	39203443	1	ARC SUPPRESSOR
5	39251103	1	RELAY, OVER LOAD
6	39251160	1	SWITCH, AUXILIARY (2) NO
7	39251442	6	LUG


STARTER, B250 FULL VOLTAGE IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251053	1	CONTACTOR, 250 AMP W/(1) NO CONTACT
2	39251376	1	COIL, CONTACTOR
3	39251418	1	KIT, CONTACT
4	39203443	1	ARC SUPPRESSOR
5	39251111	1	RELAY, OVER LOAD
6	39251160	2	SWITCH, AUXILIARY (2) NO
7	39251459	3	LUG

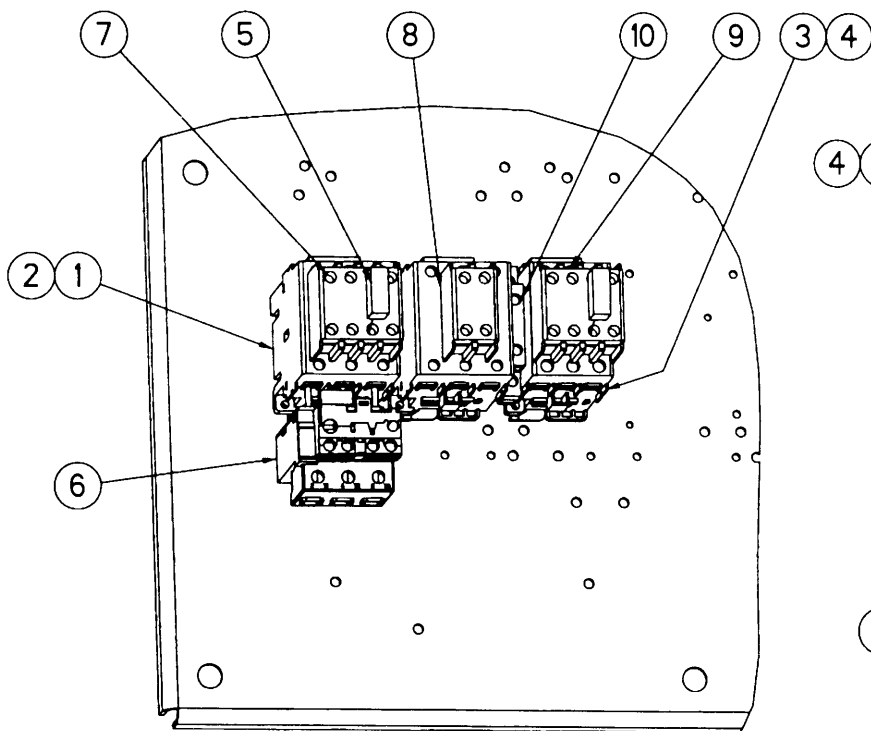


STARTER, C43 W/ C37 1S STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39250998	2	CONTACTOR, 43 AMP
2	39251327	2	COIL, CONTACTOR
3	39251061	1	CONTACTOR, 37 AMP
4	39251319	1	COIL, CONTACTOR
5	39203443	2	ARC SUPPRESSOR
6	39251079	1	RELAY, OVER LOAD
7	39251129	1	SWITCH, AUXILIARY (4) NO
8	39251137	1	SWITCH, AUXILIARY (1) NO (1) NC
9	39251145	1	SWITCH, AUXILIARY (2) NO (2) NC
10	39251186	1	INTERLOCK, MECHANICAL

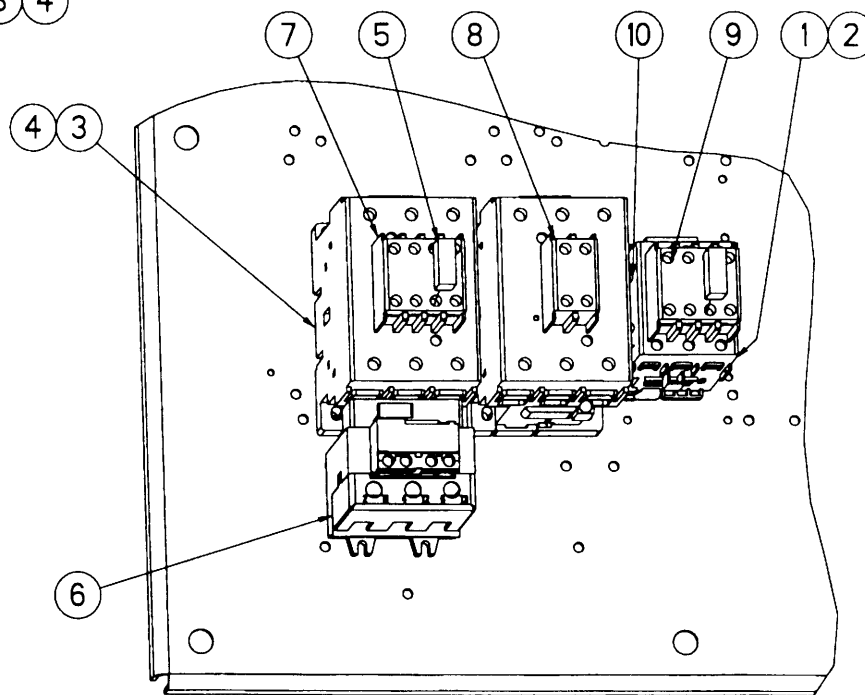


STARTER, C60 W/ C43 1S STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39250998	1	CONTACTOR, 43 AMP
2	39251327	1	COIL, CONTACTOR
3	39251004	2	CONTACTOR, 60 AMP
4	39251335	2	COIL, CONTACTOR
5	39203443	2	ARC SUPPRESSOR
6	39251087	1	RELAY, OVER LOAD
7	39251129	1	SWITCH, AUXILIARY (4) NO
8	39251137	1	SWITCH, AUXILIARY (1) NO (1) NC
9	39251145	1	SWITCH, AUXILIARY (2) NO (2) NC
10	39251186	1	INTERLOCK, MECHANICAL

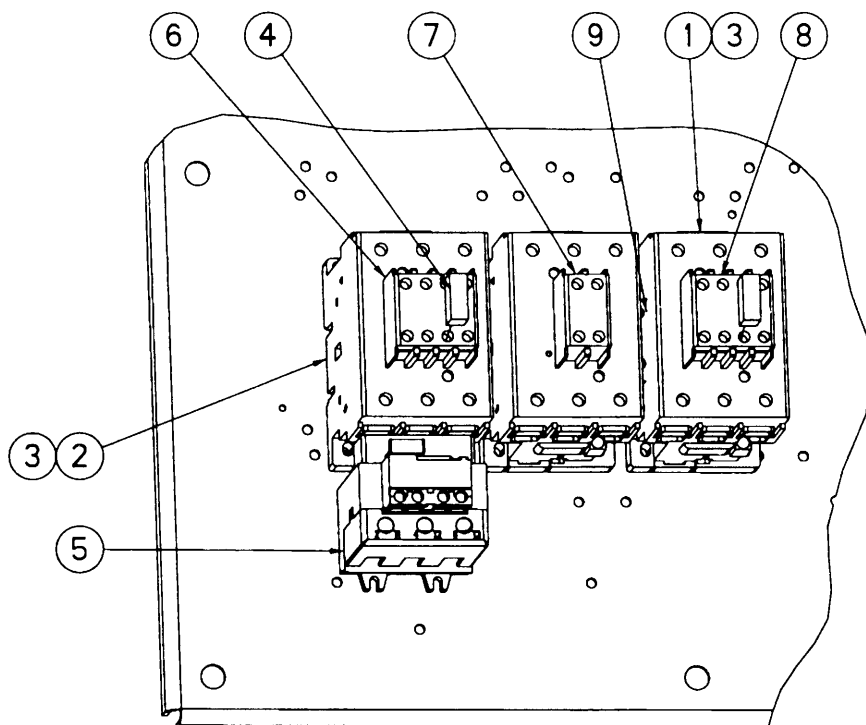

STARTER, C72 W/ C60 IS STAR-DELTA IEC


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251004	1	CONTACTOR, 60 AMP
2	39251012	2	CONTACTOR, 72 AMP
3	39251335	3	COIL, CONTACTOR
4	39203443	2	ARC SUPPRESSOR
5	39251087	1	RELAY, OVER LOAD
6	39251129	1	SWITCH, AUXILIARY (4) NO
7	39251137	1	SWITCH, AUXILIARY (1) NO (1) NC
8	39251145	1	SWITCH, AUXILIARY (2) NO (2) NC
9	39251186	1	INTERLOCK, MECHANICAL

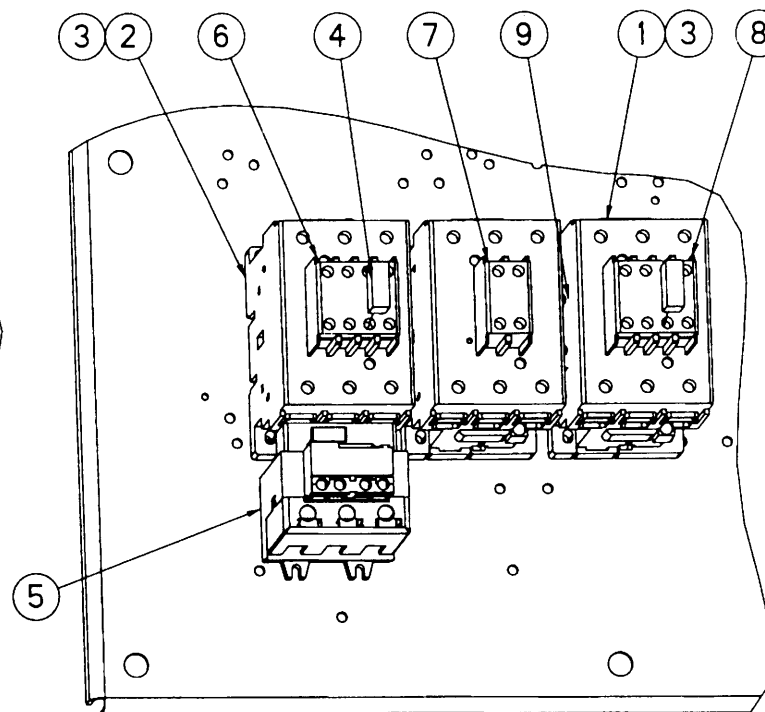

STARTER, C85 W/ C60 IS STAR-DELTA IEC


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251004	1	CONTACTOR, 60 AMP
2	39251020	2	CONTACTOR, 85 AMP
3	39251335	3	COIL, CONTACTOR
4	39203443	2	ARC SUPPRESSOR
5	39251087	1	RELAY, OVER LOAD
6	39251129	1	SWITCH, AUXILIARY (4) NO
7	39251137	1	SWITCH, AUXILIARY (1) NO (1) NC
8	39251145	1	SWITCH, AUXILIARY (2) NO (2) NC
9	39251186	1	INTERLOCK, MECHANICAL

DRWG NAME	REV
39258306	01

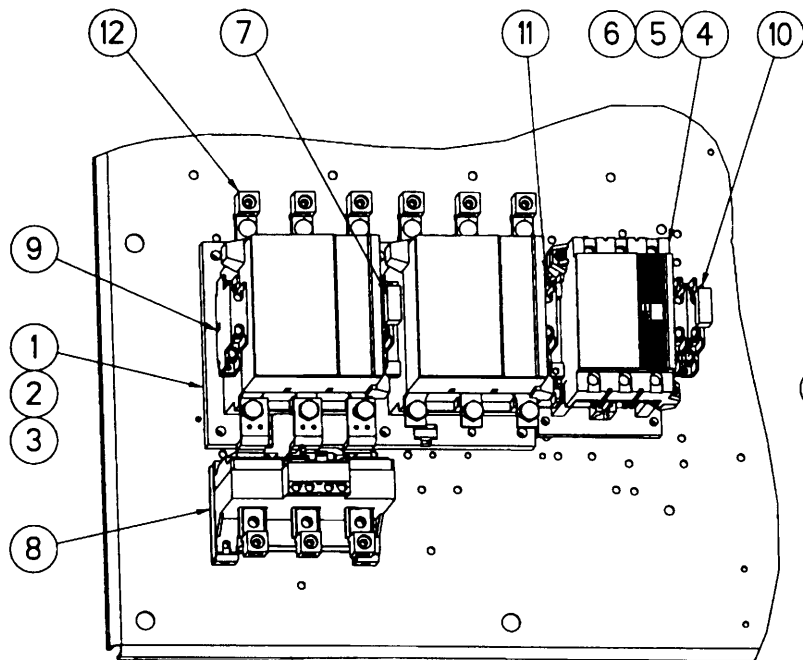


STARTER, B110 W/ A75 IS STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251038	2	CONTACTOR, 110 AMP W/(1) N/O CONTACT
2	39251350	2	COIL, CONTACTOR
3	39251392	2	KIT, CONTACT
4	39251525	1	CONTACTOR, 75 AMP W/(1) N/O CONTACT
5	39251343	1	COIL, CONTACTOR
6	39251384	1	KIT, CONTACT
7	39203443	2	ARC SUPPRESSOR
8	39251095	1	RELAY, OVER LOAD
9	39251160	1	SWITCH, AUXILIARY (2) NO
10	39251178	1	SWITCH, AUXILIARY (1) NO (1) NC
11	39251194	1	INTERLOCK, MECHANICAL
12	39251434	9	LUG

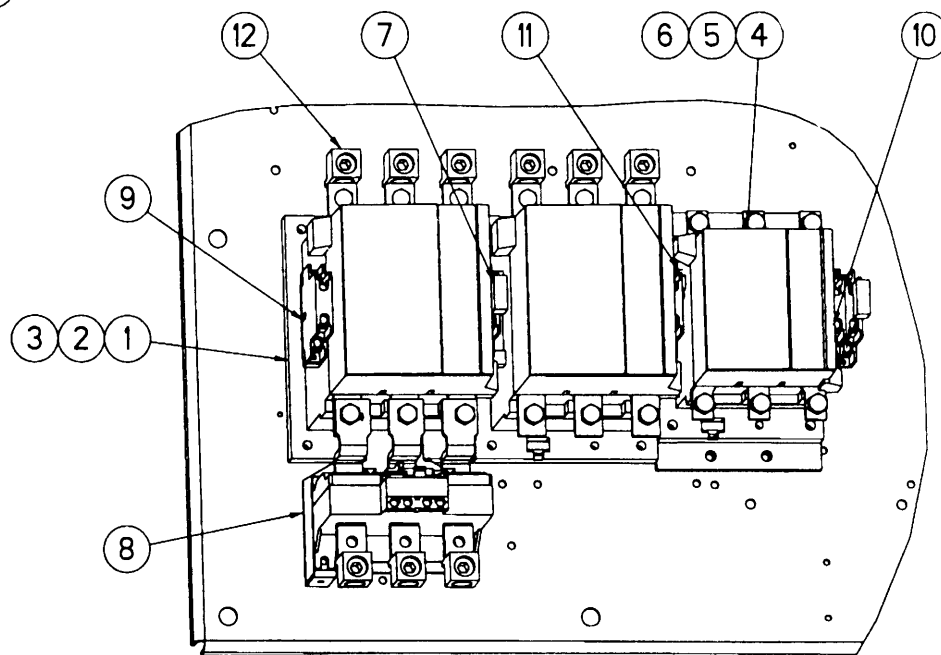

STARTER, B180 W/ B110 IS STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251046	2	CONTACTOR, 180 AMP W/(1) N/O CONTACT
2	39251368	2	COIL, CONTACTOR
3	39251400	2	KIT, CONTACT
4	39251038	1	CONTACTOR, 110 AMP W/(1) N/O CONTACT
5	39251350	1	COIL, CONTACTOR
6	39251392	1	KIT, CONTACT
7	39203443	2	ARC SUPPRESSOR
8	39251103	1	RELAY, OVER LOAD
9	39251160	1	SWITCH, AUXILIARY (2) NO
10	39251178	1	SWITCH, AUXILIARY (1) NO (1) NC
11	39251194	1	INTERLOCK, MECHANICAL
12	39251442	9	LUG

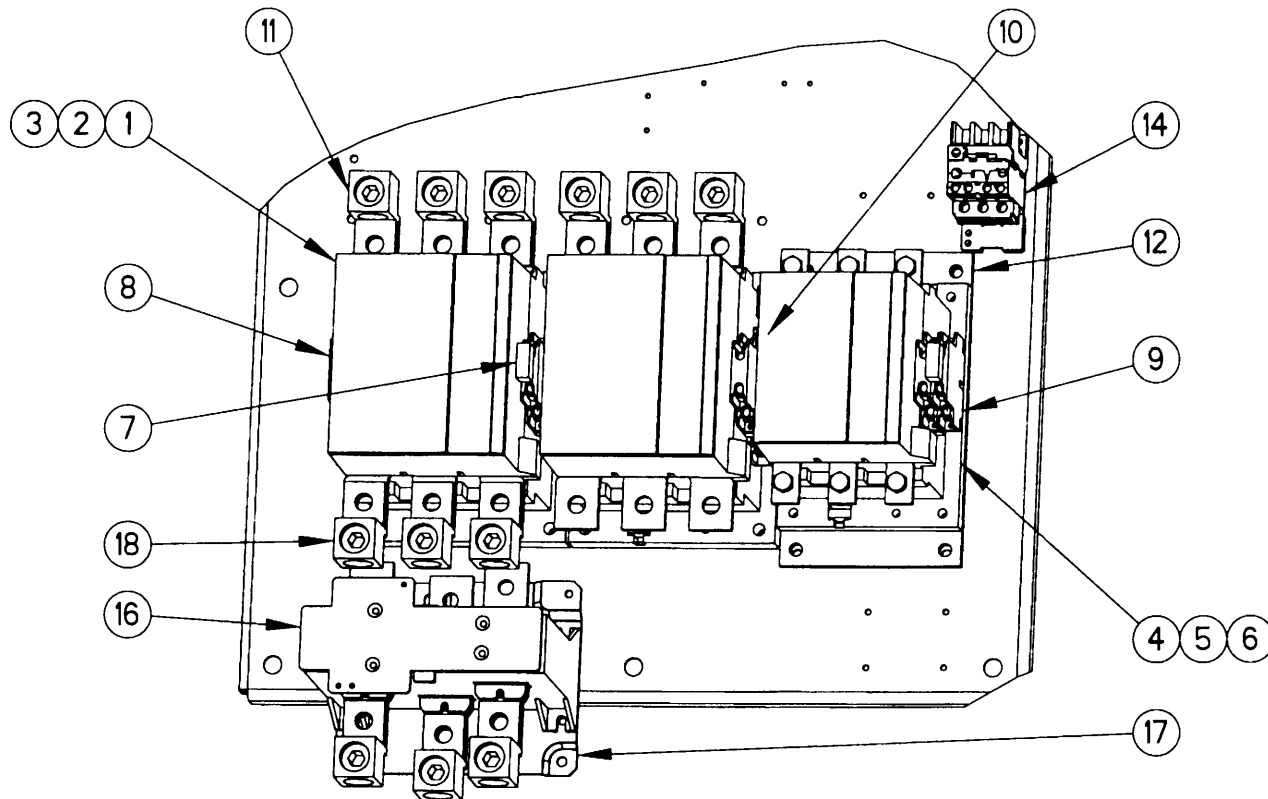


STARTER, B250 W/ B180 1S STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39251053	2	CONTACTOR, 250 AMP W/(1) NO CONTACT
2	39251376	2	COIL, CONTACTOR
3	39251418	2	KIT, CONTACT
4	39251046	1	CONTACTOR, 180 AMP W/(1) N/O CONTACT
5	39251368	1	COIL, CONTACTOR
6	39251400	1	KIT, CONTACT
7	39203443	2	ARC SUPPRESSOR
8	39251160	1	SWITCH, AUXILIARY (2) NO
9	39251178	1	SWITCH, AUXILIARY (1) NO (1) NC
10	39251194	1	INTERLOCK, MECHANICAL

STARTER, B250 W/ B180 1S STAR-DELTA IEC

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
11	39251459	9	LUG
12	39251921	1	PLATE, ADAPTER
13	39253133	4	SPACER, MOUNTING PLATE
14	39253158	1	RELAY, OVER LOAD
15	39253166	1	ADAPTER, OVERLOAD RELAY
16	39253174	1	TRANSFORMER, CURRENT
17	39253182	1	PLATE, MOUNTING
18	39253190	3	LUG

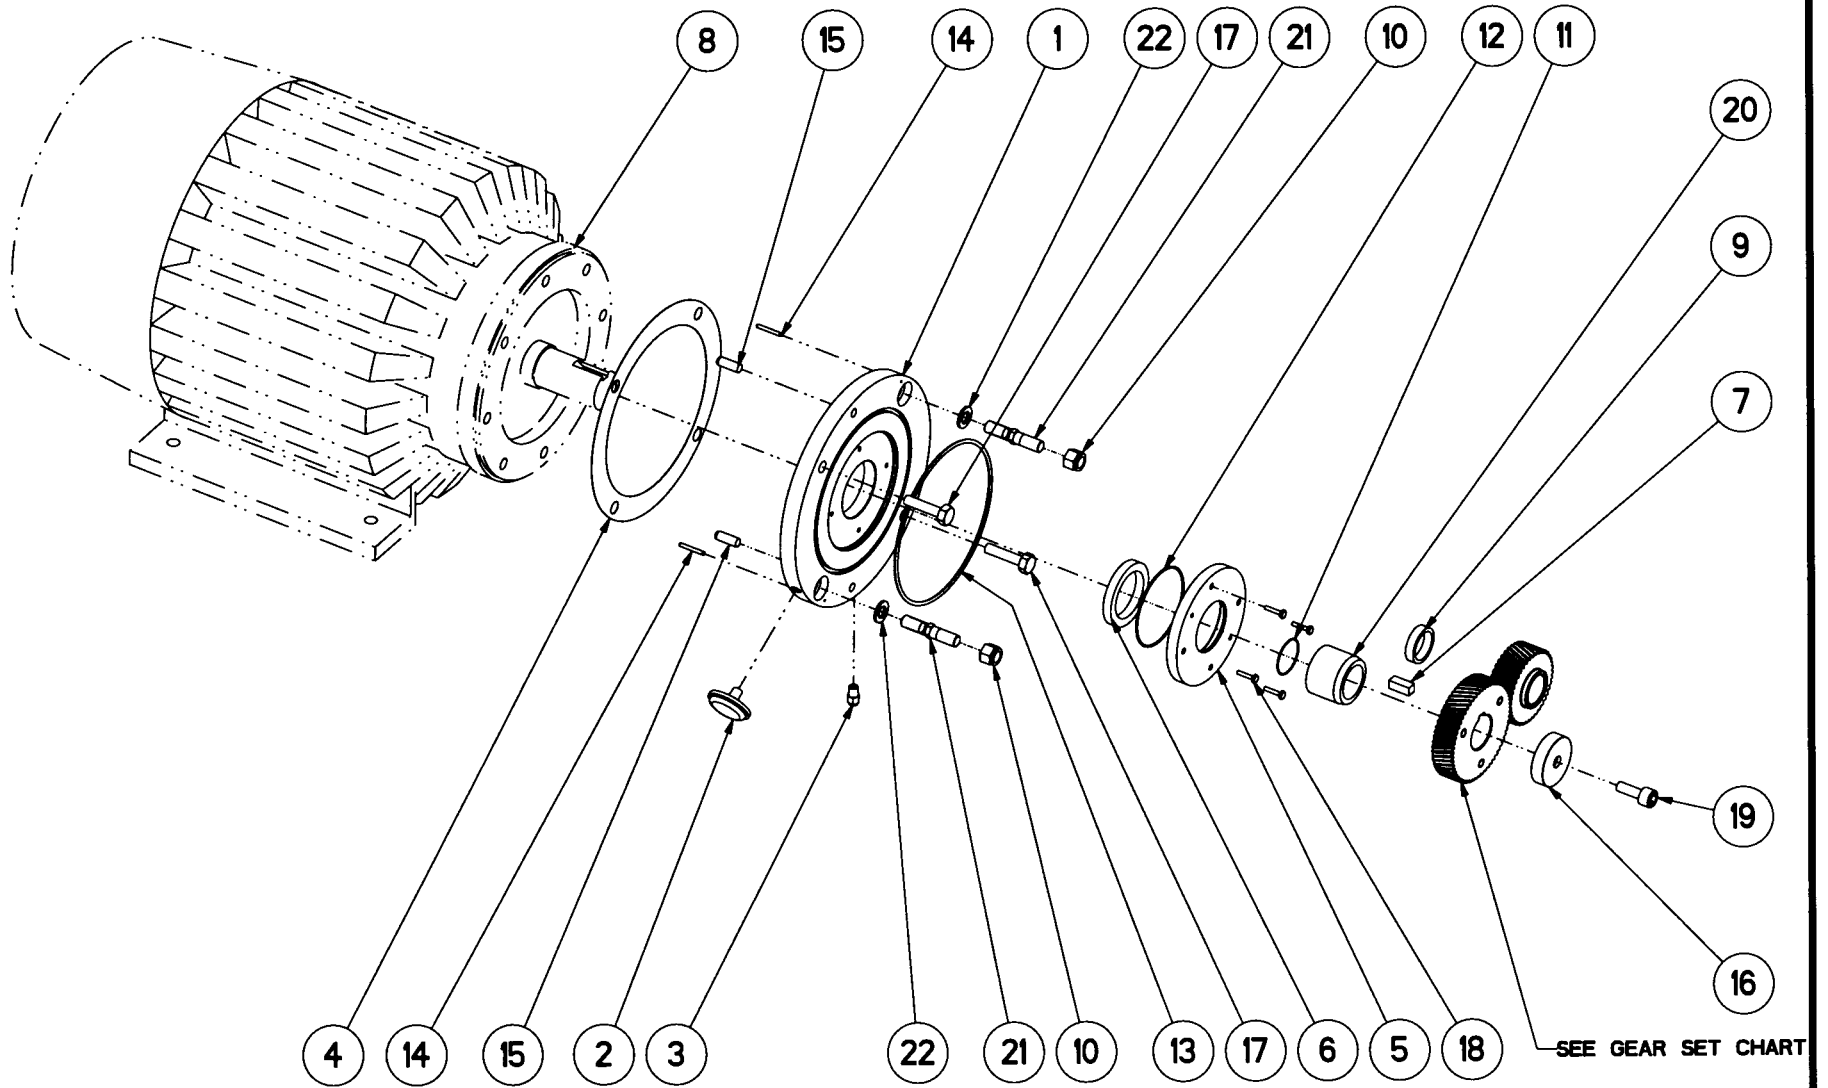


ASSEMBLY, 50-60HP MOTOR/GEAR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39860846	1	ADAPTER, MOTOR
2	39111893	1	BREATHER, FILTER
3	39156435	1	CONNECTOR
4	39457411	1	GASKET, MOTOR
5	88142427	1	HOUSING, SEAL
6	88142450	1	HOUSING, SEAL
7	95410734	1	KEY, SQUARE BOTH ENDS
8	-	1	MOTOR, DRIVE
9	88143664	1	NUT
10	95923355	2	NUT, HEX LIGHT SELF-LOCKING
11	95061024	1	ORING, STANDARD -032
12	95023107	1	ORING, STANDARD -156
13	95656294	1	ORING, STANDARD -372
14	95481859	2	PIN, DOWEL HARDENED GROUND MACHINE
15	95239927	2	PIN, PARALLEL (DOWEL), HARDENED
16	54396122	1	RING, GEAR RETAINER
17	95934519	2	SCREW, CAP HEX HEAD
18	96702246	4	SCREW, HEX HEAD
19	95929170	1	SCREW, SOCKET HEAD CAP
20	54396114	1	SLEEVE, SHAFT
21	54420385	2	STANDOFF, MOTOR ADAPTER
22	96705645	2	WASHER, PRODUCT

GEAR SETS

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
-	54403837	1	GEAR SET 1.167 RATIO HPE50
-	54403829	1	GEAR SET 1.213 RATIO EP50
-	54403811	1	GEAR SET 1.311 RATIO XFE50
-	54403902	1	GEAR SET 1.364 RATIO HP60
-	54403894	1	GEAR SET 1.419 RATIO EP60
-	54403886	1	GEAR SET 1.537 RATIO XF60

*** FURNISH MOTOR PART NUMBER WHEN ORDERING REPLACEMENT


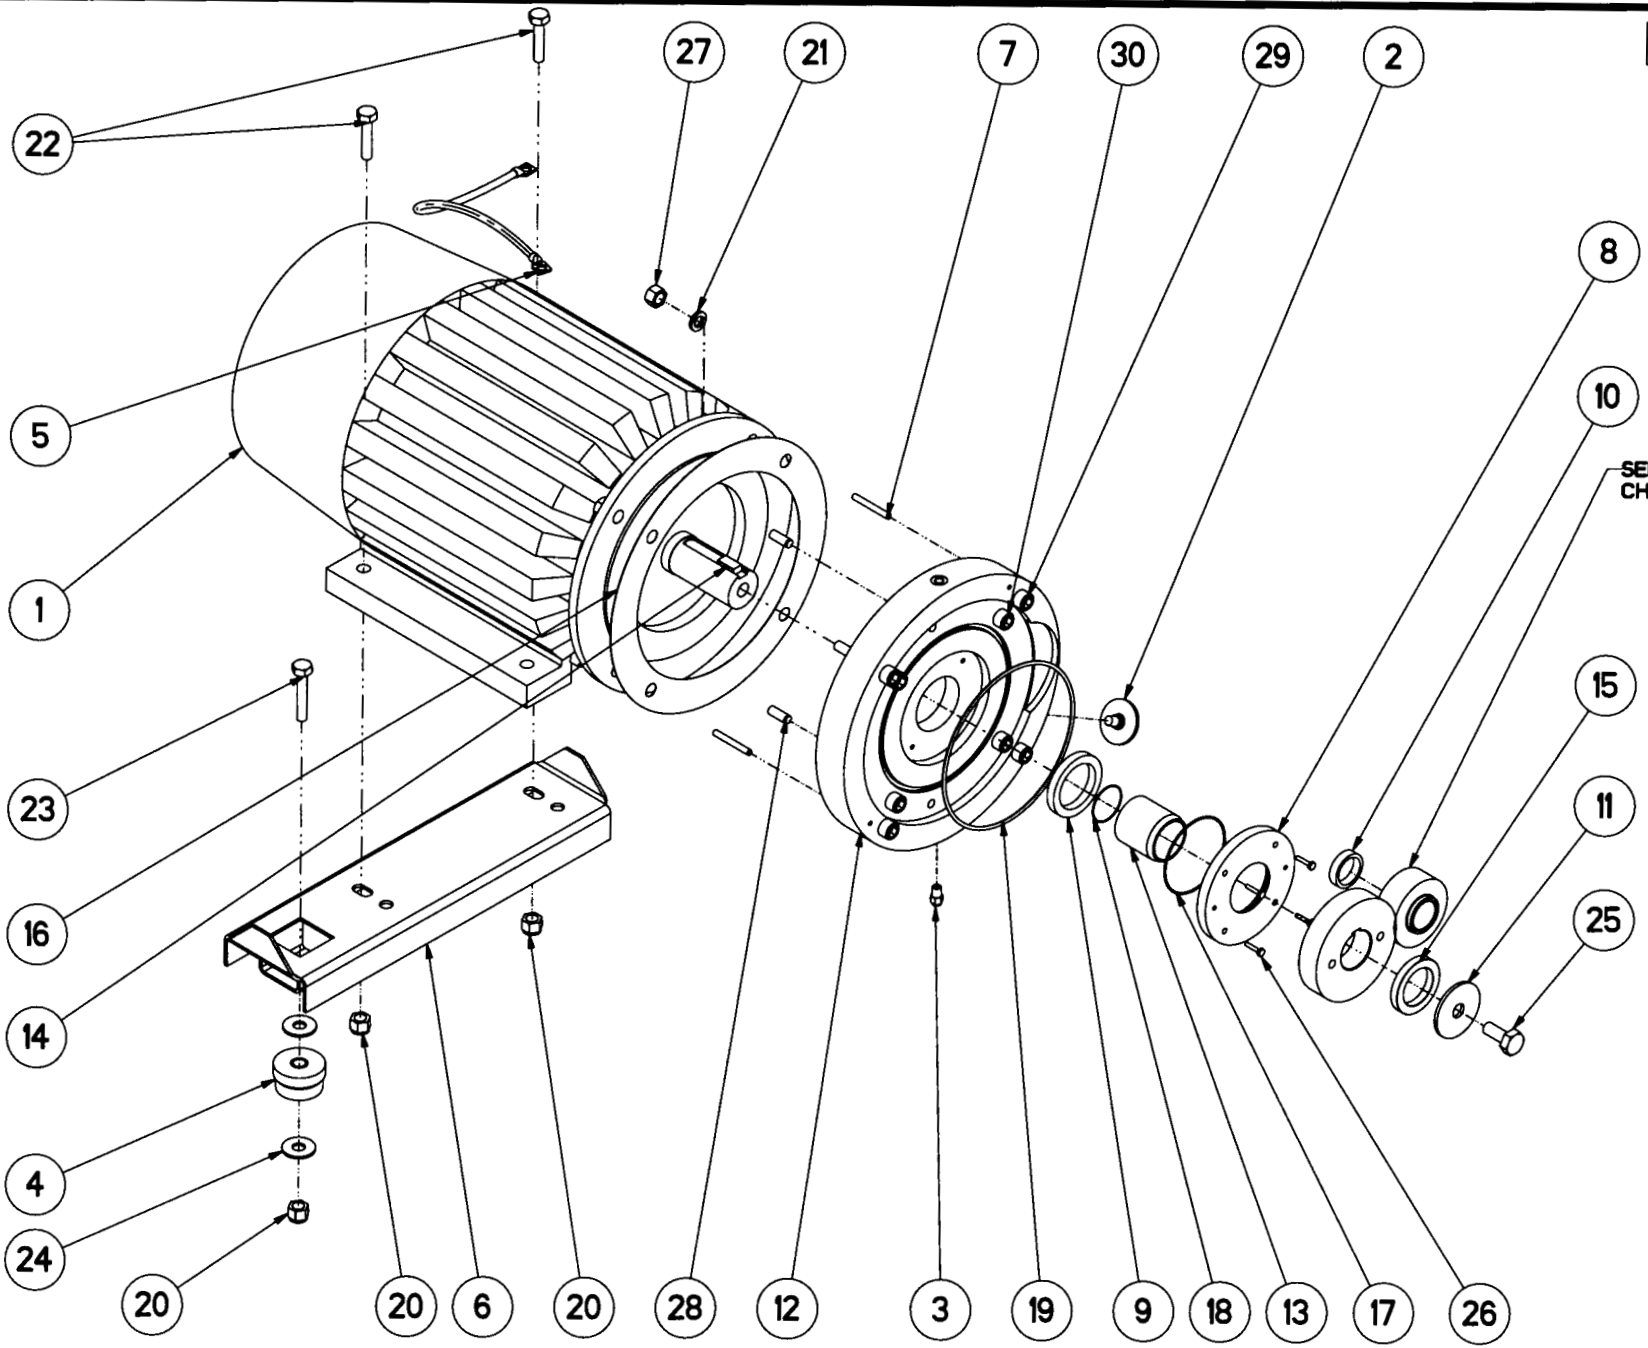


SEE GEAR SET
CHART

ASSEMBLY, 37-45KW MOTOR/GEAR			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	-	1	MOTOR, DRIVE
2	39111893	1	BREATHER, FILTER
3	39156435	1	CONNECTOR,
4	39326210	1	MOUNT, CENTER BONDED
5	39479860	1	STRAP, GROUNDING
6	54415245	1	SUPPORT, MOTOR
7	88115977	2	DOWEL, PIN
8	88142427	1	HOUSING, SEAL
9	88142450	1	HOUSING, SEAL
10	88143664	1	NUT
11	92898147	1	PLATE, RETAINING
12	93472215	1	ADAPTER, PLATE
13	93481331	1	SLEEVE, SHAFT
14	93481349	1	KEY, DRIVE, 16 X 10
15	93481356	1	RING, RETAINING
16	93481364	1	GASKET, SEAL
17	95023107	1	ORING, STANDARD -156
18	95070272	1	ORING, STANDARD -033
19	95720272	1	ORING, STANDARD -374
20	95923355	3	NUT, HEX LIGHT SELF-LOCKING
21	95929188	4	WASHER, LOCK
22	95934154	2	SCREW, CAP HEX HEAD
23	95934170	1	SCREW, CAP HEX HEAD
24	95947651	2	WASHER, PLAIN TYPE A
25	96700901	1	SCREW, HEX HEAD
26	96702246	4	SCREW, HEX HEAD
27	96711882	4	NUT, HEX STYLE 1
28	96739743	2	PIN, PARALLEL (DOWEL), HARDENED
29	96739834	4	SCREW, SOCKET HEAD
30	96739966	4	SCREW, SOCKET HEAD

*** FURNISH MOTOR PART NUMBER WHEN ORDERING REPLACEMENT


GEAR SETS			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	88101936	1	GEAR SET 1.53658 RATIO ML37
2	88101944	1	GEAR SET 1.3636 RATIO MH37
3	88101985	1	GEAR SET 1.8108 RATIO ML45
4	88115647	1	GEAR SET 1.600 RATIO MH45
5	88115720	1	GEAR SET 1.476 RATIO MM37
6	88115746	1	GEAR SET 1.737 RATIO MM45

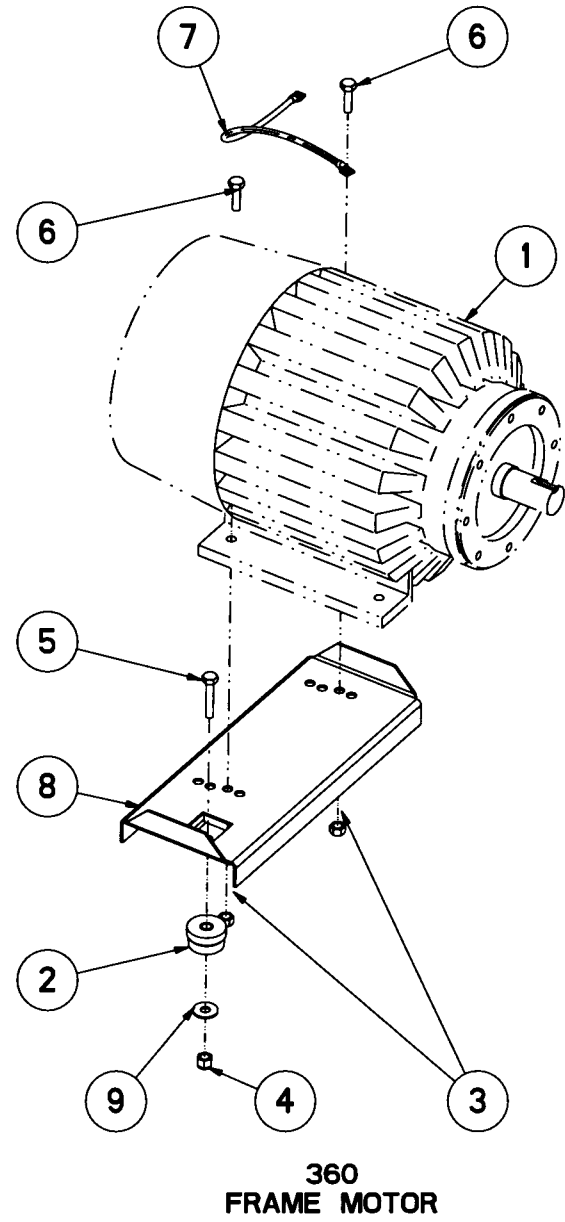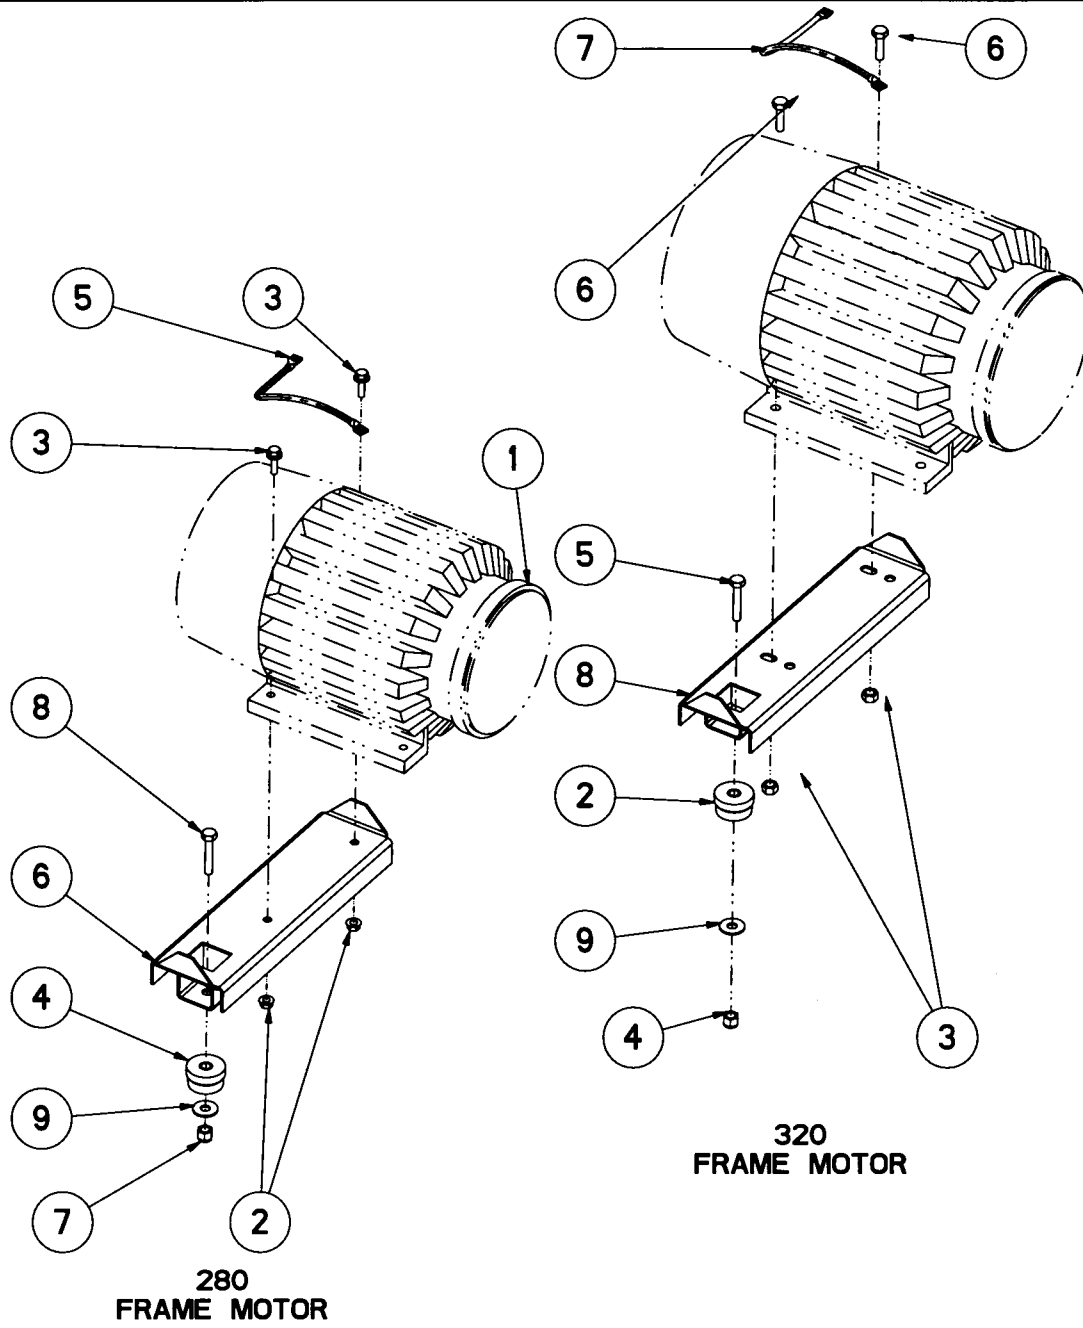

280 FRAME MOTOR & SUPPORT			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	-	1	MOTOR, DRIVE
2	39116348	2	NUT, FLANGE
3	39128517	2	SCREW, WHIZ LOCK
4	39326210	1	MOUNT, CENTER BONDED
5	39479860	1	STRAP, GROUNDING
6	39899943	1	SUPPORT, MOTOR
7	95923355	1	NUT, HEX LIGHT SELF-LOCKING
8	95934170	1	SCREW, CAP HEX HEAD
9	95947651	1	WASHER, PLAIN TYPE A

360 FRAME MOTOR & SUPPORT			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	-	1	MOTOR, DRIVE
2	39326210	1	MOUNT, CENTER BONDED
3	95923355	2	NUT, HEX
4	95923355	1	NUT, HEX LIGHT SELF-LOCKING
5	95934170	1	SCREW, CAP HEX HEAD
6	95930723	2	SCREW, HEX HEAD
7	39479860	1	STRAP, GROUNDING
8	39899927	1	SUPPORT, MOTOR
9	95947651	1	WASHER, PLAIN TYPE A

320 FRAME MOTOR & SUPPORT			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	-	1	MOTOR, DRIVE
2	39326210	1	MOUNT, CENTER BONDED
3	95923355	2	NUT, HEX
4	95923355	1	NUT, HEX LIGHT SELF-LOCKING
5	95934170	1	SCREW, CAP HEX HEAD
6	95930723	2	SCREW, HEX HEAD
7	39479860	1	STRAP, GROUNDING
8	54415245	1	SUPPORT, MOTOR
9	95947651	1	WASHER, PLAIN TYPE A

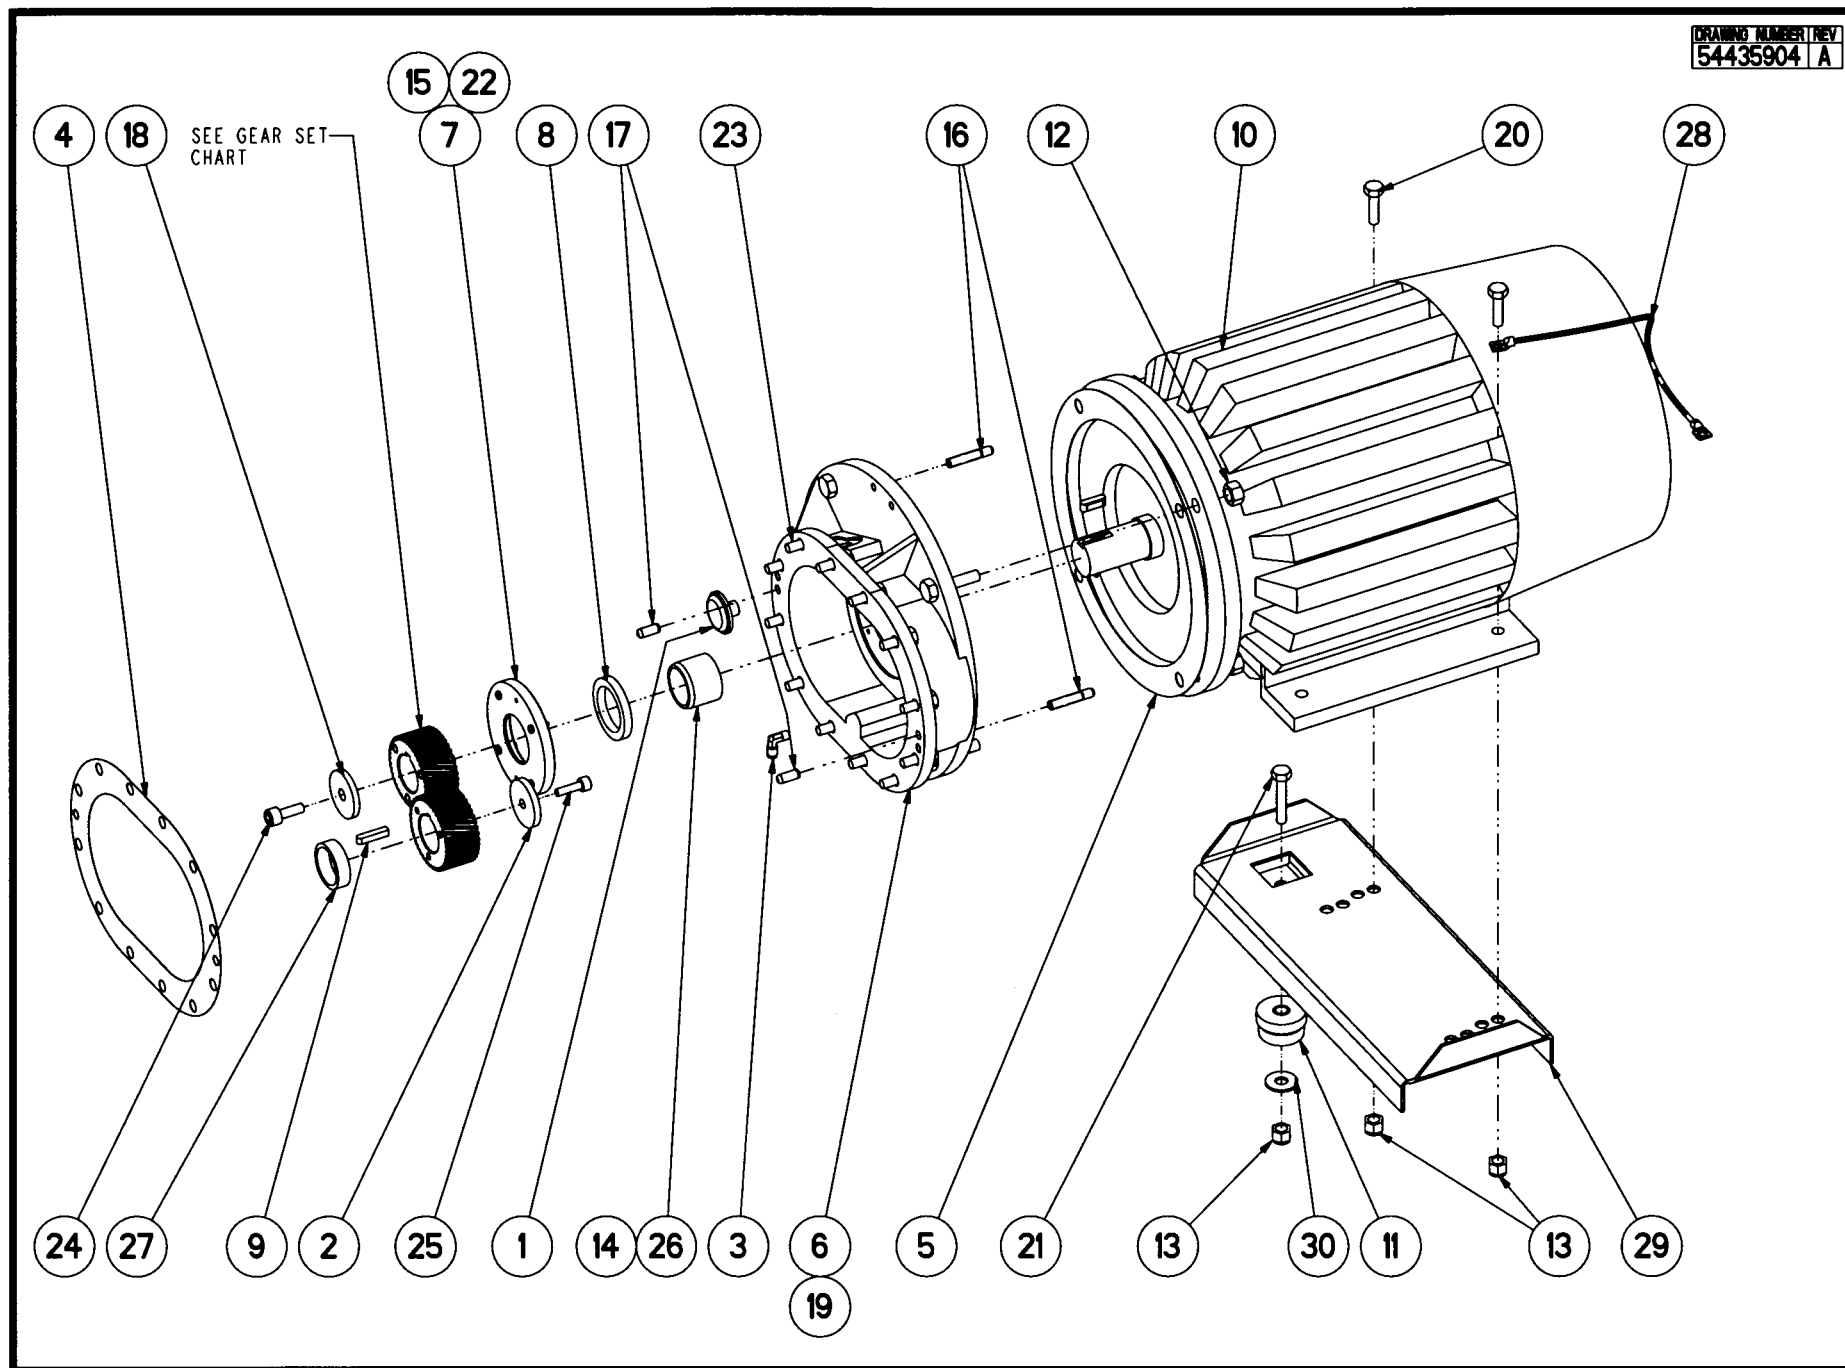


ASSEMBLY, 75HP MOTOR/GEAR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39112362	1	BREATHER, FILTER
2	35255827	1	CLAMP, GEAR
3	39155478	1	ELBOW, .25 NPT X .25 TUBE
4	39437637	1	GASKET, GEAR CASE
5	35258573	1	GASKET, GEARCASE MOTOR
6	39791744	1	GEARCASE, 364/365 FRAME
7	88142427	1	HOUSING, SEAL CF90
8	88142450	1	HOUSING, SEAL CF90
9	95381109	1	KEY, SQUARE .38 X .38 X 1.88 NONE
10	-	1	MOTOR, DRIVE 365TSD TEFCT TYPE
11	35318229	1	MOUNT
12	95922928	4	NUT, HEX FINISHED .75 UNC-2B
13	95923355	3	NUT, HEX LIGHT SELF-LOCKING .63-11UNC
14	95070611	1	ORING, STANDARD -034 2.125 ID X 2.062 WIDTH
15	95023107	1	ORING, STANDARD -156 4.250 ID X 4.094 WIDTH
16	39194915	2	PIN, DOWEL
17	95239919	2	PIN, DOWEL HARDENED GROUND MACHINE .1.50 DIA. X 1.25
18	39109129	1	PLATE, RETAINER
19	95929097	4	SCREW, CAP HEX HEAD .75 X 2.75 LONG
20	95930723	2	SCREW, CAP HEX HEAD .63 X 2.00 LONG
21	95934170	1	SCREW, CAP HEX HEAD .63 X 3.00 LONG
22	96702246	4	SCREW, HEX HEAD M6 X 25.0 LONG
23	96702337	12	SCREW, HEX HEAD M16 X 40.0 LONG
24	95013785	1	SCREW, SOCKET HEAD CAP .63 X 1.50 LONG
25	95929162	1	SCREW, SOCKET HEAD CAP .50 X 1.50 LONG
26	54429782	1	SLEEVE, SHAFT, 178 60HZ
27	35262716	1	SPACER, BEARING
28	39479860	1	STRAP, GROUND
29	39899927	1	SUPPORT, MOTOR 360 FRAME MOTOR
30	95947651	1	WASHER, PLAIN TYPE A FLAT WIDE, .63

GEAR SETS

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39109533	1	GEAR SET HP75
2	39761770	1	GEAR SET EP75
3	39829262	1	GEAR SET XP75
4	39868260	1	GEAR SET XF75

*** FURNISH MOTOR PART NUMBER WHEN ORDERING REPLACEMENT

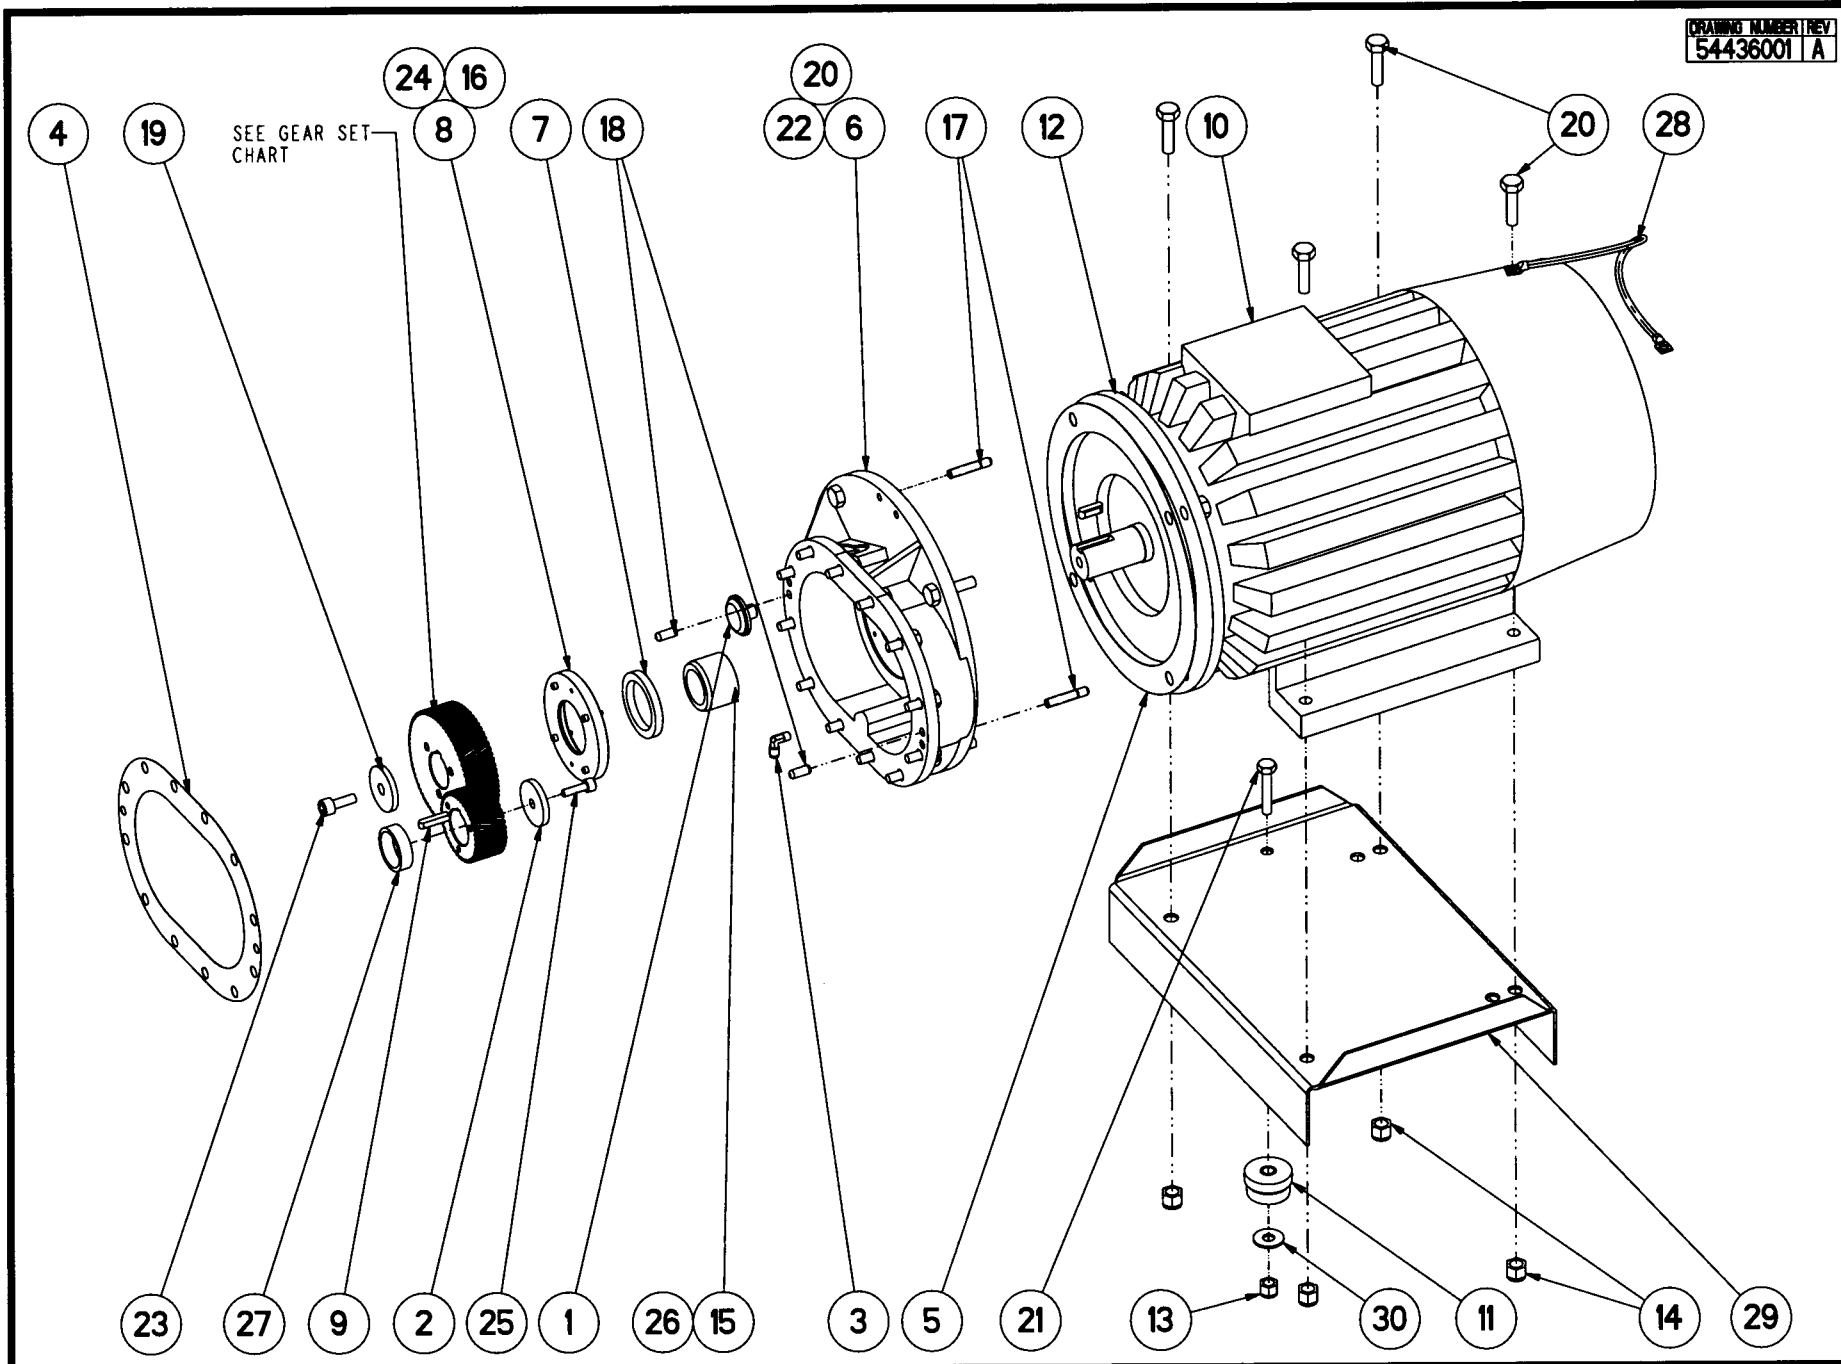


ASSEMBLY, 55KW MOTOR/GEAR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39112362	1	BREATHER, FILTER
2	35255827	1	CLAMP, GEAR
3	39155478	1	ELBOW, .25 NPT X .25 TUBE
4	39437637	1	GASKET, GEAR CASE
5	35258573	1	GASKET, GEARCASE MOTOR
6	39791744	1	GEARCASE, 364/365 FRAME
7	89244024	1	HOUSING, SEAL CF90
8	89244040	1	HOUSING, SEAL CF90
9	95381109	1	KEY, SQUARE .38 X .38 X 1.88 NONE
10	-	1	MOTOR, DRIVE TEFCT TYPE
11	35318229	1	MOUNT
12	95922928	4	NUT, HEX FINISHED .75 UNC-2B
13	95923355	1	NUT, HEX LIGHT SELF-LOCKING .63-11UNC
14	95923363	4	NUT, HEX LIGHT SELF-LOCKING .75-10UNC
15	95070611	1	ORING, STANDARD -034 2.125 ID X 2.062 WIDTH
16	95023107	1	ORING, STANDARD -156 4.250 ID X 4.094 WIDTH
17	39194915	2	PIN, DOWEL
18	95239919	2	PIN, DOWEL HARDENED GROUND MACHINE .1.50 DIA. X 1.25
19	39109129	1	PLATE, RETAINER
20	95929105	8	SCREW, CAP HEX HEAD .75 X 2.50 LONG
21	95934170	1	SCREW, CAP HEX HEAD .63 X 3.00 LONG
22	96702337	12	SCREW, HEX HEAD M16 X 40.0 LONG
23	95013785	1	SCREW, SOCKET HEAD CAP .63 X 1.50 LONG
24	95929154	4	SCREW, SOCKET HEAD CAP .25 X 1.00 LONG
25	95929162	1	SCREW, SOCKET HEAD CAP .50 X 1.50 LONG
26	89245286	1	SLEEVE, SHAFT, 178 60HZ
27	35262716	1	SPACER, BEARING
28	39479860	1	STRAP, GROUND
29	39899919	1	SUPPORT, MOTOR 400 FRAME MOTOR
30	95947651	1	WASHER, PLAIN TYPE A FLAT WIDE, .63

GEAR SETS

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39109806	1	GEAR SET MH55
2	39752944	1	GEAR SET MM55
3	39756424	1	GEAR SET ML55

*** FURNISH MOTOR PART NUMBER WHEN ORDERING REPLACEMENT

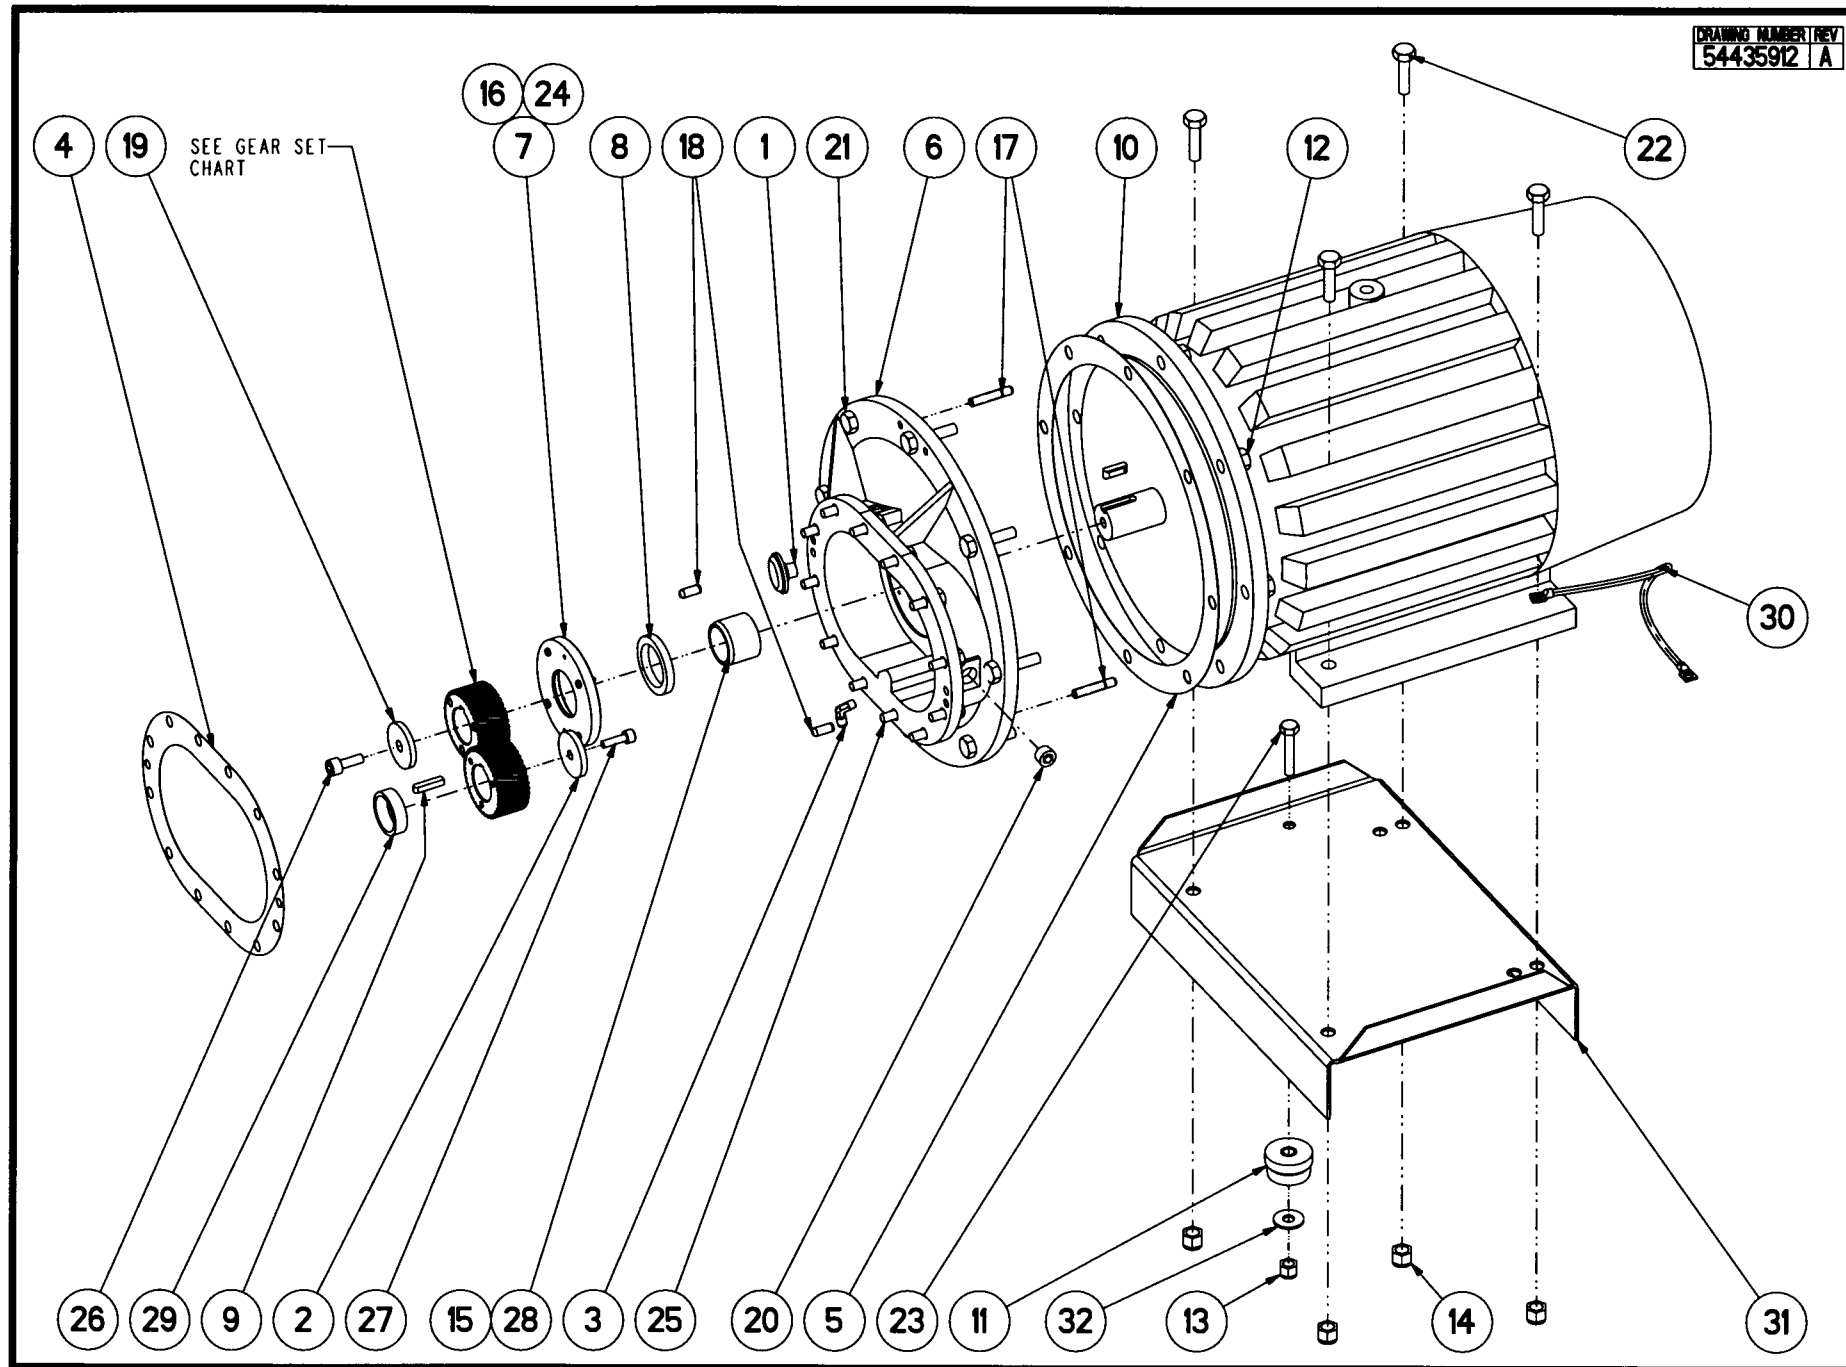


ASSEMBLY, 100HP MOTOR/GEAR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39112362	1	BREATHER, FILTER
2	35255827	1	CLAMP, GEAR
3	39155478	1	ELBOW, .25 NPT X .25 TUBE
4	39437637	1	GASKET, GEAR CASE
5	39454558	1	GASKET, GEARCASE MOTOR
6	39791751	1	GEARCASE, 404/405 FRAME
7	88142427	1	HOUSING, SEAL CF90
8	88142450	1	HOUSING, SEAL CF90
9	95381109	1	KEY, SQUARE .38 X .38 X 1.88 NONE
10	**	1	MOTOR, DRIVE 405TSD TEFCCT,CTE TYPE
11	35318229	1	MOUNT
12	95922928	8	NUT, HEX FINISHED .75 UNC-2B
13	95923355	1	NUT, HEX LIGHT SELF-LOCKING .63-11UNC
14	95923363	4	NUT, HEX LIGHT SELF-LOCKING .75-10UNC
15	95070611	1	ORING, STANDARD -034 2.125 ID X 2.062 WIDTH
16	95023107	1	ORING, STANDARD -156 4.250 ID X 4.094 WIDTH
17	39194915	2	PIN, DOWEL
18	95239919	2	PIN, DOWEL HARDENED GROUND MACHINE .1.50 DIA. X 1.25
19	39109129	1	PLATE, RETAINER
20	95947149	1	PLUG, SOCKET .75 NPT
21	95929097	8	SCREW, CAP HEX HEAD .75 X 2.75 LONG
22	95929105	4	SCREW, CAP HEX HEAD .75 X 2.50 LONG
23	95934170	1	SCREW, CAP HEX HEAD .63 X 3.00 LONG
24	96702246	4	SCREW, HEX HEAD M6 X 25.0 LONG
25	96702337	12	SCREW, HEX HEAD M16 X 40.0 LONG
26	95013785	1	SCREW, SOCKET HEAD CAP .63 X 1.50 LONG
27	95929162	1	SCREW, SOCKET HEAD CAP .50 X 1.50 LONG
28	54429782	1	SLEEVE, SHAFT, 178 60HZ
29	35262716	1	SPACER, BEARING
30	39479860	1	STRAP, GROUND
31	39899919	1	SUPPORT, MOTOR 400 FRAME MOTOR
32	95947651	1	WASHER, PLAIN TYPE A FLAT WIDE, .63

GEAR SETS

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39109814	1	GEAR SET HP100
2	39109848	1	GEAR SET EP100
3	39752928	1	GEAR SET XF100
4	39868260	1	GEAR SET XP100

*** FURNISH MOTOR PART NUMBER WHEN ORDERING REPLACEMENT

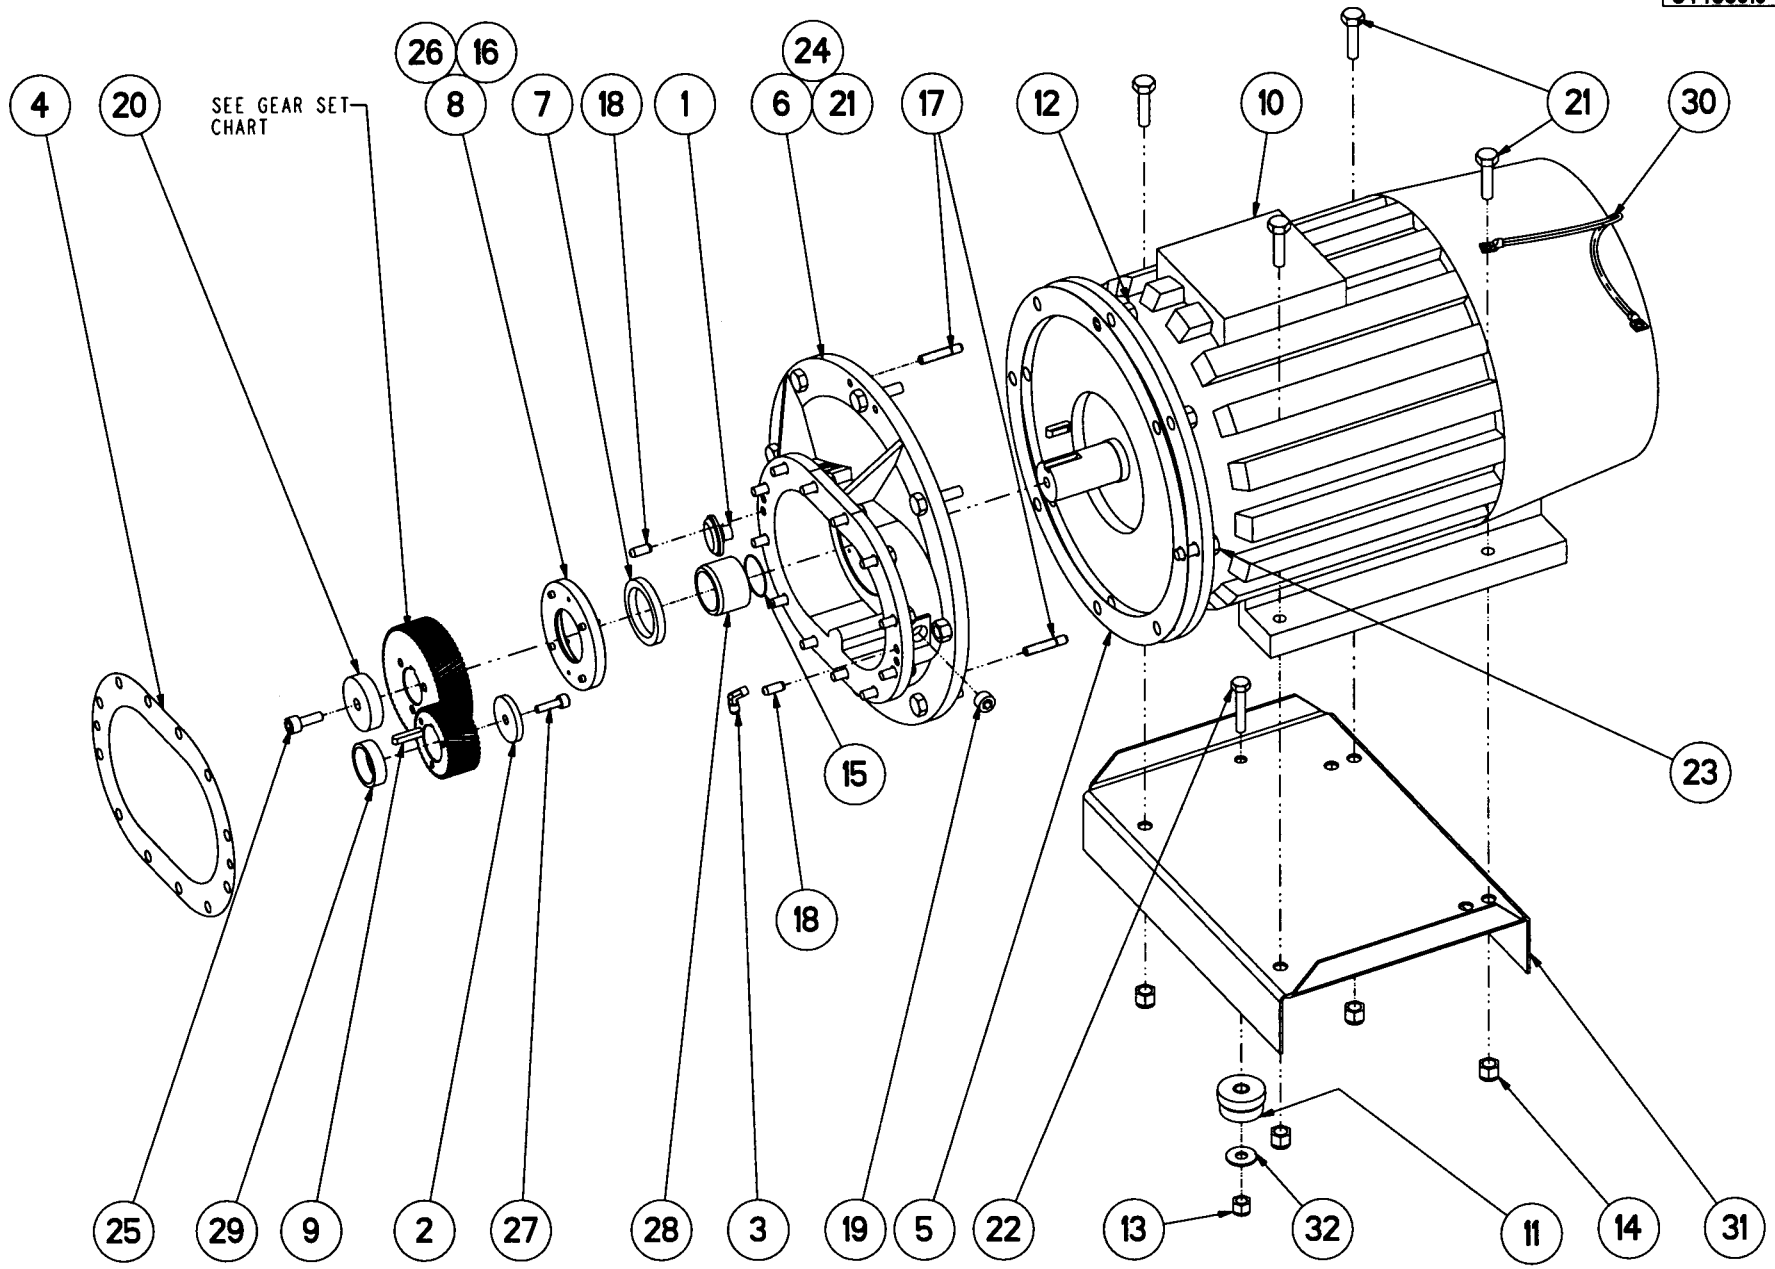


ASSEMBLY, 75KW MOTOR/GEAR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39112362	1	BREATHER, FILTER
2	35255827	1	CLAMP, GEAR
3	39155478	1	ELBOW, .25 NPT X .25 TUBE
4	39437637	1	GASKET, GEAR CASE
5	39454558	1	GASKET, GEARCASE MOTOR
6	39791751	1	GEARCASE, 404/405 FRAME
7	89244024	1	HOUSING, SEAL CF90
8	89244040	1	HOUSING, SEAL CF90
9	95381109	1	KEY, SQUARE .38 X .38 X 1.88 NONE
10	-	1	MOTOR, DRIVE 326TC TEFC TYPE
11	35318229	1	MOUNT
12	95922928	8	NUT, HEX FINISHED .75 UNC-2B
13	95923355	1	NUT, HEX LIGHT SELF-LOCKING .63-11UNC
14	95923363	4	NUT, HEX LIGHT SELF-LOCKING .75-10UNC
15	95069779	1	ORING, STANDARD -036 2.375 ID X 2.062 WIDTH
16	95023107	1	ORING, STANDARD -156 4.250 ID X 4.094 WIDTH
17	39194915	2	PIN, DOWEL
18	95239919	2	PIN, DOWEL HARDENED GROUND MACHINE .1.50 DIA. X 1.25
19	95947149	1	PLUG, SOCKET .75 NPT
20	39404587	1	RETAINER, GEAR
21	95929105	11	SCREW, CAP HEX HEAD .75 X 2.50 LONG
22	95934170	1	SCREW, CAP HEX HEAD .63 X 3.00 LONG
23	95934378	1	SCREW, CAP HEX HEAD .75 X 2.00 LONG
24	96702337	12	SCREW, HEX HEAD M16 X 40.0 LONG
25	95013785	1	SCREW, SOCKET HEAD CAP .63 X 1.50 LONG
26	95929154	4	SCREW, SOCKET HEAD CAP .25 X 1.00 LONG
27	95929162	1	SCREW, SOCKET HEAD CAP .50 X 1.50 LONG
28	89246524	1	SLEEVE, SHAFT, 178 60HZ
29	35262716	1	SPACER, BEARING
30	39479860	1	STRAP, GROUND
31	39899919	1	SUPPORT, MOTOR 400 FRAME MOTOR
32	95947651	1	WASHER, PLAIN TYPE A FLAT WIDE, .63


GEAR SETS

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39104849	1	GEAR SET ML75
2	39109517	1	GEAR SET MM75
3	39753793	1	GEAR SET MH75

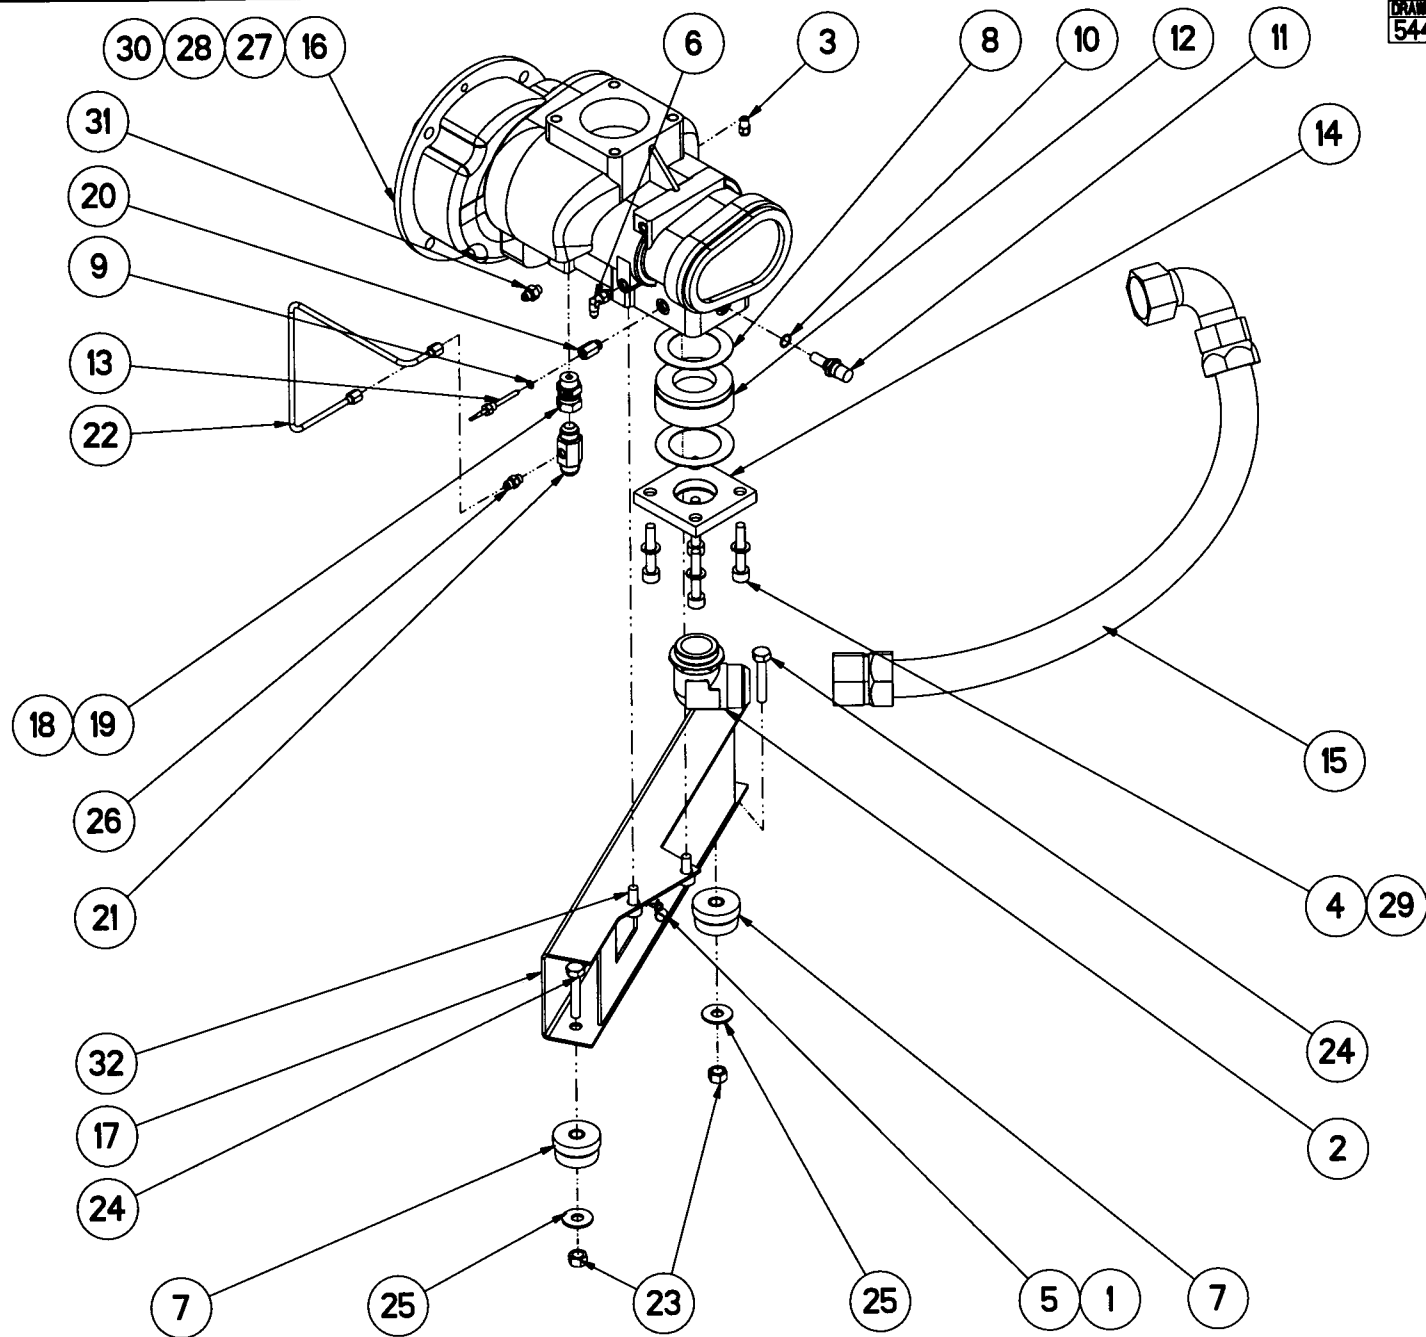

ASSEMBLY, AIREND 50/60HP 37/45KW

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39133145	1	SCREW, WASHER HEAD TAPPING
2	39140512	1	ELBOW,
3	39156435	1	CONNECTOR,
4	39178637	4	SCREW, SOCKET HEAD
5	39206057	1	CLAMP
6	39311618	1	ELBOW
7	39326210	2	MOUNT, CENTER BONDED
8	39326228	2	GASKET, DISCHARGE ELBOW
9	39404157	1	O-RING, ID .351
10	39404165	1	O-RING, ID .644
11	39419668	1	SWITCH, HAT
12	39477674	1	VALVE, CHECK
13	39586227	1	SENSOR, TEMPERATURE
14	54385703	1	PLATE, ADAPTER
15	54385711	1	HOSE, HYDRAULIC
16	54416920	1	AIREND, CF90
17	54418553	1	SUPPORT, AIREND
18	54428313	1	ORIFICE, .277 DIA. 50HP 37KW
19	54441522	1	ORIFICE, .375 DIA. 60HP 45KW
20	54461066	1	ADAPTER, STANDOFF
21	93481562	1	MANIFOLD, INJECTION
22	93481570	1	TUBE
23	95923355	2	NUT, HEX
24	95934170	2	SCREW, HEX HEAD
25	95947651	2	WASHER, PLAIN WIDE TYPE B
26	95989695	1	CONNECTOR,
27	96702170	2	SCREW, SOCKET HEAD
28	96708144	3	SCREW, SOCKET HEAD
29	96721097	4	WASHER, SPRING LOCK,
30	96726328	5	SCREW, SOCKET HEAD
31	96739701	1	CONNECTOR,
32	96739966	2	SCREW, SOCKET HEAD


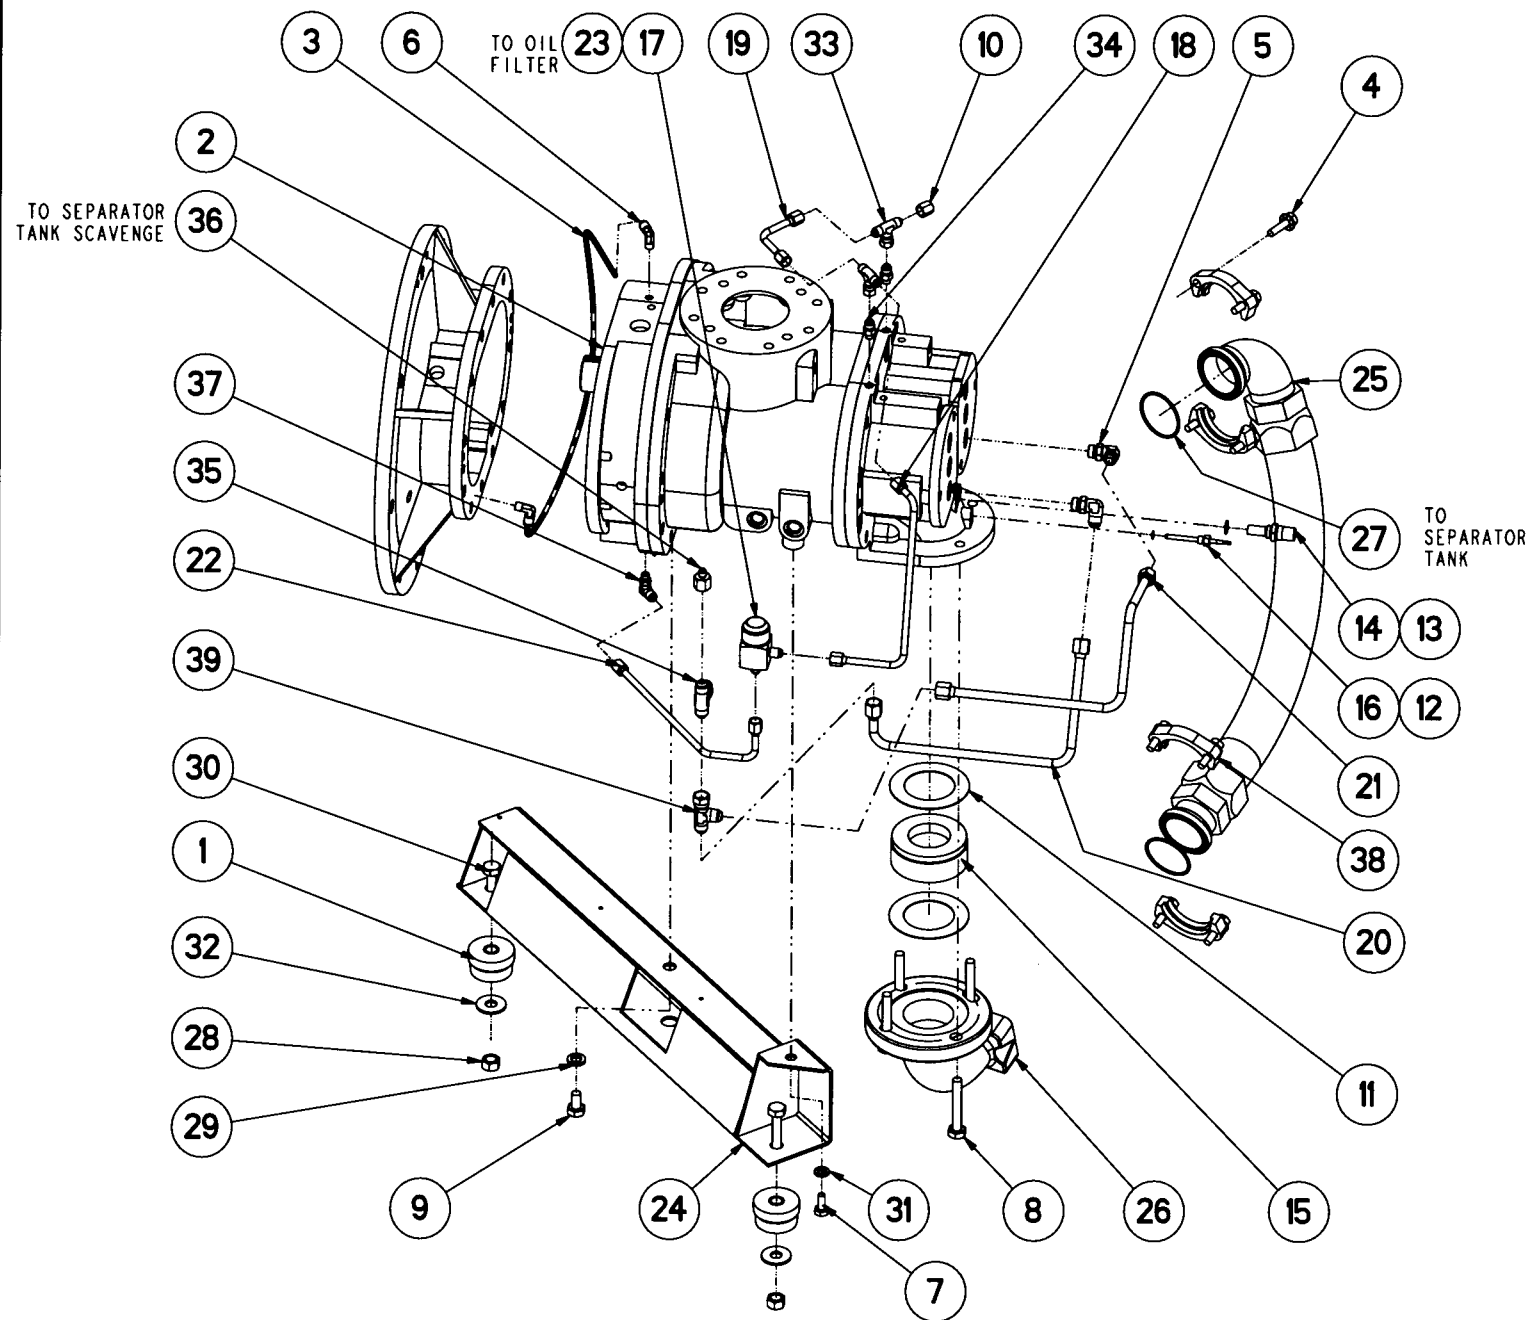


75/100HP 55/75KW AIREND PIPING AND SUPPORT

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	35318229	2	MOUNT
2	36017028	1	ASSEMBLY, AIREND 178MM
3	39124813	1	TUBE, NYLON
4	39128517	8	SCREW, WHIZ LOCK .50 X 1.50 LONG ZINC PLATED
5	39128640	2	ELBOW, .50 TUBE X .75 SAE
6	39155478	2	ELBOW, .25 NPT X .25 TUBE
7	39173463	1	SCREW, HEX HEAD M12 X 25.0 LONG
8	39177159	4	SCREW, HEX HEAD M16 X 90.0 LONG
9	39177886	1	SCREW, HEX HEAD M16 X 25.0 LONG
10	39232566	1	CAP, .38 TUBE
11	39326228	2	GASKET, DISCHARGE ELBOW 178MM AIREND
12	39404157	1	O-RING, ID .351 WIDTH .072
13	39404165	1	O-RING, ID .644 WIDTH .087
14	39419668	1	SWITCH, HAT 245 DEG. F
15	39477674	1	VALVE, CHECK 3 INCH
16	39586227	1	SENSOR, TEMPERATURE THERMISTOR
17	39890371	1	MANIFOLD, OIL INJECTION ORIFICE, .219 (75HP/55KW)
18	39890389	1	TUBE, BEARING FEED
19	39890397	1	TUBE, BEARING FEED
20	39890405	1	TUBE, BEARING SCAVENGE
21	39890413	1	TUBE, BEARING SCAVENGE
22	39890421	1	TUBE, BEARING FEED


75/100HP 55/75KW AIREND PIPING AND SUPPORT

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
23	39890652	2	MANIFOLD, OIL INJECTION ORIFICE, .313 (100HP/75KW)
24	39892443	1	SUPPORT, AIR END 178mm
25	39905450	1	HOSE, HYDRAULIC 2.50 NOMINAL X 33.30 LONG
26	39916739	1	ELBOW, DISCHARGE
27	95028502	2	O-RING, ID 2.75 WIDTH .139
28	95923355	2	NUT, HEX .63
29	95929188	1	WASHER, LOCK EXTRA DUTY .63
30	95934170	2	SCREW, HEX HEAD .63 X 3.00 LONG ZINC
31	95934733	1	WASHER, LOCK EXTRA DUTY .50
32	95947651	2	WASHER, PLAIN WIDE TYPE B .63
33	95959581	2	TEE, BRANCH .38 TUBE X .38 FEMALE TUBE X .38 TUBE
34	95959607	2	CONNECTOR, .38 TUBE X .44 SAE
35	95959615	1	TEE, BRANCH .50 TUBE X .75 SAE X .50 TUBE
36	95959722	1	REDUCER, .50 FEMALE TUBE TO .25 TUBE
37	95959730	1	ELBOW, .38 TUBE X .44 SAE
38	95961496	4	CLAMP, 4 BOLT 2.5 INCH
39	95961629	1	TEE, RUN .50 TUBE X .50 TUBE X .50 FEMALE TUBE

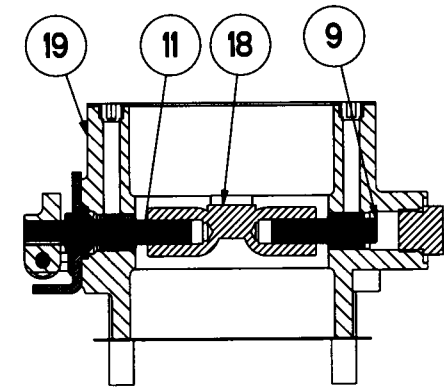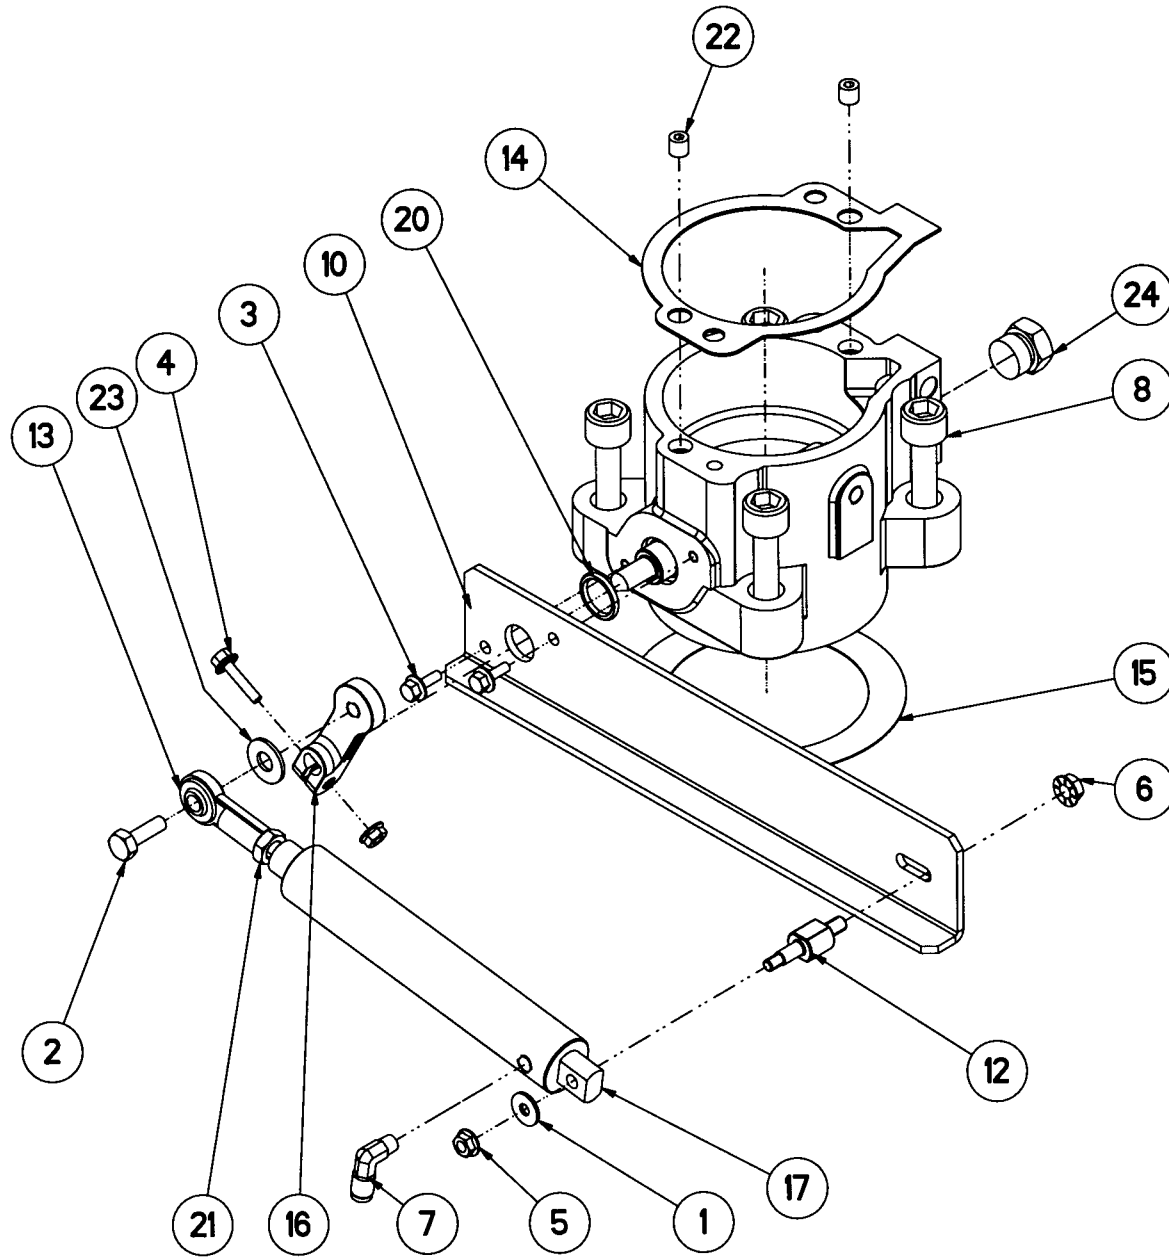


SECTION VIEW


INLET VALVE ASSEMBLY			
REF. NO.	PART NUMBER	QTY	DESCRIPTION
1	35317114	1	WASHER, PLAIN REGULAR M6
2	39128152	1	SCREW, HEX HEAD .38 X 1.00 LONG
3	39128426	2	SCREW, WHIZ LOCK .25 X .63 LONG ZINC PLATED
4	39128434	1	SCREW, WHIZ LOCK .25 X 1.00 LONG ZINC PLATED
5	39128541	2	NUT, WHIZ LOCK .25 ZINC PLATED
6	39128558	1	NUT, WHIZ LOCK .31 ZINC PLATED
7	39155577	1	ELBOW, .13 NPT X .25 TUBE
8	39178637	4	SCREW, SOCKET HEAD M16 X 80.0 LONG
9	39311352	1	SHAFT, INLET VALVE
10	39324884	1	BRACKET, CYLINDER INLET VALVE
11	39324900	1	SHAFT, INLET VALVE
12	39325097	1	SPACER, CYLINDER INLET VALVE
13	39325154	1	ROD, END BEARING
14	39326319	1	GASKET, INLET VALVE
15	39476304	1	GASKET, INLET VALVE TO AIREND
16	39586656	1	ARM, INLET VALVE
17	39589056	1	CYLINDER, PNEUMATIC
18	39851316	1	VALVE, PLATE (MACHINING)
19	39894142	1	HOUSING, VALVE INLET (MACHINING)
20	95022141	1	O-RING, ID .796 WIDTH .139
21	95245288	1	NUT, JAM .44
22	95837233	2	PLUG, SOCKET .13 NPT -
23	95933313	1	WASHER, PLAIN WIDE TYPE B .38
24	95938940	1	PLUG, HEX .88 SAE -

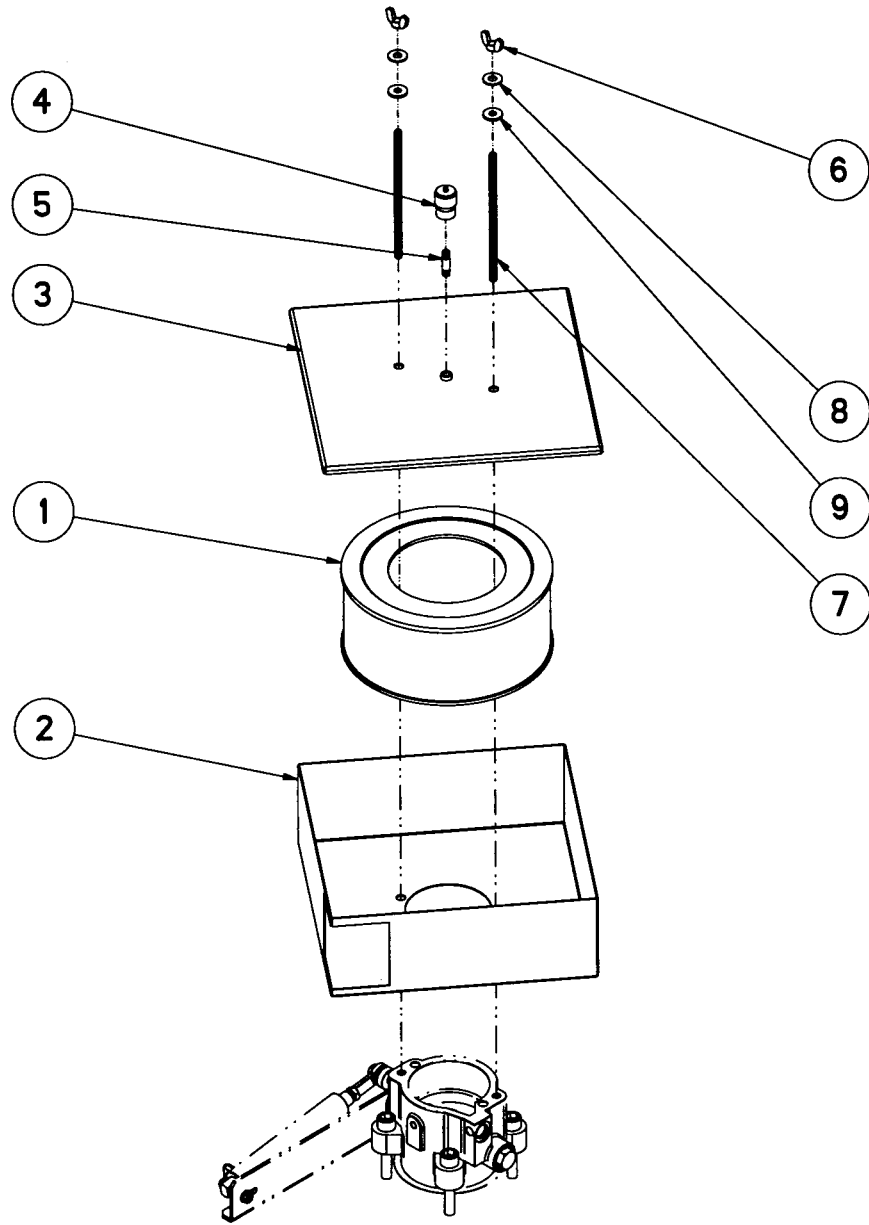

ASSEMBLY, AIR FILTER 50/60HP 37/45KW			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39708466	1	ELEMENT, AIR FILTER
2	39911342	1	HOUSING, AIR FILTER
3	39911359	1	HOUSING, AIR FILTER TOP METAL
4	39124722	1	INDICATOR, AIR FILTER
5	95871828	1	NIPPLE,
6	95938775	2	NUT, WING TYPE A
7	39308978	2	STUD,
8	95933313	2	WASHER, PLAIN TYPE A
9	39195151	2	WASHER, RUBBER

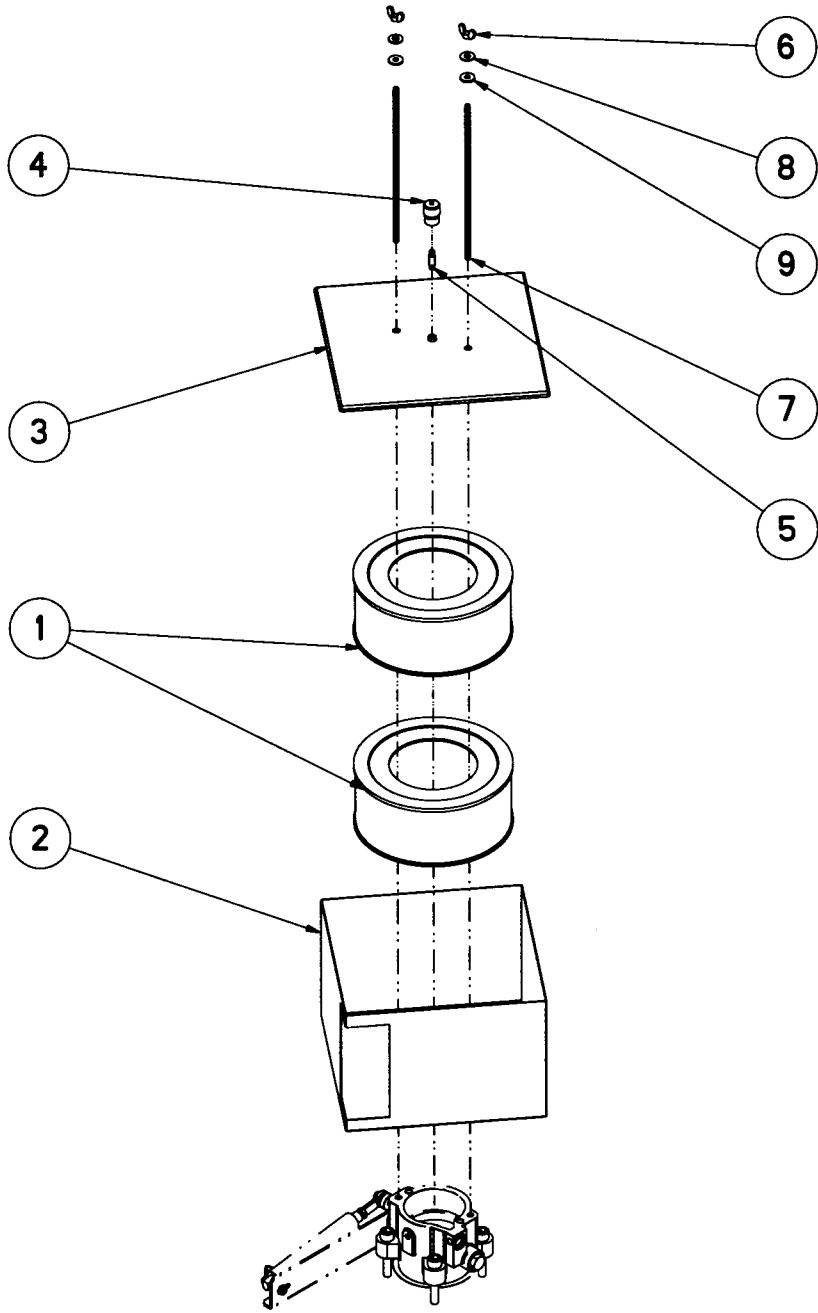


ASSEMBLY, AIR FILTER 75/100HP 55/75KW			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39708466	2	ELEMENT, AIR FILTER
2	39911458	1	HOUSING, AIR FILTER
3	39911359	1	HOUSING, AIR FILTER TOP METAL
4	39124722	1	INDICATOR, AIR FILTER
5	95871828	1	NIPPLE,
6	95938775	2	NUT, WING TYPE A
7	39308960	2	ROD, THREADED
8	95933313	2	WASHER, PLAIN TYPE A
9	39195151	2	WASHER, RUBBER

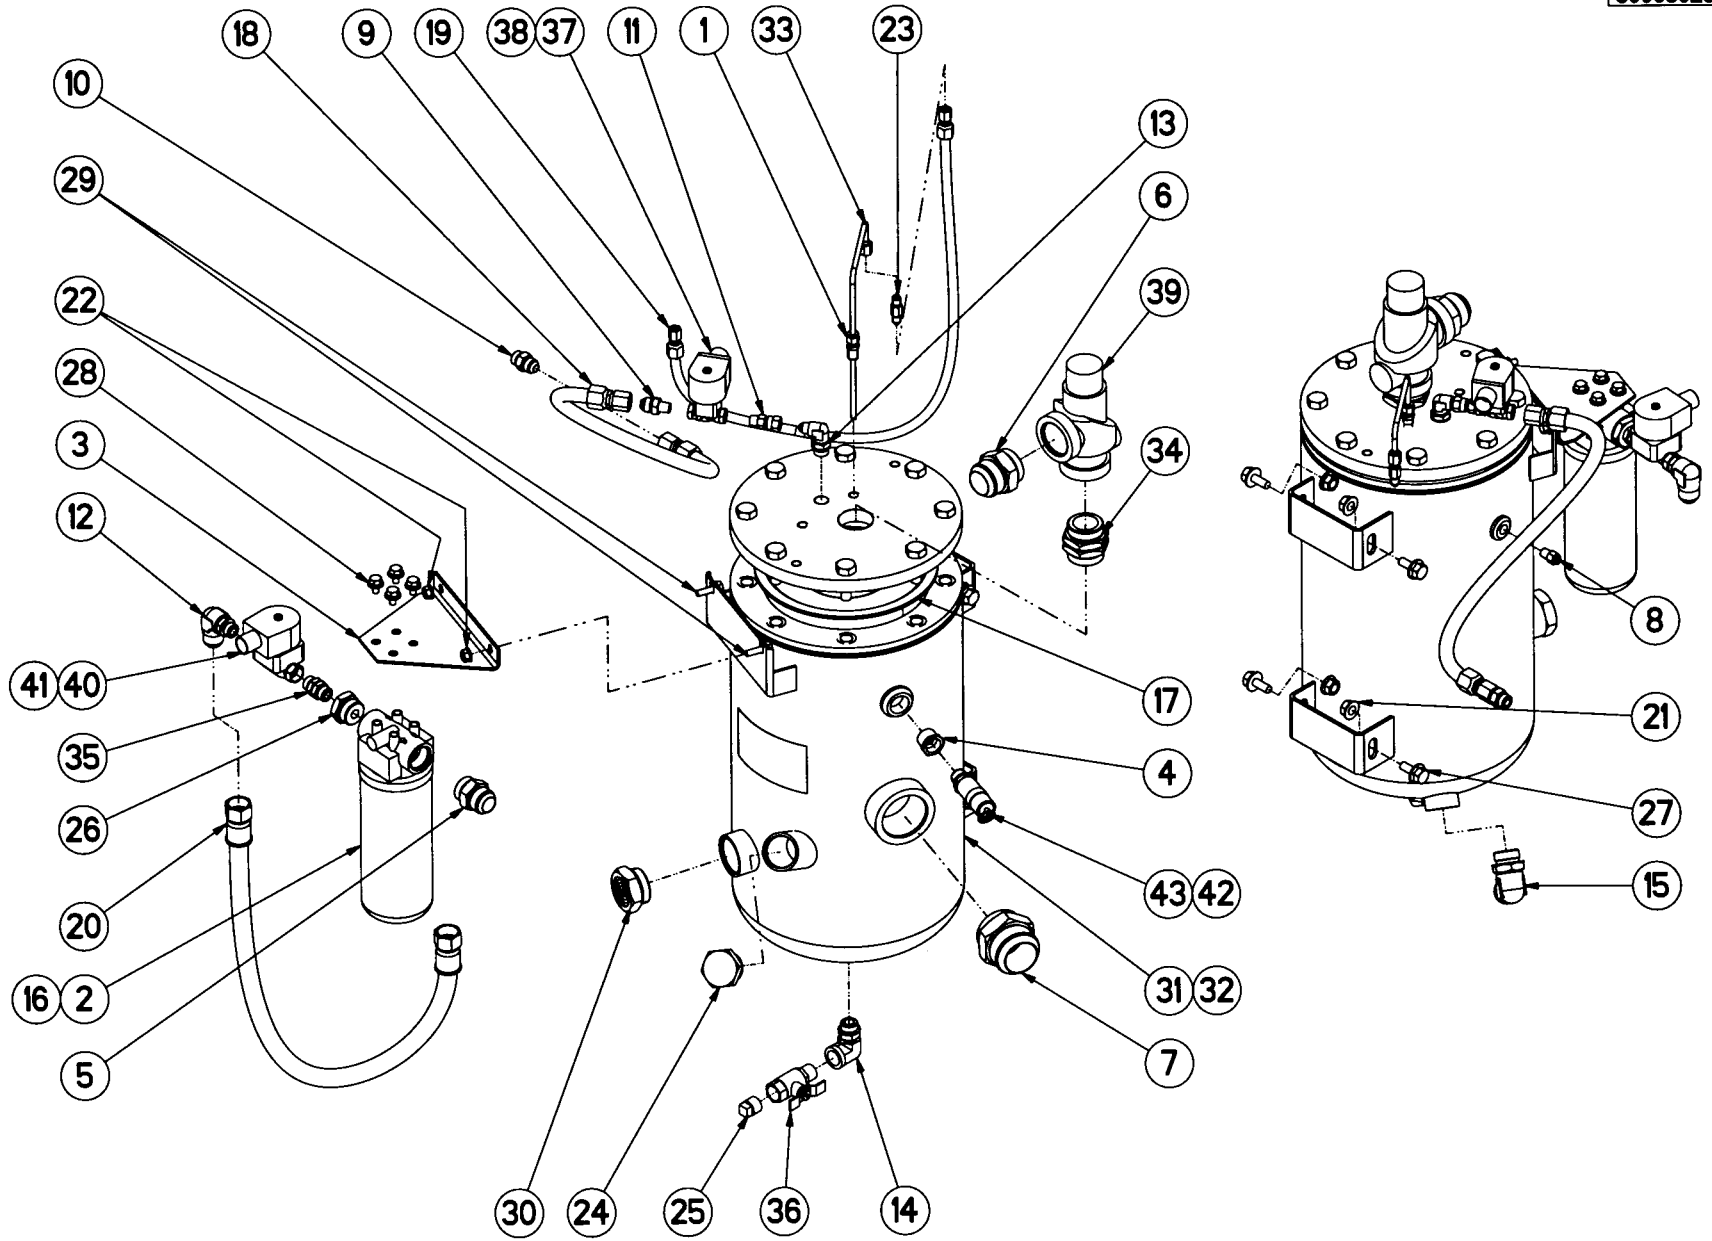

ASSEMBLY, SEPARATOR TANK 50/60 HP 37/45KW

DRAWING NUMBER REV
39908025 04

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39417118	1	ADAPTER
2	39259650	1	ASSEMBLY, OIL FILTER
3	39897418	1	BRACKET, OIL FILTER
4	39157425	1	BUSHING, REDUCER
5	39111752	1	CONNECTOR,
6	39128624	1	CONNECTOR,
7	39128632	1	CONNECTOR,
8	39156435	1	CONNECTOR,
9	95937488	1	CONNECTOR,
10	95938122	1	CONNECTOR,
11	95962601	1	CONNECTOR,
12	39171517	1	ELBOW,
13	39308655	1	ELBOW,
14	39477526	1	ELBOW,
15	95938171	1	ELBOW,
16	39911615	1	ELEMENT,
17	39895610	1	ELEMENT, SEPARATOR TANK
18	39575147	1	HOSE, HYDRAULIC
19	39578406	1	HOSE, HYDRAULIC
20	39572177	1	HOSE, HYDRAULIC STR X STR
21	39116348	4	NUT, FLANGE
22	39128566	2	NUT, FLANGE
23	39301940	1	ORIFICE, SCAVENGE
24	39478953	1	PLUG, 1.625
25	95387361	1	PLUG, SQUARE HEAD
26	95973368	1	REDUCER/EXPANDER,
27	39116330	4	SCREW, FLANGE HEAD
28	39128467	4	SCREW, WHIZ LOCK
29	39128483	2	SCREW, WHIZ LOCK
30	39476916	1	SIGHT GLASS
31	39905310	1	TANK, SEPARATOR ASME TANK
32	39256771	1	TANK, SEPARATOR 12 INCH ASI210 TANK
33	39906110	1	TUBE, SCAVENGE
34	39479944	1	UNION,
35	95973350	1	UNION,
36	39105739	1	VALVE, BALL
37	39136932	1	VALVE, BLOWDOWN NEMA 1
38	39479563	1	VALVE, BLOWDOWN NEMA 4
39	39475637	1	VALVE, MINIMUM PRESSURE
40	39476825	1	VALVE, OIL STOP NEMA 1
41	39479530	1	VALVE, OIL STOP NEMA 4
42	39587951	1	VALVE, PRESSURE 60HP 45KW
43	39587993	1	VALVE, PRESSURE 50HP 37KW

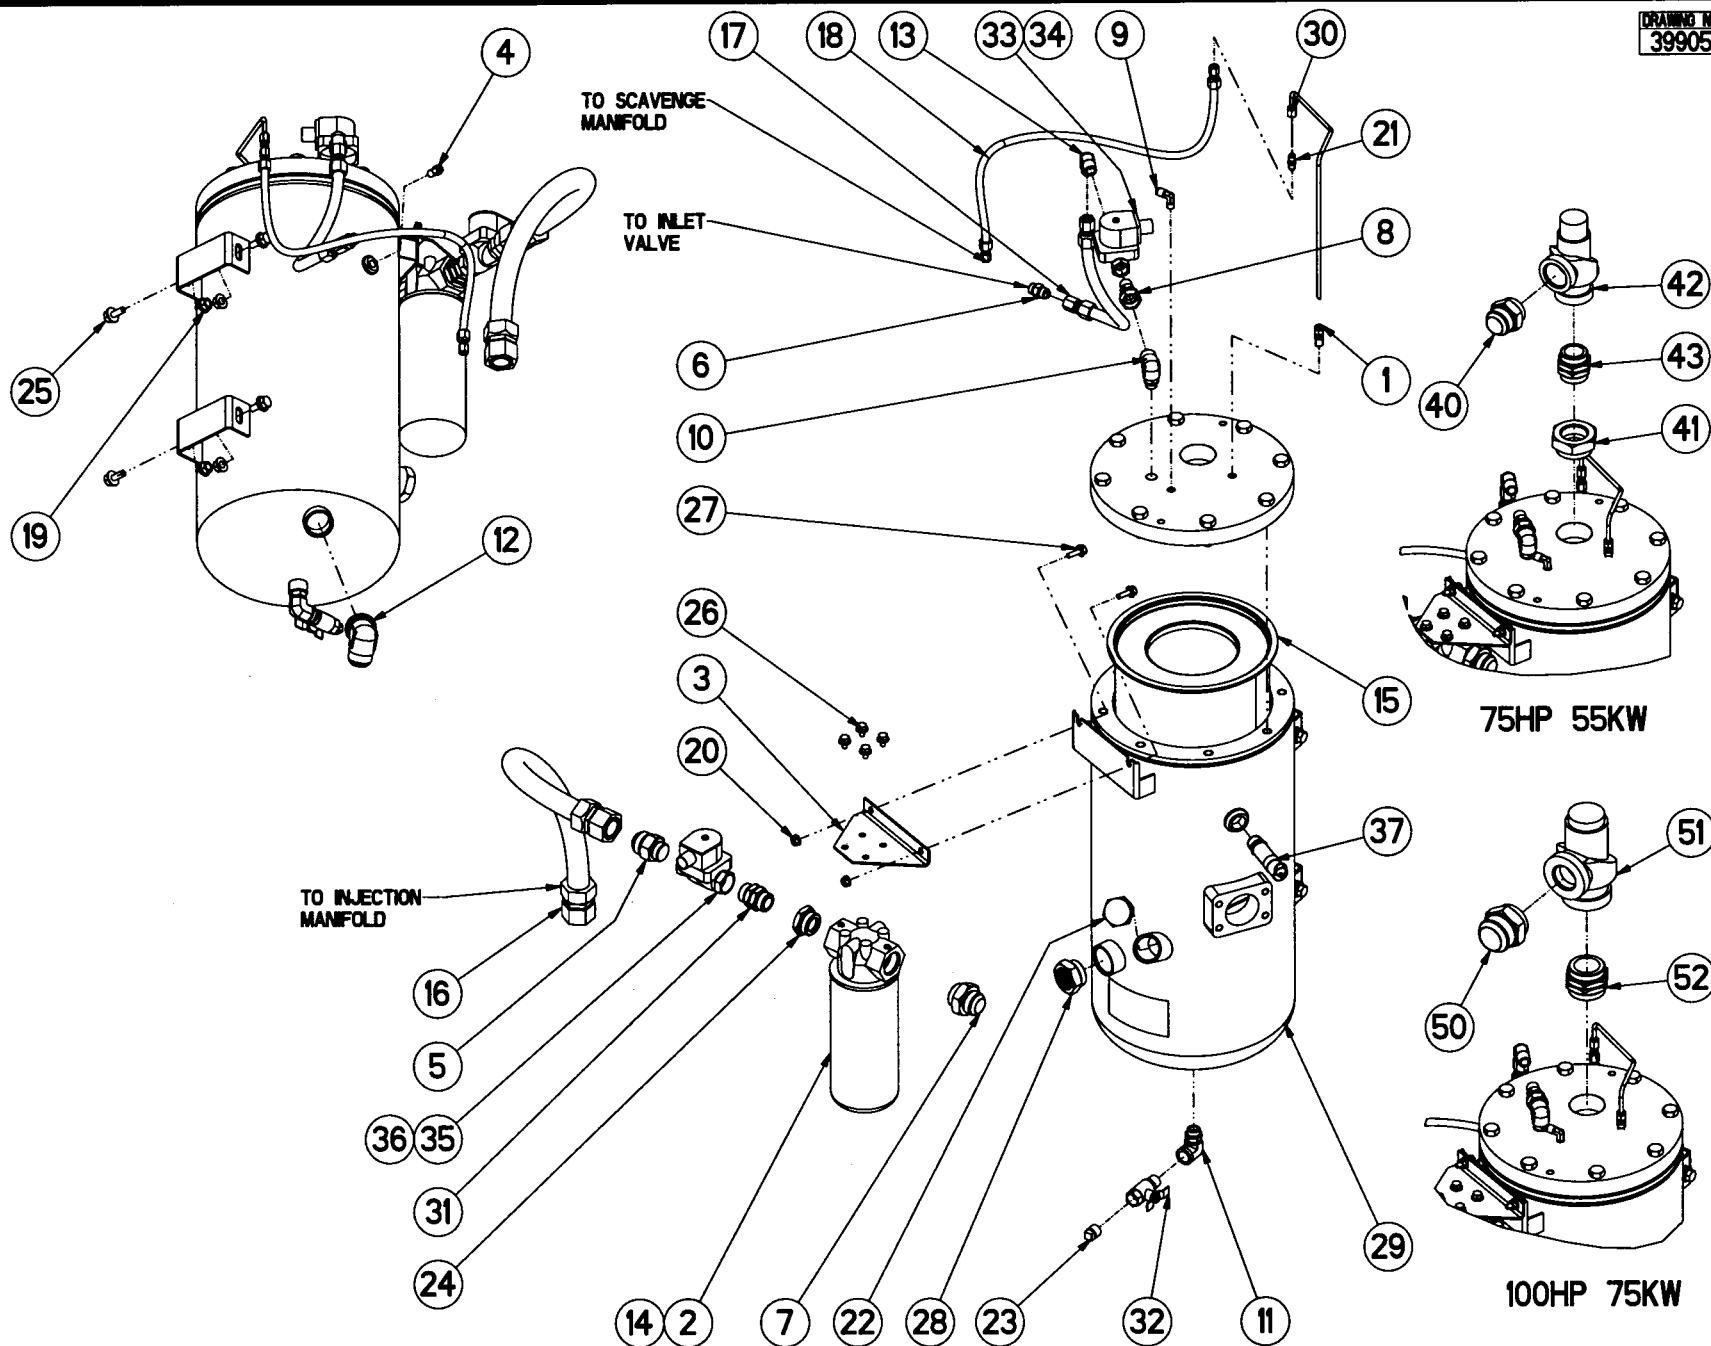

75/100HP 55/75KW SEPARATOR TANK




REF. NO.	PART NUMBER	QTY.	DESCRIPTION	COMMENTS
1	39417118	1	ADAPTER	
2	39259668	1	ASSEMBLY, OIL FILTER 5 INCH SINGLE	
3	39893730	1	BRACKET, OIL FILTER	
4	39156435	1	CONNECTOR, .25 NPT X .25 TUBE	
5	39476999	1	CONNECTOR, 1.25 TUBE X 1.31 SAE	
6	95938122	1	CONNECTOR, .50 TUBE X .75 SAE	
7	95938155	1	CONNECTOR, 1.25 TUBE X 1.63 SAE	
8	95961538	1	CONNECTOR, .50 NPT X .75 FEMALE TUBE	
9	39155478	1	ELBOW, .25 NPT X .25 TUBE	
10	39171517	1	ELBOW, .75 TUBE X .75 SAE	
11	39477526	1	ELBOW, .50 FNPT X .88 SAE	
12	95938189	1	ELBOW, 1.25 TUBE X 1.63 SAE	
13	95942025	1	ELBOW, .50 TUBE X .50 NPT	
14	39911631	1	ELEMENT, OIL FILTER	
15	39894597	1	ELEMENT, SEPARATOR TANK 14 INCH	
16	39572458	1	HOSE, HYDRAULIC 1.25 NOMINAL X 33.00 LONG	
17	39575279	1	HOSE, HYDRAULIC .50 NOMINAL X 16.50 LONG	
18	39578406	1	HOSE, HYDRAULIC .25 NOMINAL X 43.00 LONG	
19	39116348	4	NUT, FLANGE .50 ZINC PLATED	
20	39128566	2	NUT, FLANGE .38 ZINC PLATED	
21	39303276	1	ORIFICE, SCAVENGE .056	
22	39478953	1	PLUG, 1.625 BLEED HOLE	
23	95387361	1	PLUG, SQUARE HEAD .50 NPT -	
24	95960746	1	REDUCER/EXPANDER, 1.63 SAE X 1.31 FEMALE SAE	
25	39116330	4	SCREW, FLANGE HEAD .50 X 1.00 LONG ZINC PLATED	
26	39128467	4	SCREW, WHIZ LOCK .38 X .50 LONG ZINC PLATED	
27	39128483	2	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED	
28	39476916	1	SIGHT GLASS	
29	39905302	1	TANK, SEPARATOR 14 INCH ASME/CRN	
-	39256789	1	TANK, SEPARATOR 14 INCH AUSTRALIA, AS-1210 CERTIFIED	
30	39895578	1	TUBE, SCAVENGE 75-100HP	
31	95938106	1	UNION, 1.31 SAE	
32	39105739	1	VALVE, BALL	
33	39120472	1	VALVE, BLOWDOWN .50 NPT	NEMA 1
34	39479571	1	VALVE, BLOWDOWN DIN .50 NPT	NEMA 4
35	39476569	1	VALVE, OIL STOP 1.31 SAE	NEMA 1
36	39479548	1	VALVE, OIL STOP 1.31 SAE	NEMA 4
37	39588116	1	VALVE, PRESSURE RELIEF	

75HP 55KW SEPARATOR TANK

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
40	39128624	1	CONNECTOR, 1.50 TUBE X 1.88 SAE
41	39324629	1	REDUCER/EXPANDER, 2.50 SAE X 1.88 FEMALE SAE
42	39475637	1	VALVE, MINIMUM PRESSURE 1.50 INCH
43	39479944	1	UNION, 1.88 SAE

100HP 75KW SEPARATOR TANK

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
50	39128632	1	CONNECTOR, 2.00 TUBE X 2.50 SAE
51	39475645	1	VALVE, MINIMUM PRESSURE 2.00 INCH
52	39477039	1	UNION, 2.50 SAE

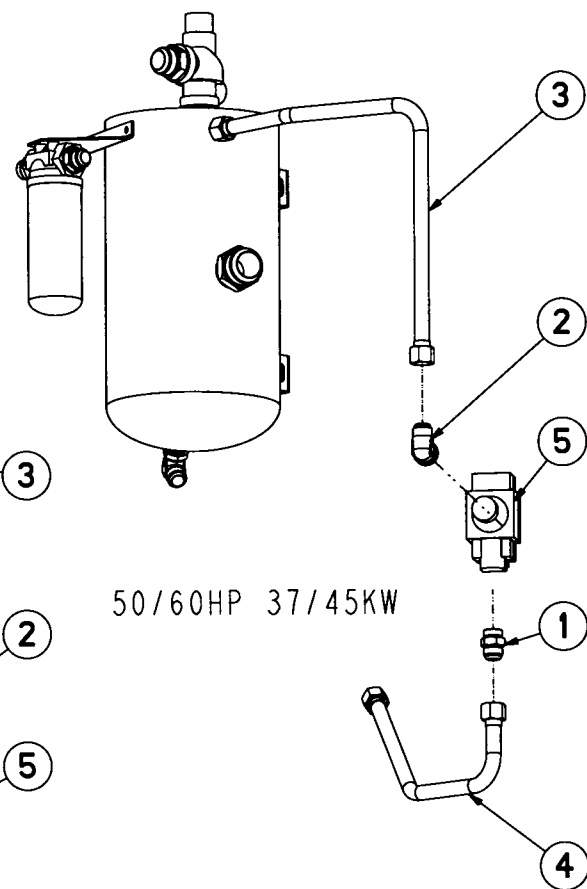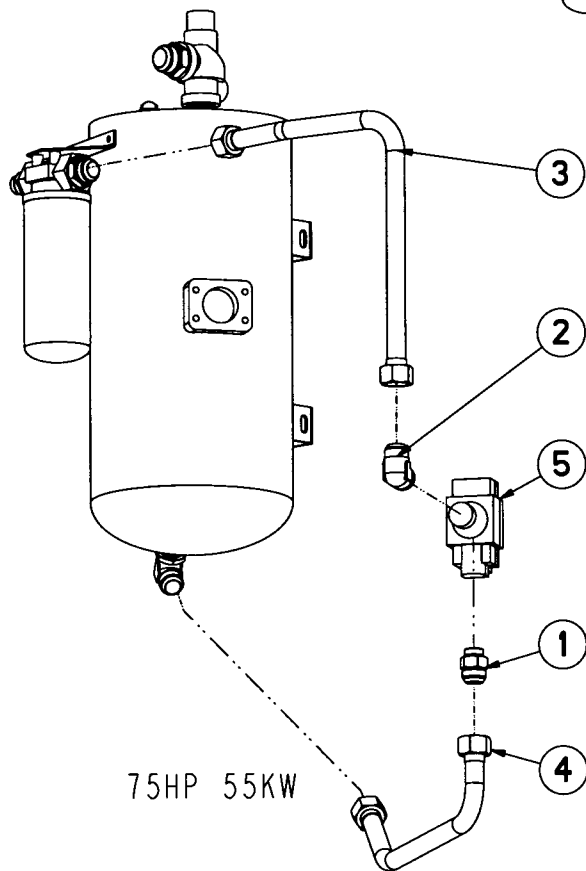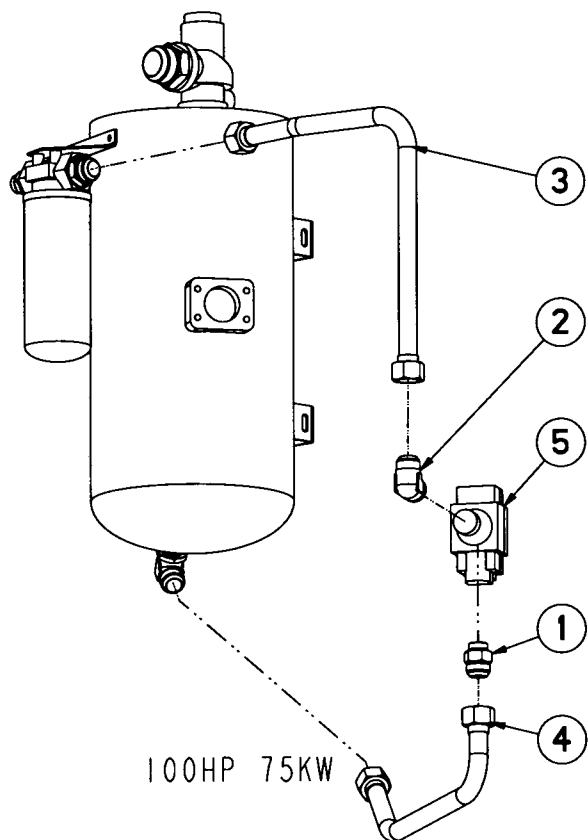

100HP 75KW TEMPERATURE CONTROL VALVE AND PIPING


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39476999	1	CONNECTOR, 1.25 TUBE X 1.31 SAE
2	39476973	1	ELBOW, 1.25 TUBE X 1.31 SAE
3	39893581	1	TUBE, THERMAL VALVE
4	39900345	1	TUBE, THERMAL VALVE TO TANK
5	39902374	1	VALVE, OIL TEMP BYPASS

50/60HP 37/45KW TEMPERATURE CONTROL VALVE AND PIPING

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39111752	1	CONNECTOR, 1.00 TUBE X 1.31 SAE
2	95938171	1	ELBOW, 1.00 TUBE X 1.31 SAE
3	39900170	1	TUBE, THERMAL VALVE
4	39900352	1	TUBE, THERMAL VALVE TO TANK
5	39902374	1	VALVE, OIL TEMP BYPASS

75HP 55KW TEMPERATURE CONTROL VALVE AND PIPING


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39476999	1	CONNECTOR, 1.25 TUBE X 1.31 SAE
2	39476973	1	ELBOW, 1.25 TUBE X 1.31 SAE
3	39893581	1	TUBE, THERMAL VALVE
4	39900345	1	TUBE, THERMAL VALVE TO TANK
5	39902374	1	VALVE, OIL TEMP BYPASS

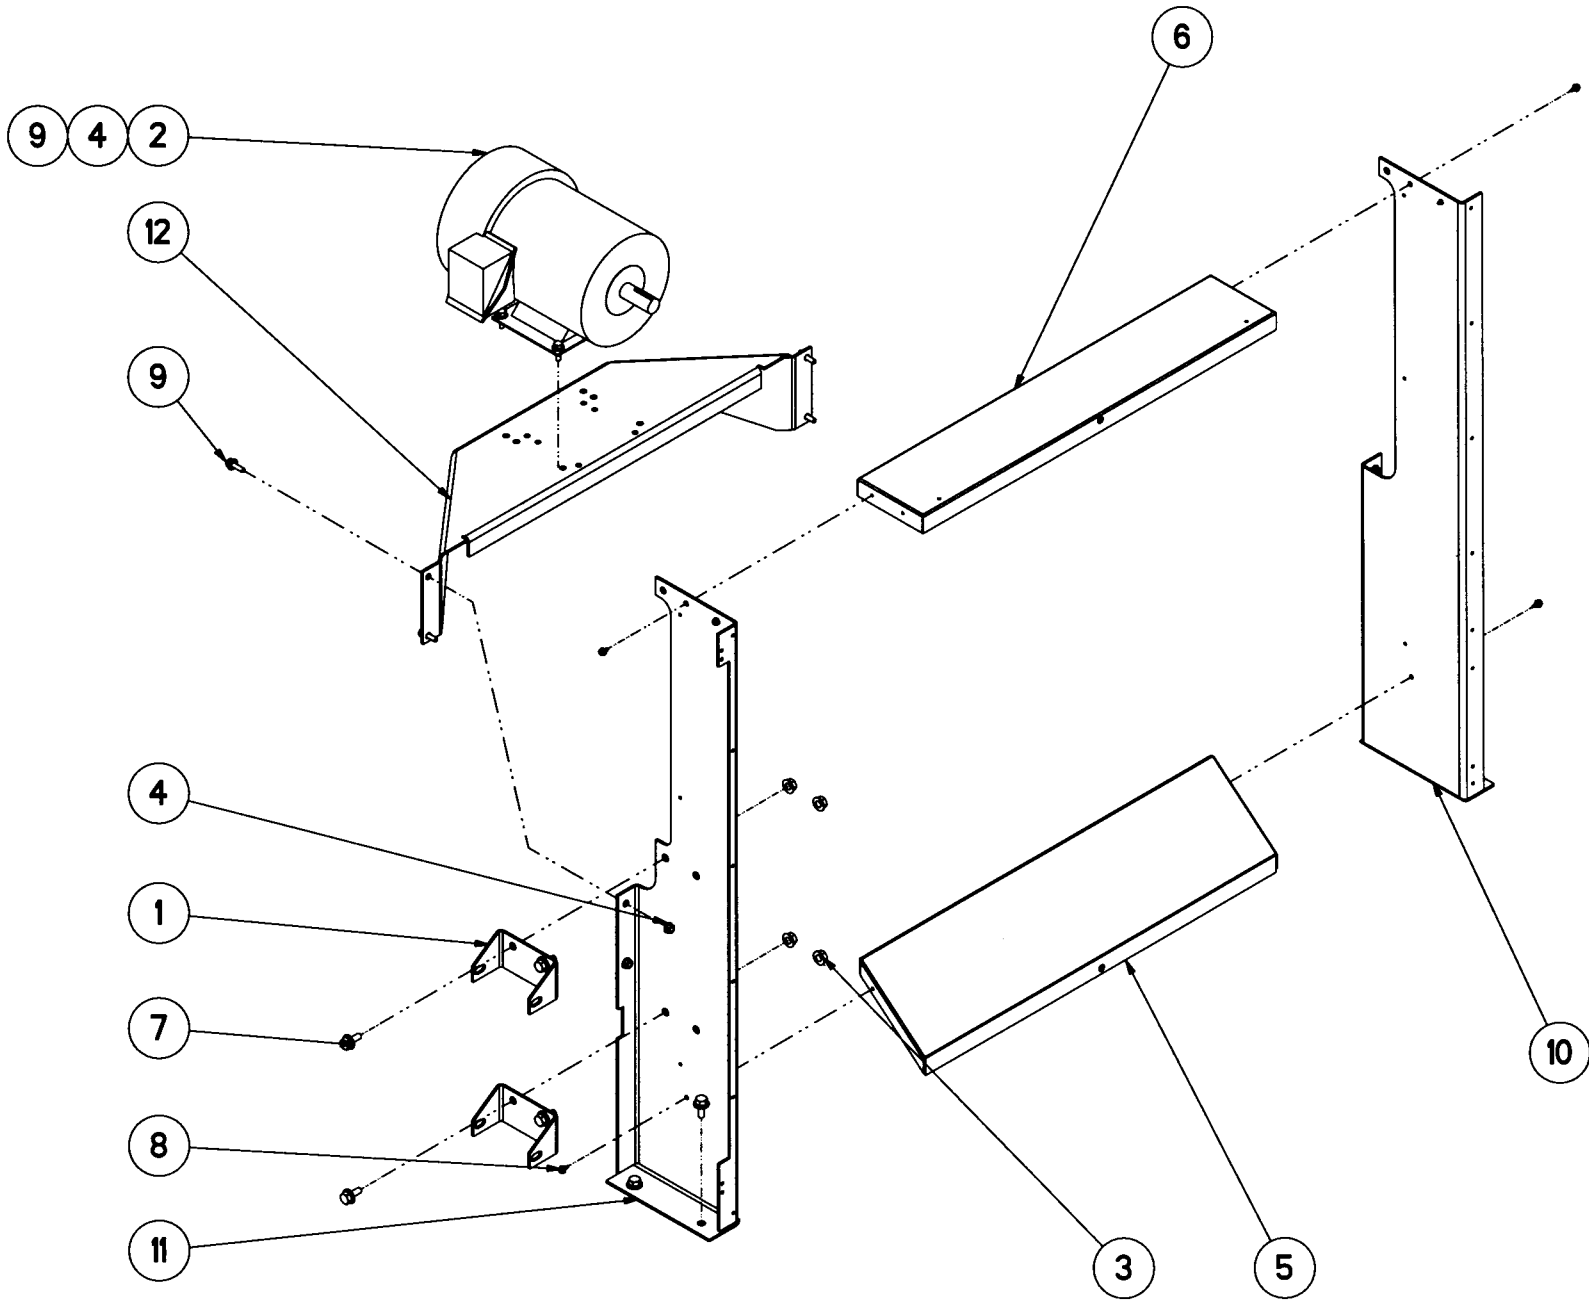

COOLER SUPPORT FRAME

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	COMMENTS
1	39896030	2	BRACKET, SEPARATOR TANK	
2	-	1	MOTOR, FAN MARATHON TEFC - 184T	REFER TO DATA PLATE FOR MOTOR P/N
3	39116348	4	NUT, FLANGE .50 ZINC PLATED	
4	39128566	8	NUT, FLANGE .38 ZINC PLATED	USE QTY OF 4 IF AIR COOLED MOTOR
-	39128558	4	NUT, WHIZ LOCK .31 ZINC PLATED	IF WATER COOLED MOTOR
5	39893292	1	PANEL, BOTTOM	
6	39893284	1	PANEL, TOP	
7	39116330	8	SCREW, FLANGE HEAD .50 X 1.00 LONG ZINC PLATED	
8	39133145	6	SCREW, WASHER HEAD TAPPING .25 X .50 LONG ZINC PLATED	
9	39128483	8	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED	USE QTY OF 4 IF AIR COOLED MOTOR
-	39130828	4	SCREW, WHIZ LOCK .31 X 1.00 LONG ZINC PLATED	IF WATER COOLED MOTOR
10	39905484	1	SUPPORT, COOLER LEFT VERTICAL	
11	39905492	1	SUPPORT, COOLER RIGHT VERTICAL	
12	54415237	1	SUPPORT, FAN MOTOR	

50/60HP, 37/45KW UNIT

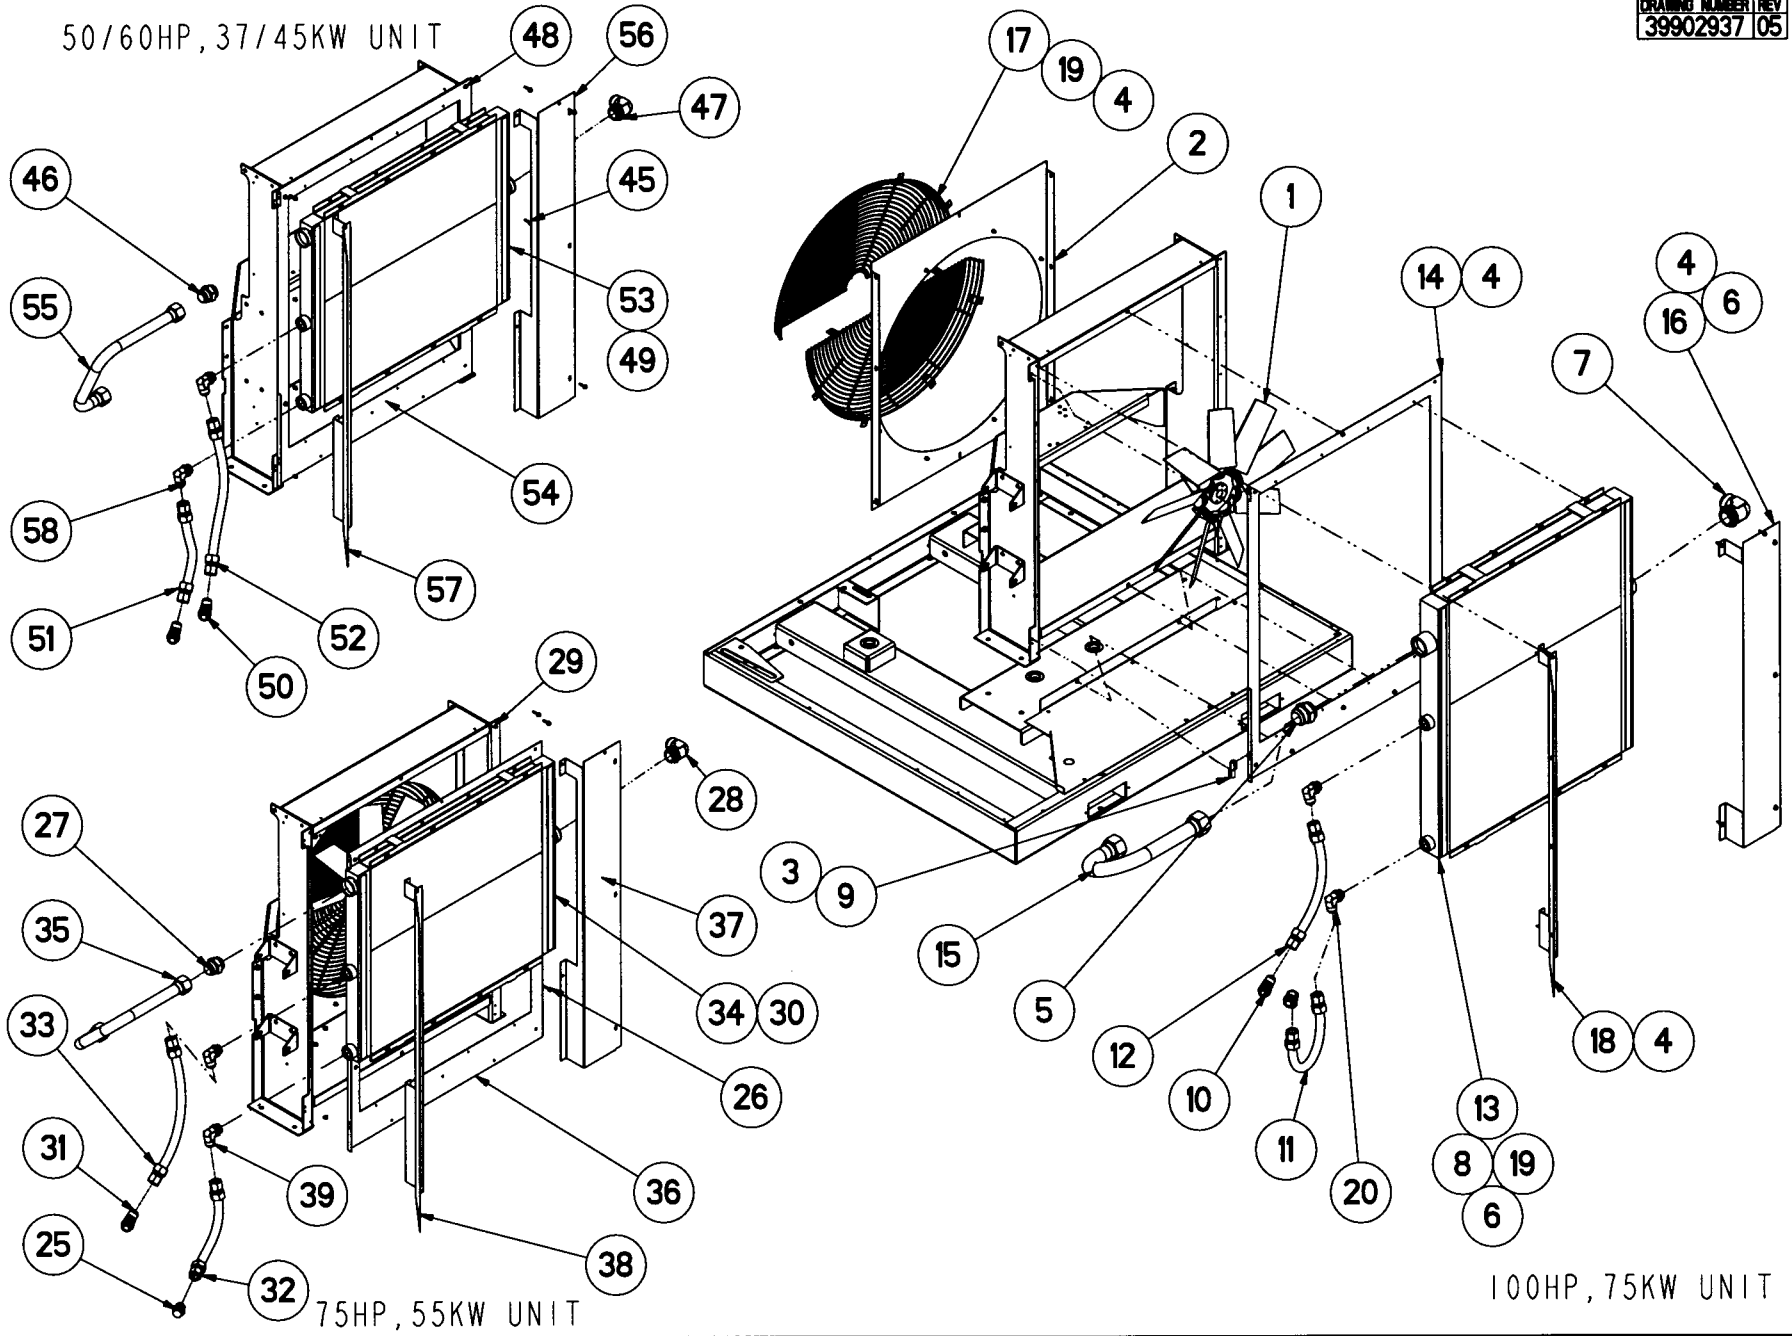

50/60HP, 37/45KW AIR COOLED COOLER

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
45	39128434	7	SCREW, WHIZ LOCK .25 X 1.00 LONG ZINC PLATED
46	39128624	1	CONNECTOR, 1.50 TUBE X 1.88 SAE
47	39128673	1	ELBOW, 1.50 TUBE X 1.88 SAE
48	39133152	2	SCREW, WASHER HEAD TAPPING .25 X 1.00 LONG
49	39249651	-	GASKET, SILICONE
50	39477021	2	ELBOW, 45° 1.00 TUBE X 1.31 SAE
51	39572755	1	HOSE, HYDRAULIC 1.00 NOMINAL X 14.75 LONG
52	39589528	1	HOSE, HYDRAULIC 1.00 NOMINAL X 23.50 LONG
53	39893003	1	COOLER, OIL/AIR
54	39898812	1	PANEL, COOLER
55	39900212	1	TUBE, MINIMUM PRESSURE TO AFTERCOOLER
56	39901707	1	WALL, RIGHT PLENUM
57	39909726	1	WALL, LEFT PLENUM
58	95938171	2	ELBOW, 1.00 TUBE X 1.31 SAE

100HP, 75KW AIR COOLED COOLER


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	-	1	FAN (SEE FAN ORIFICE CHART)
2	-	1	ORIFICE, FAN (SEE FAN ORIFICE CHART)
3	39111471	8	SCREW, FLANGE HEAD #10 X .38 LONG ZINC PLATED
4	39128434	11	SCREW, WHIZ LOCK .25 X 1.00 LONG ZINC PLATED
5	39128632	1	CONNECTOR, 2.00 TUBE X 2.50 SAE
6	39133152	10	SCREW, WASHER HEAD TAPPING .25 X 1.00 LONG
7	39140512	1	ELBOW, 2.00 TUBE X 2.50 SAE
8	39249651	-	GASKET, SILICONE
9	39323563	2	HINGE
10	39477021	1	ELBOW, 45° 1.00 TUBE X 1.31 SAE
11	39572086	1	HOSE, HYDRAULIC 1.00 NOMINAL X 20.50 LONG
12	39572896	1	HOSE, HYDRAULIC 1.00 NOMINAL X 19.00 LONG
13	39892492	1	COOLER, OIL/AIR
14	39893326	1	PANEL, COOLER
15	39893359	1	TUBE, MINIMUM PRESSURE TO AFTERCOOLER
16	39901699	1	WALL, RIGHT PLENUM
17	39905716	2	GUARD, FAN
18	39909734	1	WALL, LEFT PLENUM
19	95929071	8	WASHER, PLAIN WIDE TYPE B .25ZINC
20	95938171	3	ELBOW, 1.00 TUBE X 1.31 SAE

75HP, 55KW AIR COOLED COOLER

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
25	39111752	1	CONNECTOR, 1.00 TUBE X 1.31 SAE
26	39128434	7	SCREW, WHIZ LOCK .25 X 1.00 LONG ZINC PLATED
27	39128624	1	CONNECTOR, 1.50 TUBE X 1.88 SAE
28	39128673	1	ELBOW, 1.50 TUBE X 1.88 SAE
29	39133152	2	SCREW, WASHER HEAD TAPPING .25 X 1.00 LONG
30	39249651	-	GASKET, SILICONE
31	39477021	1	ELBOW, 45° 1.00 TUBE X 1.31 SAE
32	39577176	1	HOSE, HYDRAULIC 1.00 NOMINAL X 16.50 LONG
33	39588884	1	HOSE, HYDRAULIC 1.00 NOMINAL X 22.00 LONG
34	39893003	1	COOLER, OIL/AIR
35	39896147	1	TUBE, MINIMUM PRESSURE TO AFTERCOOLER
36	39898812	1	PANEL, COOLER
37	39901707	1	WALL, RIGHT PLENUM
38	39909726	1	WALL, LEFT PLENUM
39	95938171	2	ELBOW, 1.00 TUBE X 1.31 SAE


FAN/ORIFICE CHART

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
ORIFICE AND FAN FOR 50-60HP			
1	39922000	1	FAN, 28 INCH, 1.125 INCH BUSHING 28-9-4ZL-20.0 SPLIT TAPER
2	39905500	1	ORIFICE, FAN 28 INCH
ORIFICE AND FAN FOR 75HP			
1	39921986	1	FAN, 28 INCH, 1.125 INCH BUSHING 28-9-4ZL-30.0 SPLIT TAPER
2	39905500	1	ORIFICE, FAN 28 INCH
ORIFICE AND FAN FOR 100HP			
1	39921978	1	FAN, 28 INCH, 1.125 INCH BUSHING 28-9-4ZL-32.5 SPLIT TAPER
2	39905500	1	ORIFICE, FAN 28 INCH
ORIFICE AND FAN FOR 37/45KW			
1	54427653	1	FAN, 28 INCH, 28MM BUSHING 28-12-4ZL-32.5 SPLIT TAPER
2	39905500	1	ORIFICE, FAN 28 INCH
ORIFICE AND FAN FOR 55/75KW			
1	54427646	1	FAN, 32 INCH, 28MM BUSHING 32-12-5ZL-32.5 SPLIT TAPER
2	39905526	1	ORIFICE, FAN 32 INCH

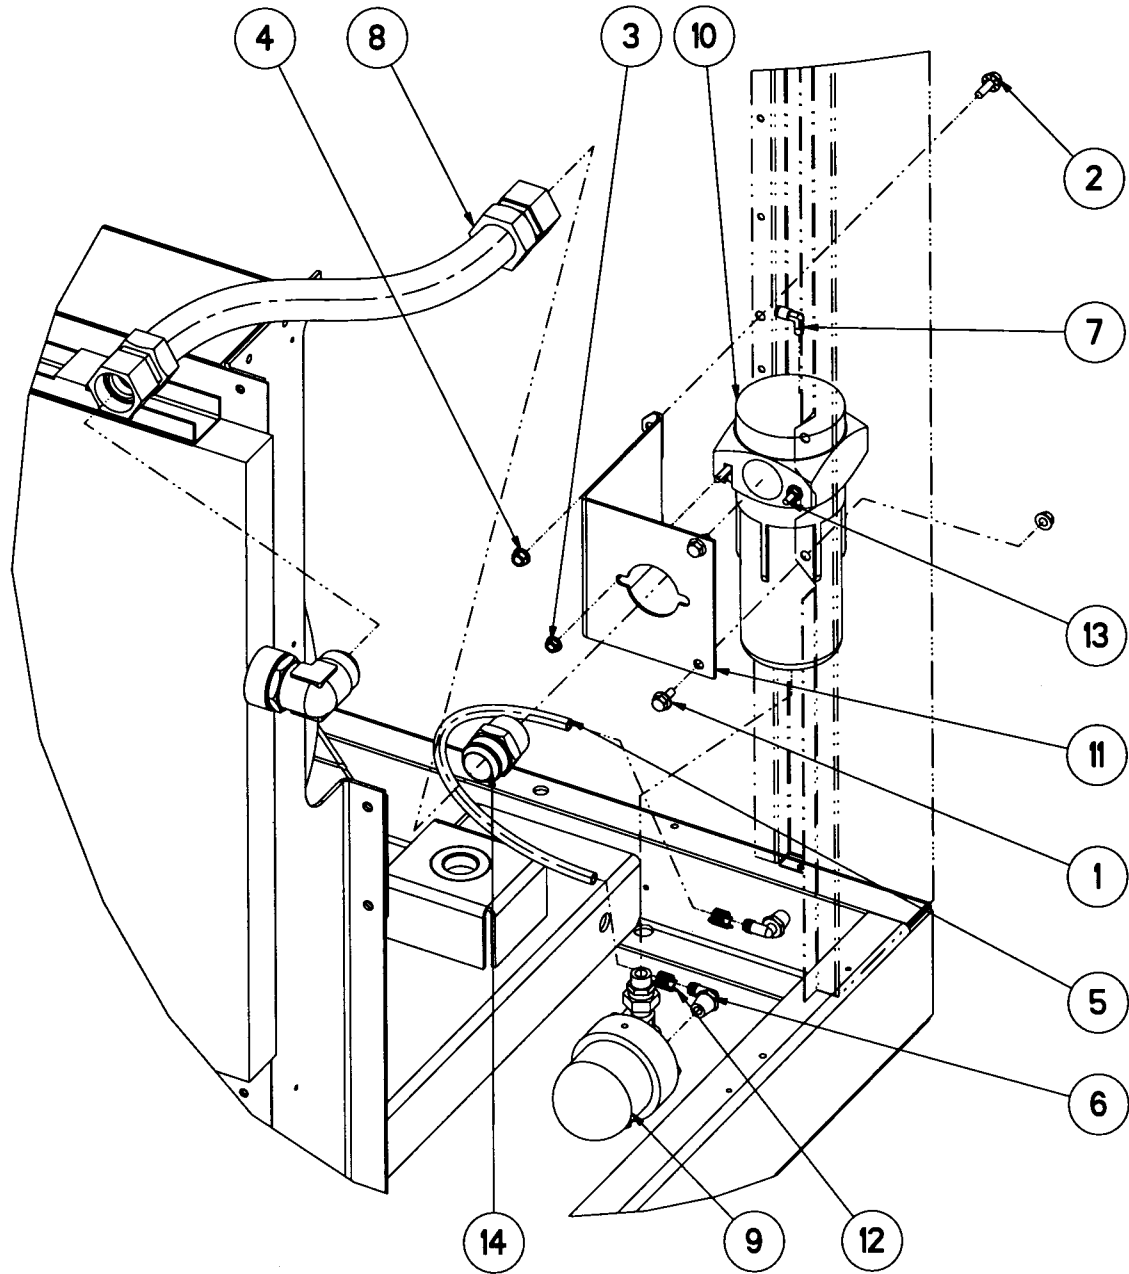


50-75HP 37-55KW MOISTURE SEPARATOR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39128475	2	SCREW, FLANGE HEAD .38 X .75 LONG ZINC PLATED
2	39128483	2	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED
3	39128558	2	NUT, WHIZ LOCK .31 ZINC PLATED
4	39128566	4	NUT, FLANGE .38 ZINC PLATED
5	39137518	1	HOSE, SYNIFLEX 18.00 LONG
6	39137534	2	ELBOW, BARBED .50 NPT X .50 TUBE ID
7	39155577	1	ELBOW, .13 NPT X .25 TUBE
8	39573100	1	HOSE, HYDRAULIC 1.50 NOMINAL X 41.75 LONG
9	39586672	1	TRAP, CONDENSATE
10	39906334	1	SEPARATOR, MOISTURE
11	39916655	1	BRACKET, MOISTURE SEPARATOR 1.50 INCH
12	95220844	2	CLAMP, HOSE
13	95929006	2	SCREW, WHIZ LOCK .31 X 1.00 LONG
14	95937553	1	CONNECTOR, 1.50 TUBE X 1.50 NPT

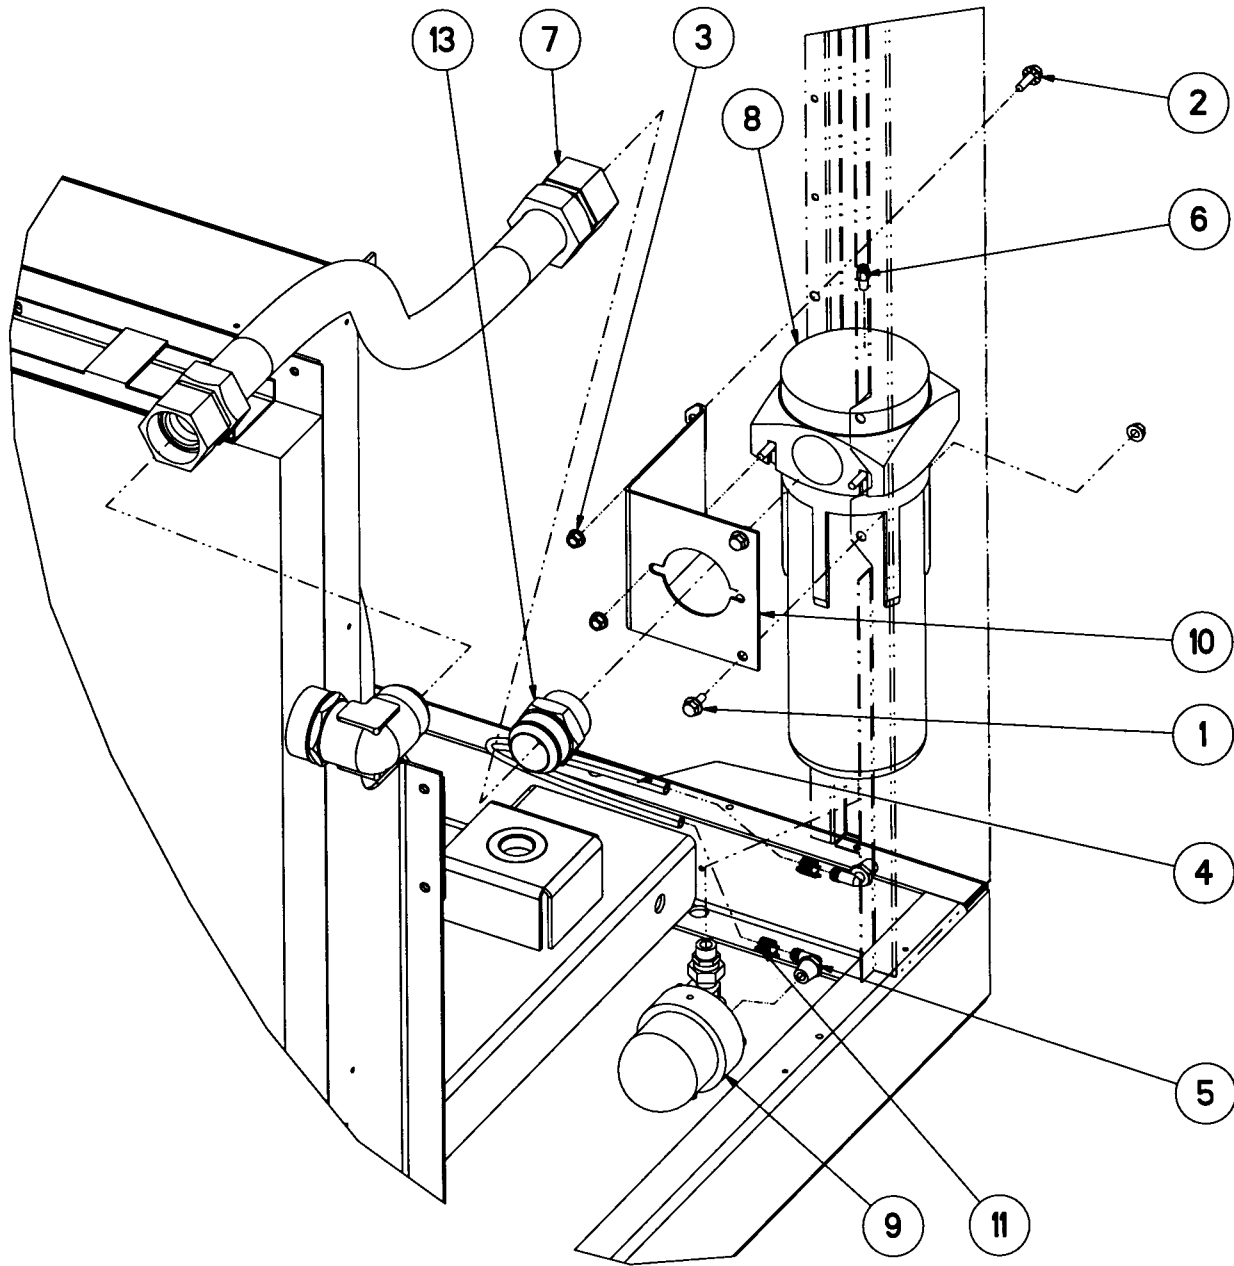


100HP 75KW MOISTURE SEPARATOR

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39128475	2	SCREW, FLANGE HEAD .38 X .75 LONG ZINC PLATED
2	39128483	2	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED
3	39128566	6	NUT, FLANGE .38 ZINC PLATED
4	39137518	1	HOSE, SYNFLEX 18.00 LONG
5	39137534	2	ELBOW, BARBED .50 NPT X .50 TUBE ID
6	39156393	1	CONNECTOR, .13 NPT X .25 TUBE
7	39572219	1	HOSE, HYDRAULIC 2.00 NOMINAL X 38.00 LONG
8	39586292	1	SEPARATOR, MOISTURE
9	39586672	1	TRAP, CONDENSATE
10	39915426	1	BRACKET, MOISTURE SEPARATOR 2.00 INCH
11	95220844	2	CLAMP, HOSE
12	95920674	2	SCREW, HEX HEAD .38 X 1.00 LONG
13	95937561	1	CONNECTOR, 2.00 TUBE X 2.00 NPT

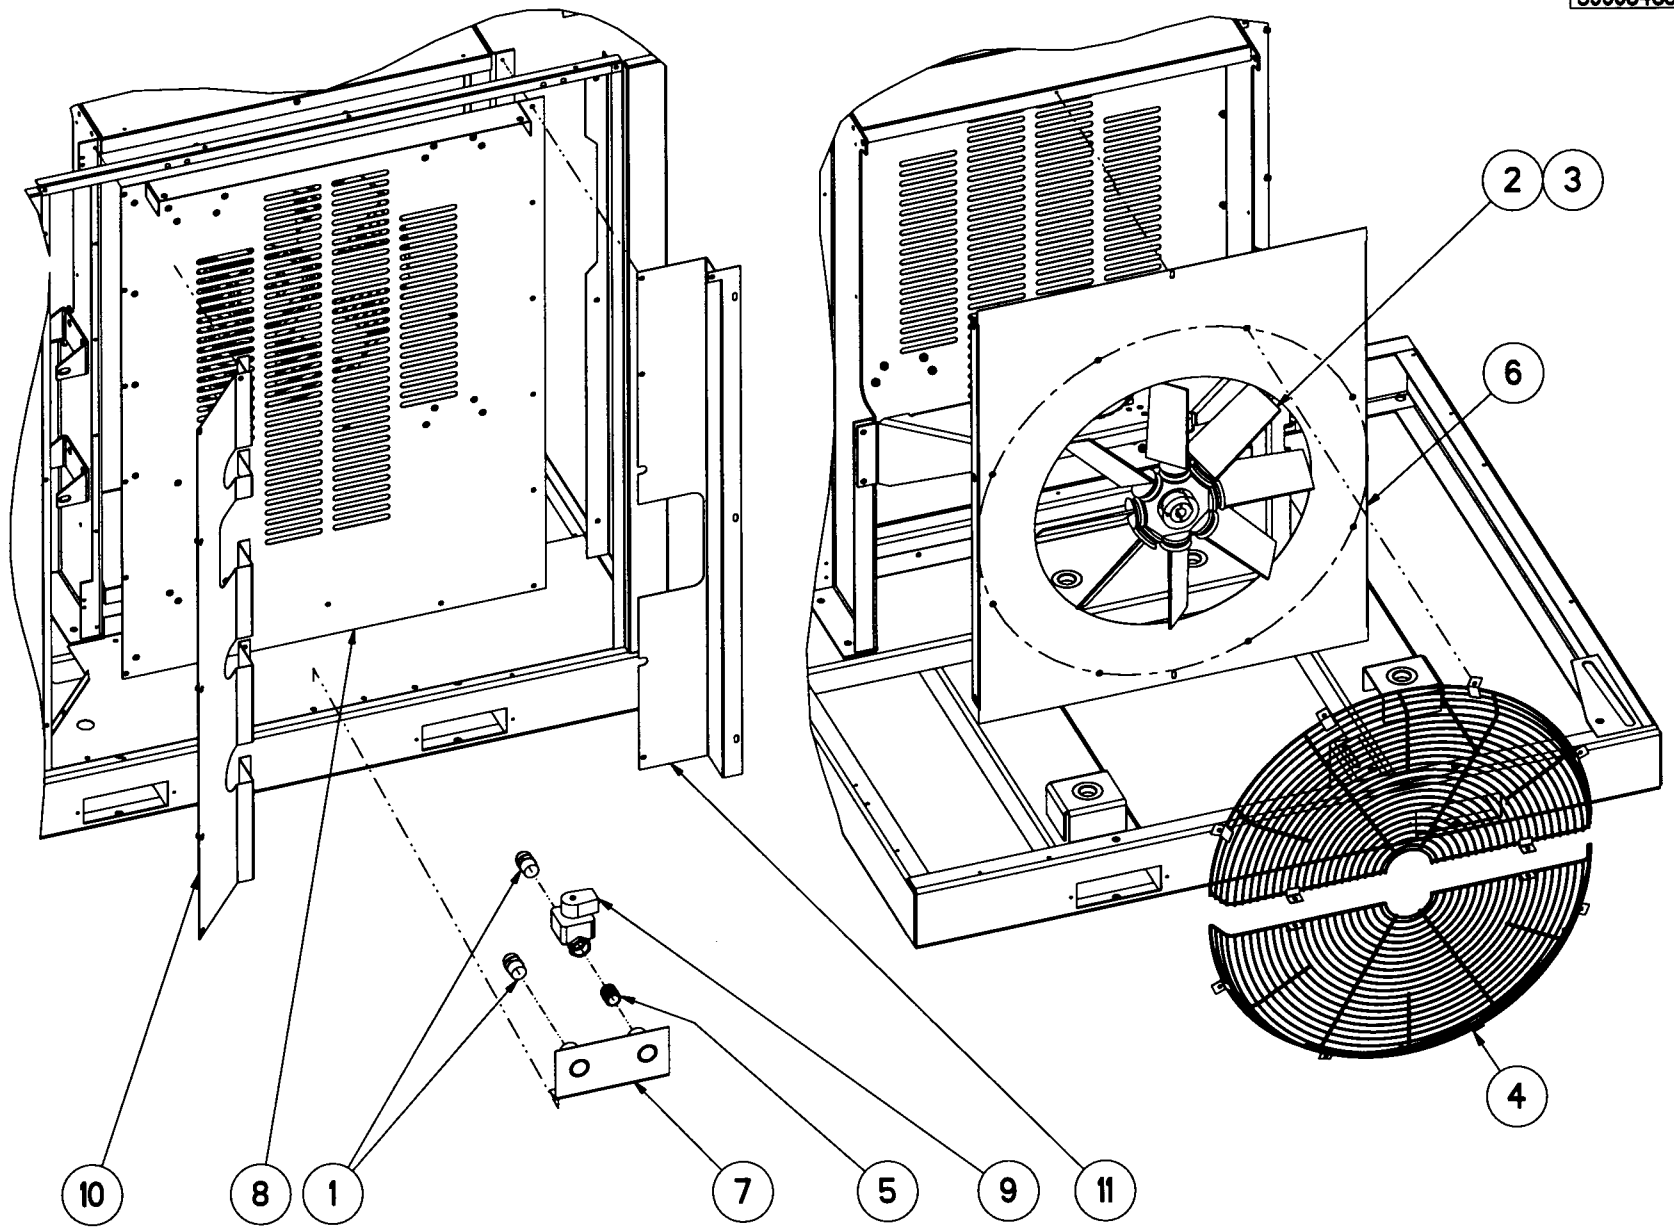


50-100HP, 37-75KW WATER COOLED COMMON			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	95937520	2	CONNECTOR, 1.00 TUBE X 1.00 NPT
2	39197835	1	FAN, 24 INCH, .875 INCH BUSHING 24-8-3L-PP-45A SPLIT TAPER 100HP UNITS
3	54430129	1	FAN, 24 INCH, 24MM BUSHING 24-8-3L-PAG-45-A SPLIT TAPER 37-75 KW UNITS
4	39905716	2	GUARD, FAN
5	95946117	1	NIPPLE, 1.00 NPT X 1.50 LONG ZINC
6	39904776	1	ORIFICE, FAN 24 INCH
7	39901129	1	PANEL, COUPLINGS WATER CONNECTIONS
8	39904842	1	SUPPORT AND FAN GUARD COOLERS W/C
9	39479803	1	VALVE, WATER SHUT OFF DIN 1.00 NPT
10	39909718	1	WALL, LEFT PLENUM WATER COOLED
11	39906102	1	WALL, RIGHT PLENUM WATER COOLED

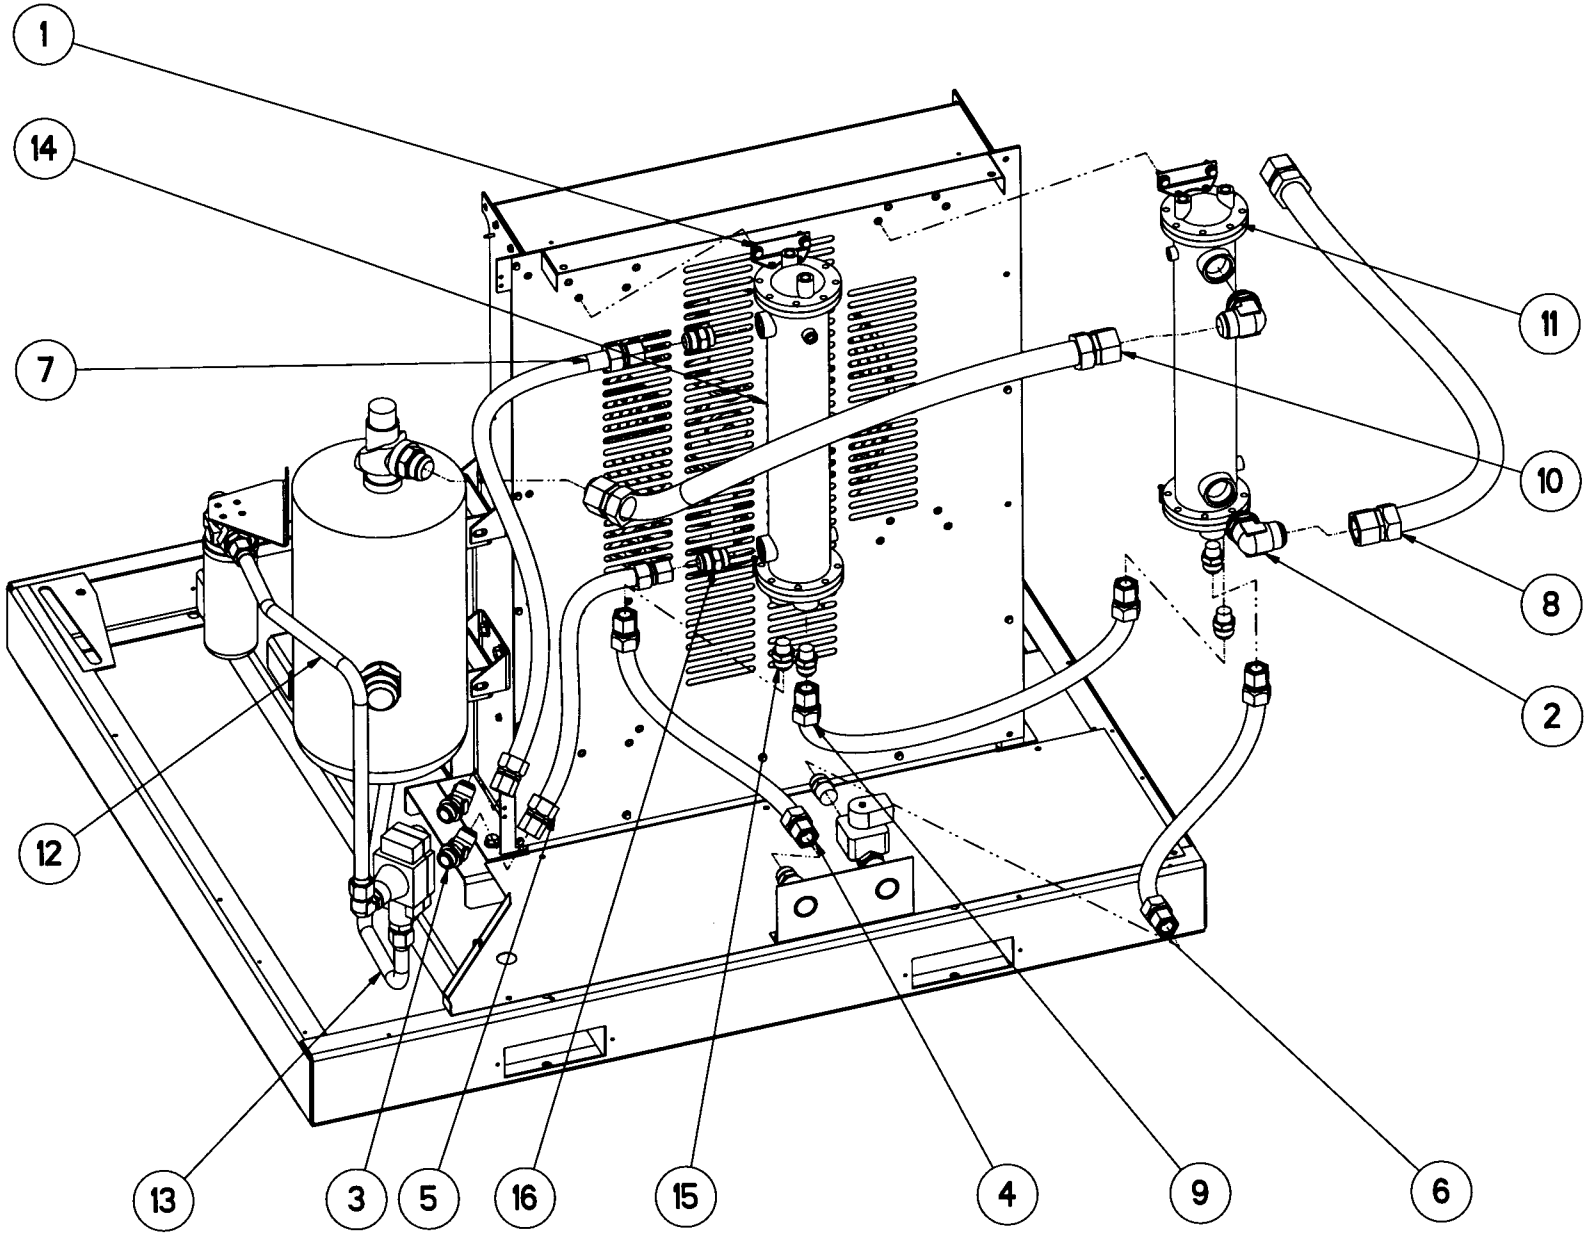

50/60HP 37/45KW WATER COOLED

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39128483	8	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED.
2	39128673	2	ELBOW, 1.50 TUBE X 1.88 SAE .
3	39477021	2	ELBOW, 45° 1.00 TUBE X 1.31 SAE .
4	39572243	1	HOSE, HYDRAULIC 1.00 NOMINAL X 25.00 LONG .
5	39572243	1	HOSE, HYDRAULIC 1.00 NOMINAL X 25.00 LONG .
6	39572243	1	HOSE, HYDRAULIC 1.00 NOMINAL X 25.00 LONG .
7	39572433	1	HOSE, HYDRAULIC 1.00 NOMINAL X 38.00 LONG.
8	39572482	1	HOSE, HYDRAULIC 1.50 NOMINAL X 49.00 LONG.
9	39572508	1	HOSE, HYDRAULIC 1.00 NOMINAL X 45.00 LONG.
10	39573100	1	HOSE, HYDRAULIC 1.50 NOMINAL X 41.75 LONG.
11	39796644	1	AFTERCOOLER .
12	39900170	1	TUBE, THERMAL VALVE .
13	39900352	1	TUBE, THERMAL VALVE TO TANK.
14	39900550	1	COOLER, OIL 90 & 115F WATERCOOLED (4024).
15	95937538	4	CONNECTOR, 1.00 TUBE X .75 NPT .
16	95938148	2	CONNECTOR, 1.00 TUBE X 1.31 SAE .

DRAWING NUMBER REV
39908470 04

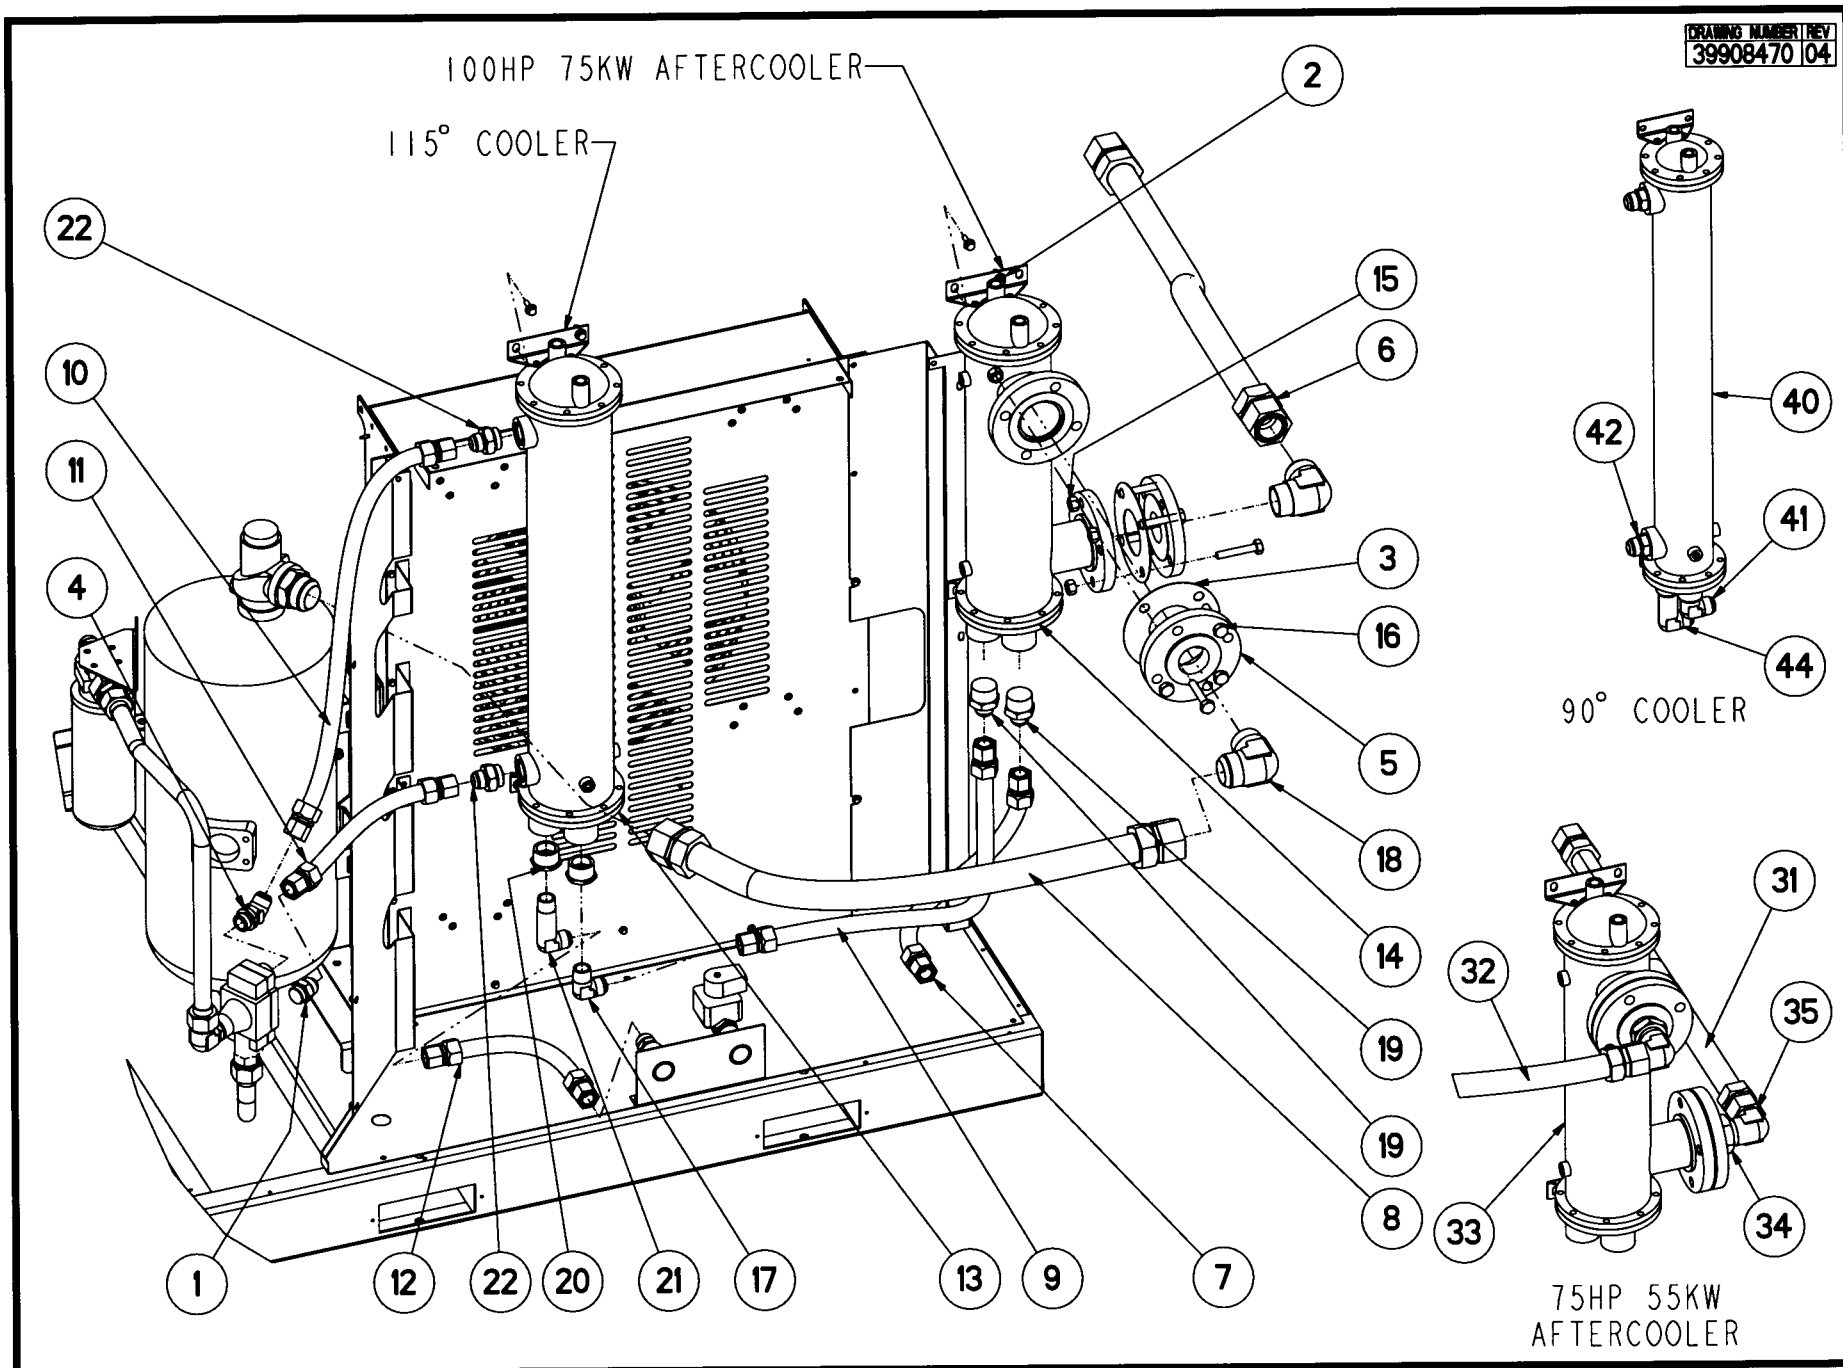

75/100HP 55/75KW WATER COOLED (100HP 75KW AFTERCOOLER SHOWN)


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39111752	1	CONNECTOR, 1.00 TUBE X 1.31 SAE .
2	39128483	8	SCREW, WHIZ LOCK .38 X 1.00 LONG ZINC PLATED.
3	39454525	2	GASKET, FLANGE .
4	39477021	1	ELBOW, 45° 1.00 TUBE X 1.31 SAE .
5	39479845	2	FLANGE, THREADED REDUCING 3.00 X 2.00 150 LB. STEEL.
6	39572219	1	HOSE, HYDRAULIC 2.00 NOMINAL X 38.00 LONG .
7	39572243	1	HOSE, HYDRAULIC 1.00 NOMINAL X 25.00 LONG .
8	39572276	1	HOSE, HYDRAULIC 2.00 NOMINAL X 41.50 LONG .
9	39572375	1	HOSE, HYDRAULIC 1.00 NOMINAL X 33.00 LONG .
10	39572433	1	HOSE, HYDRAULIC 1.00 NOMINAL X 38.00 LONG .
11	39572755	1	HOSE, HYDRAULIC 1.00 NOMINAL X 14.75 LONG.
12	39577176	1	HOSE, HYDRAULIC 1.00 NOMINAL X 16.50 LONG.
13	39900527	1	COOLER, OIL 115 F WATER COOLED (6036).
14	39900543	1	AFTERCOOLER, 90° & 115°F (6024) WATER COOLED.
15	95923355	8	NUT, HEX .63 .
16	95934170	8	SCREW, HEX HEAD .63 X 3.00 LONG ZINC.
17	95937645	1	ELBOW, 1.00 TUBE X 1.00 NPT .
18	95937678	2	ELBOW, 2.00 TUBE X 2.00 NPT .
19	95939336	2	CONNECTOR, 1.00 TUBE X 1.50 NPT .
20	95941043	2	BUSHING, REDUCER 1.50 NPT X 1.00 FNPT .
21	95950002	1	ELBOW, EXTRA LONG 1.00 TUBE X 1.00 NPT .
22	95974291	2	CONNECTOR, 1.00 TUBE X 1.63 SAE .

75HP 55KW AFTERCOOLER

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
31	39572383	1	HOSE, HYDRAULIC 1.50 NOMINAL X 38.0 LONG.
32	39573100	1	HOSE, HYDRAULIC 1.50 NOMINAL X 41.75 LONG .
33	39900543	1	AFTERCOOLER, 90° & 115°F (6024) WATER COOLED.
34	95937462	2	BUSHING, REDUCER 2.00 NPT X 1.50 FNPT .
35	95949749	2	ELBOW, 1.50 TUBE X 1.50 NPT .

90° COOLER

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
40	39900535	1	COOLER, OIL 90°F WATER COOLED (4036)
41	95937652	1	ELBOW, 1.00 TUBE X .75 NPT
42	95938148	2	CONNECTOR, 1.00 TUBE X 1.31 SAE
44	95972980	1	ELBOW, EXTRA LONG 1.00 TUBE X .75 NPT

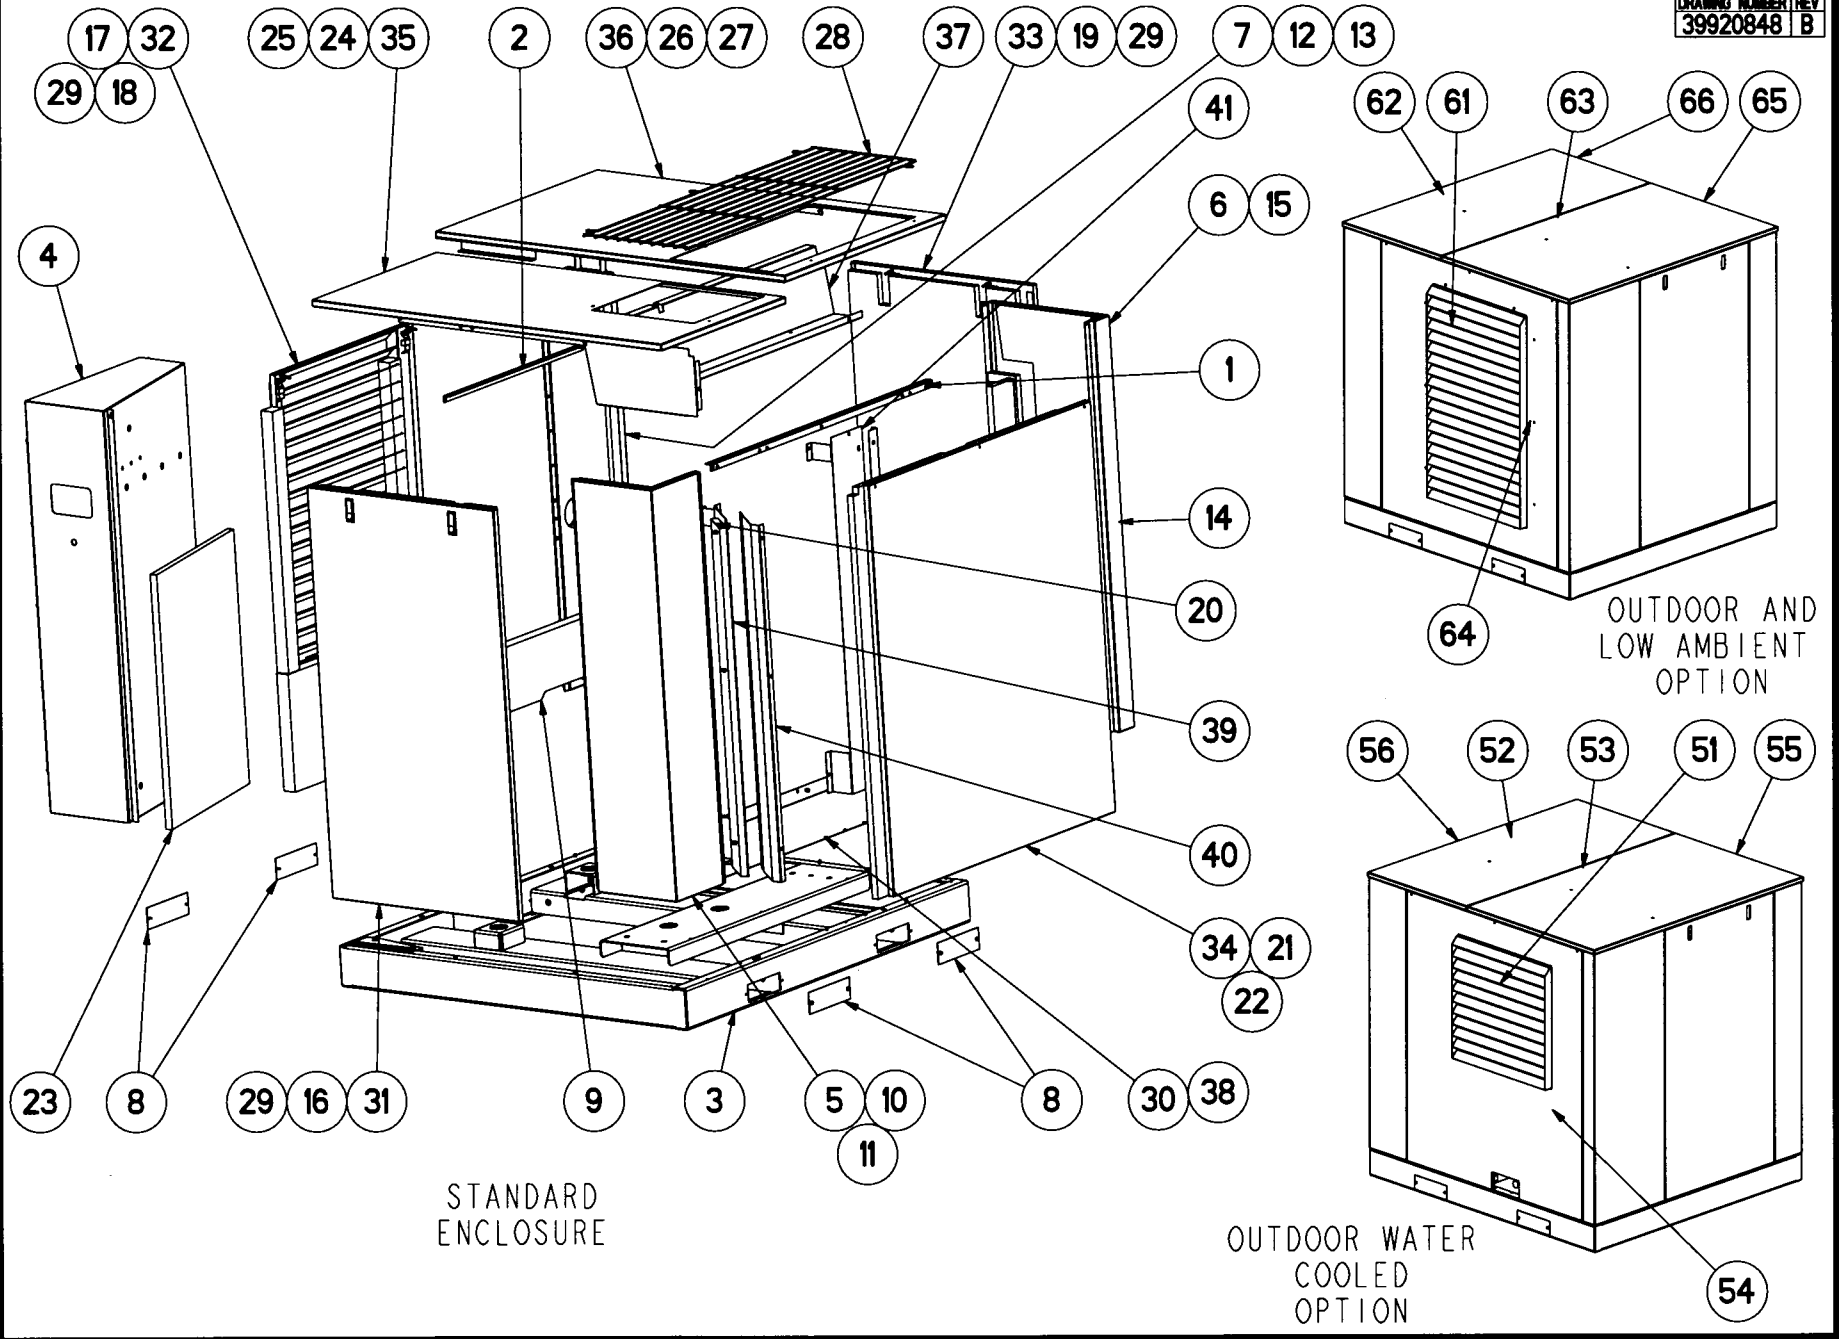

STANDARD ENCLOSURE

REF. NO.	PART NUMBER	QTY.	DESCRIPTION	COMMENTS
1	39907449	1	ANGLE, EXHAUST	
2	39893789	1	ANGLE, INTAKE	
3	54415229	1	BASE, UNIT COUGAR	
4	39894621	1	BOX, STARTER	
5	39892161	1	CORNER, FRONT	
6	39915228	1	CORNER, REAR	
7	39915236	1	CORNER, REAR (MOISTURE SEPARATOR)	
8	39480470	4	COVER, FORKLIFT COVER	
9	39589304	1	FOAM, 2 INCH 75DB INTAKE BATT	
10	39897129	1	FOAM, CORNER FRONT (FRONT SIDE)	OPTIONAL
11	39897145	1	FOAM, CORNER FRONT (RIGHT SIDE)	OPTIONAL
12	39905781	1	FOAM, CORNER MOISTURE SEPARATOR (BACK)	OPTIONAL
13	39897137	1	FOAM, CORNER REAR (LEFT SIDE)	OPTIONAL
14	39902523	1	FOAM, CORNER REAR (RIGHT SIDE)	OPTIONAL
15	39918560	1	FOAM, CORNER REAR (RIGHT, BACK)	
16	39897152	1	FOAM, FRONT PANEL	OPTIONAL
17	39897194	1	FOAM, INTAKE PANEL (BOTTOM)	OPTIONAL
18	39902580	2	FOAM, INTAKE PANEL (TOP)	OPTIONAL
19	39918578	1	FOAM, LEFT AND REAR	
20	39902622	1	FOAM, LEFT PLENUM WALL	OPTIONAL
21	39261730	2	FOAM, RIGHT PANEL	

STANDARD ENCLOSURE


REF. NO.	PART NUMBER	QTY.	DESCRIPTION	COMMENTS
22	39902630	2	FOAM, RIGHT PLENUM WALL	
23	39902770	1	FOAM, STARTER BOX	
24	39261755	1	FOAM, TOP FRONT (LEFT)	
25	39897178	1	FOAM, TOP FRONT (RIGHT)	OPTIONAL
26	39261748	1	FOAM, TOP REAR (RIGHT)	
27	39897186	1	FOAM, TOP REAR (LEFT SIDE)	OPTIONAL
28	39905963	1	GRILL, EXHAUST	
29	39133954	6	LATCH, DOOR	
30	39908017	1	PANEL, BOTTOM PLENUM	
31	39892146	1	PANEL, FRONT	
32	39903364	1	PANEL, INTAKE	
33	39915251	1	PANEL, LEFT AND REAR	
34	39912498	1	PANEL, RIGHT	
35	39915558	1	PANEL, TOP STARTER BOX	
36	39915566	1	PANEL, TOP REAR	
37	39915244	1	PLENUM, TOP	
38	39161070	1	PLUG, KNOCKOUT	
39	39909734	1	WALL, LEFT PLENUM	
40	39909189	1	WALL, PLENUM LEFT	
41	39901699	1	WALL, RIGHT PLENUM	OPTIONAL

OUTDOOR & LOW AMBIENT OPTION

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
61	39912480	1	PANEL, EXHAUST
62	39918107	1	FOAM, TOP FRONT (OUTDOOR)
63	39918115	1	FOAM, TOP REAR (RIGHT SIDE)
64	39918123	1	FOAM, RIGHT PANEL (OUTDOOR)
65	39919790	1	PANEL, TOP REAR (OUTDOOR)
66	39919808	1	PANEL, TOP STARTER BOX (OUTDOOR)

ODM WATER COOLED OPTION

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
51	39912506	1	PANEL, WATER COOLED RIGHT
52	39918107	1	FOAM, TOP FRONT (OUTDOOR)
53	39918115	1	FOAM, TOP REAR (RIGHT SIDE)
54	39918123	1	FOAM, RIGHT PANEL (OUTDOOR)
55	39919790	1	PANEL, TOP REAR (OUTDOOR)
56	39919808	1	PANEL, TOP STARTER BOX (OUTDOOR)

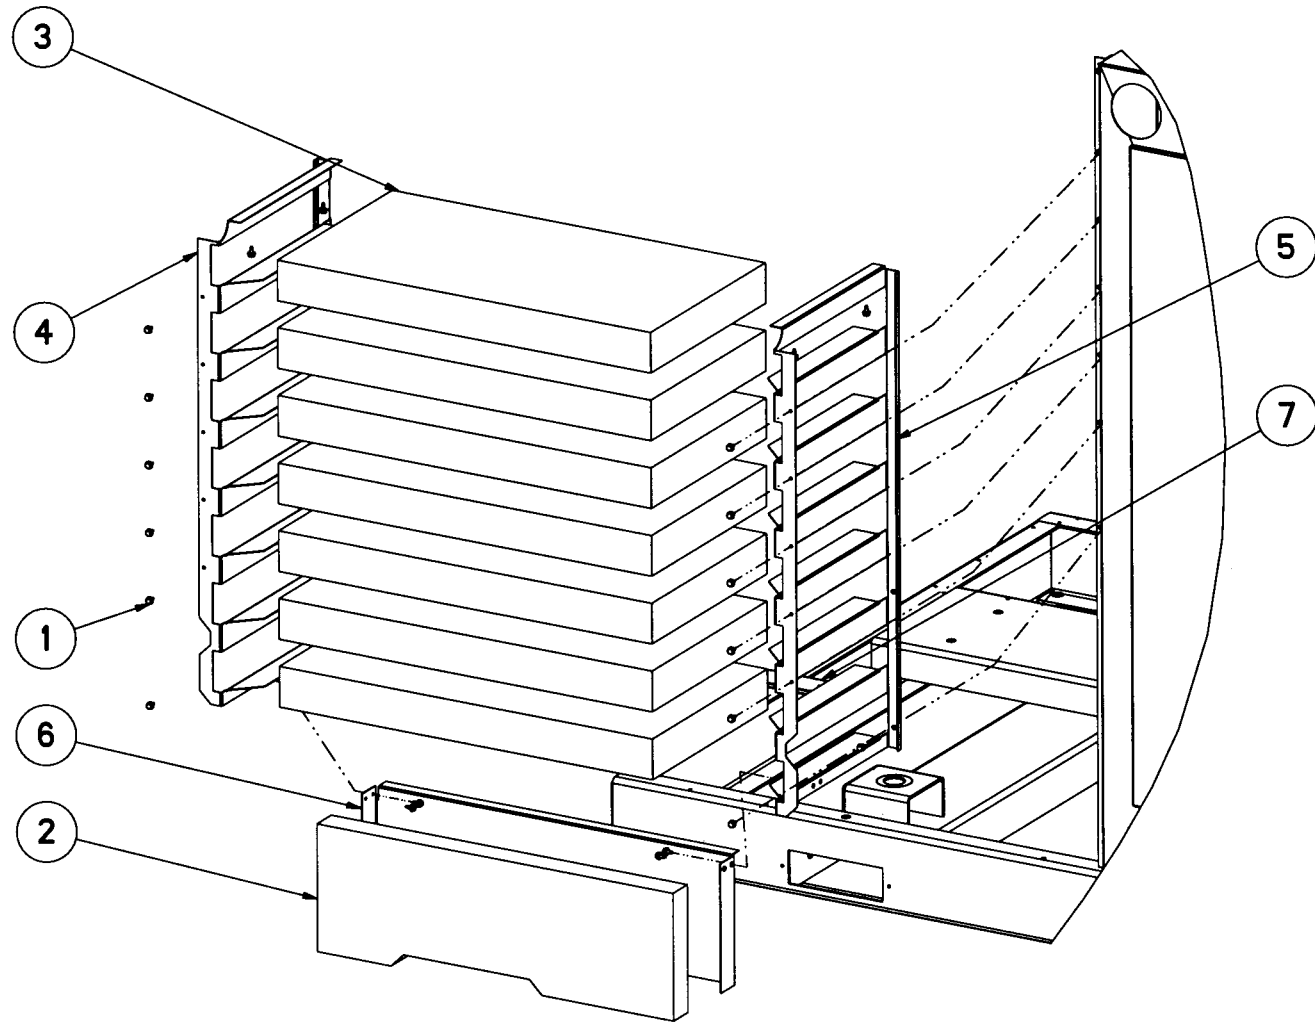

75DBA INTAKE			
REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	39133145	22	SCREW, WASHER HEAD TAPPING .25 X .50 LONG ZINC PLATED
2	39589304	1	FOAM, 2 INCH 75DB INTAKE BATT
3	39898390	7	BATT, INTAKE
4	39906565	1	WALL, BATT LEFT
5	39906573	1	WALL, BATT RIGHT
6	39906581	1	WALL, BOTTOM INTAKE BATT
7	39906599	1	ANGLE, BATT

SSR 50/60 HP (37-45 KW) Recommended Spare Parts

Compressor Part	Part No.	Qty. Per Unit	Location or Use
Maintenance Kit	39669411	0	Maintenance Kit with Ultra Coolant
Ultra Coolant-(5 Gal. Container)	39433735	1	Fill 6 Gallons
Air Filter Element	39708466	1	At Airend Inlet
Coolant Filter Element	39856844	1	On Coolant Filter
Separator Element	39895610	1	In Separator Tank
Thermostatic Control Valve Element	39902382	1	In Thermostatic Control Valve
Thermostatic Control Valve	39902374	1	Between Cooler and Filter
Blowdown Solenoid Valve (NEMA-1)	39136932	1	On Top of Tank (3SV)
Blowdown Solenoid Valve (NEMA-4)	39479563	1	On Top of Tank (3SV)
Load Solenoid Valve 1SV (NEMA-1)	39418926	1	Rear of Starter Box
Load Solenoid Valve 1SV (NEMA-4)	39146741	1	Rear of Starter Box
Line/Sump Solenoid Valve 10SV (NEMA-1)	39583943	1	Rear of Starter Box
Line/Sump Solenoid Valve 10SV (NEMA-4)	39497672	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-1)	39530852	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-4)	39497680	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-1)	39583943	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-4)	39497672	1	Rear of Starter Box
Regulator Valve (XF & EP Models)	39905542	1	Rear of Starter Box
Regulator Valve (HP & XP Models)	39905682	1	Rear of Starter Box
Pressure Transducer	39853809	1	Rear of Starter Box
Temperature Sensor	39586227	1	Airend Discharge
Coolant Solenoid Valve 50 HP (NEMA 1)	39476825	1	In Coolant Filter Line (5SV)
Coolant Solenoid Valve 50 HP (NEMA 4)	39479530	1	In Coolant Filter Line (5SV)
Coolant Solenoid Valve 60 HP (NEMA 1)	39476569	1	In Coolant Filter Line (5SV)
Coolant Solenoid Valve 60 HP (NEMA 4)	39479548	1	In Coolant Filter Line (5SV)
High Air Temperature Switch	39419668	1	In Airend (1ATS)
O-Ring	39404165	1	On HATS
Inlet Valve	42435891	1	Under Air Filter
Gasket, Inlet Valve	39476304	1	Under Inlet Valve
Indicator, Air Filter	39124722	1	On Inlet Valve
Cylinder, Pneumatic	39589056	1	At Inlet Valve
Rod End Bearing	39325154	1	On Cylinder
Minimum Pressure Valve	39475637	1	Tank Discharge Line
Breather Filter	39112362	1	On Gearcase Wall
Discharge Check Valve	39477674	1	Airend Disch. to Sep. Tank
Gasket, Discharge Check Valve	39326228	2	At Discharge Check Valve
Tank Relief Valve (50 HP)	39587993	1	On Separator Tank
Tank Relief Valve (60 HP)	39587951	1	On Separator Tank
Decal Set	39244355	1	
Discharge Hose	54385711	1	At Airend Discharge
Hose, Tank Scavenge	39578406	1	Scavenge Orifice to Airend
Hose, Blowdown to Inlet	39575147	1	Blowdown Valve to Inlet
Hose, Coolant Filter to Airend	39572177	1	Oil Filter to Airend
Hose, Aftercooler to Moisture Separator	39573100	1	Aftercooler to Moisture Separator
Hoses, Aircooled			
Hose, Coolant Cooler Aircooled	39572755	1	Thermal Valve to Coolant Cooler
Hose, Coolant Cooler Aircooled	39589528	1	Coolant Cooler to Thermal Valve

SSR 50/60 HP (37-45 KW) Recommended Spare Parts

Compressor Part	Part No.	Qty. Per Unit	Location or Use
Hoses, Watercooled			
Hose, Water In	39572243	1	Water In to Aftercooler
Hose, Aftercooler to Coolant Cooler W/C	39572375	1	Aftercooler to Coolant Cooler
Hose, Water Out	39572896	1	Coolant Cooler to Water Out
Hose, Coolant Cooler Watercooled	39572896	1	Thermal Valve to Coolant Cooler
Hose, Coolant Cooler Watercooled	39572433	1	Coolant Cooler to Thermal Valve
Hose, Sep. Tank to Aftercooler W/C 75 HP	39573100	1	Tank to Aftercooler
Hose, Sep. Tank to Aftercooler W/C 100 HP	39572276	1	Tank to Aftercooler
Controller	39817655	1	In Control Box
Gasket, Controller	39495874	1	Intellisys to Control Box
Transformer, 230VA 60 Hz	39301981	1	In Control Box
Transformer, 330VA 60 Hz	39491519	1	In Control Box
Transformer, 330VA 50 Hz	39318142	1	In Control Box
Switch, Emergency Stop	39549167	1	In Control Box
Power On Light	39196225	1	In Control Box
Coil, for 60, 72 & 85 Amp Contactors	39251327	*	In 60, 72 or 85 Amp Contactor
Coil, for 75 Amp Contactor	39251343	*	In 75 Amp Contactor
Coil, for 110 Amp Contactor	39251350	*	In 110 Amp Contactor
Contact Kit, for 110 Amp Contactor	39251392	*	In 110 Amp Contactor
Coil, for 180 Amp Contactor	39251368	*	In 180 Amp Contactor
Contact Kit, for 180 Amp Contactor	39251400	*	In 180 Amp Contactor
Coil, for 250 Amp Contactor	39251376	*	In 250 Amp Contactor
Contact Kit, for 250 Amp Contactor	39251418	*	In 250 Amp Contactor
Overload Relay	39251087	*	For 60/72/85 Amp Contactors
Overload Relay	39251095	*	For 110 Amp Contactor
Overload Relay	39251103	*	For 180 Amp Contactor
Overload Relay	39251111	*	For 250 Amp Contactor
Mechanical/Electrical Interlock	39251186	*	For 60/72/85 Amp Contactors
Mechanical/Electrical Interlock	39251194	*	For 110/180/250 Amp Contactors
Auxiliary Switch 4 N.O Contacts	39251129	*	For 60/72/85 Amp Contactors
Auxiliary Switch 1 N.O. / 1 N.C. Contacts	39251137	*	For 60/72/85 Amp Contactors
Auxiliary Switch 2 N.O. / 2 N.C. Contacts	39251145	*	For 60/72/85 Amp Contactors
Auxiliary Switch 2 N.O. Contacts	39251160	*	For 110/180/250 Amp Contactors
Auxiliary Switch 1 N.O. Contacts	39251152	*	For 110/180/250 Amp Contactors
Auxiliary Switch 1 N.O. / 1 N.C. Contacts	39251178	*	For 110/180/250 Amp Contactors
Circuit Breaker/Overload 4 A	39251236	*	Fan Motor Circuit
Circuit Breaker/Overload 6.3 A	39251244	*	Fan Motor Circuit
Circuit Breaker/Overload 10 A	39251251	*	Fan Motor Circuit
Circuit Breaker/Overload 16 A	39251269	*	Fan Motor Circuit
Circuit Breaker/Overload 20 A	39251277	*	Fan Motor Circuit
Auxiliary Sw. for Circuit Bkr/Overload 1 N.O.	39251285	1	Fan Motor Circuit

* Refer to Starter Assembly Section

SSR 75/100 HP (55-75 KW) Recommended Spare Parts

Compressor Part	Part No.	Qty. Per Unit	Location or Use
Maintenance Kit	39669437	0	Maintenance Kit with Ultra Coolant
Ultra Coolant.(5 Gal. Container)	39433735	2	Fill 9 Gallons
Air Filter Element	39708466	2	At Airend Inlet
Coolant Filter Element	39856836	1	On Coolant Filter
Separator Element	39894597	1	In Separator Tank
Thermostatic Control Valve Element	39902382	1	In Thermostatic Control Valve
Thermostatic Control Valve	39902374	1	Between Cooler and Filter
Blowdown Solenoid Valve (NEMA-1)	39120472	1	On Top of Tank (3SV)
Blowdown Solenoid Valve (NEMA-4)	39479571	1	On Top of Tank (3SV)
Load Solenoid Valve 1SV (NEMA-1)	39418926	1	Rear of Starter Box
Load Solenoid Valve 1SV (NEMA-4)	39146741	1	Rear of Starter Box
Line/Sump Solenoid Valve 10SV (NEMA-1)	39583943	1	Rear of Starter Box
Line/Sump Solenoid Valve 10SV (NEMA-4)	39497672	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-1)	39530852	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-4)	39497680	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-1)	39583943	1	Rear of Starter Box
Modulate Solenoid Valve (Optional NEMA-4)	39497672	1	Rear of Starter Box
Regulator Valve (XF & EF Models)	39905542	1	Rear of Starter Box
Regulator Valve (HP & XF Models)	39905682	1	Rear of Starter Box
Pressure Transducer	39853809	1	Rear of Starter Box
Temperature Sensor	39586227	1	Airend Discharge
Coolant Solenoid Valve (NEMA 1)	39476569	1	In Coolant Filter Line (5SV)
Coolant Solenoid Valve (NEMA 4)	39479548	1	In Coolant Filter Line (5SV)
High Air Temperature Switch	39419668	1	In Airend (1ATS)
O-Ring	39404165	1	On HATS
Inlet Valve	42435891	1	Under Air Filter
Gasket, Inlet Valve	39476304	1	Under Inlet Valve
Indicator, Air Filter	39124722	1	On Inlet Valve
Cylinder, Pneumatic	39589056	1	At Inlet Valve
Rod End Bearing	39325154	1	On Cylinder
Minimum Pressure Valve, 75 HP	39475637	1	Tank Discharge Line
Minimum Pressure Valve, 100 HP	39475645	1	Tank Discharge Line
Breather Filter	39112362	1	On Gearcase Wall
Discharge Check Valve	39477674	1	Airend Disch. to Sep. Tank
Gasket, Discharge Check Valve	39326228	2	At Discharge Check Valve
Tank Relief Valve	39588116	1	On Separator Tank
Decal Set	39244355	1	
Discharge Hose	39905450	1	At Airend Discharge
Hose, Tank Scavenge	39578406	1	Scavenge Orifice to Airend
Hose, Blowdown to Inlet	39575279	1	Blowdown Valve to Inlet
Hose, Coolant Filter to Airend	39572458	1	Oil Filter to Airend
Hose, Aftercooler to Moisture Separator 75HP	39573100	1	Aftercooler to Moisture Separator
Hose, Aftercooler to Moisture Separator 100HP	39572219	1	Aftercooler to Moisture Separator
Hoses, Aircooled			
Hose, Coolant Cooler Aircooled	39572896	1	Thermal Valve to Coolant Cooler
Hose, Coolant Cooler Aircooled	39572086	1	Coolant Cooler to Thermal Valve

SSR 75/100 HP (55-75 KW) Recommended Spare Parts

Compressor Part	Part No.	Qty. Per Unit	Location or Use
Hoses, Watercooled			
Hose, Water In	39572243	1	Water In to Aftercooler
Hose, Aftercooler to Coolant Cooler W/C	39572375	1	Aftercooler to Coolant Cooler
Hose, Water Out	39572243	1	Coolant Cooler to Water Out
Hose, Coolant Cooler Watercooled	39572243	1	Thermal Valve to Coolant Cooler
Hose, Coolant Cooler Watercooled	39572508	1	Coolant Cooler to Thermal Valve
Hose, Sep. Tank to Aftercooler Watercooled	39573100	1	Tank to Aftercooler
Controller	39817655	1	In Control Box
Gasket, Controller	39495874	1	Intellisys to Control Box
Transformer, 230VA60 Hz	39301981	1	In Control Box
Transformer, 330VA 60 Hz	39491519	1	In Control Box
Transformer, 230VA 50 Hz	39318134	1	In Control Box
Transformer, 330VA 50 Hz	39318142	1	In Control Box
Switch, Emergency Stop	39549167	1	In Control Box
Power On Light	39196225	1	In Control Box
Coil, for 37 Amp Contactor	39251319	*	In 37 Amp Contactor
Coil, for 43 Amp Contactor	39251327	*	In 43 Amp Contactor
Coil, for 60, 72 & 85 Amp Contactors	39251327	*	In 60, 72 or 85 Amp Contactor
Coil, for 75 Amp Contactor	39251343	*	In 75 Amp Contactor
Coil, for 110 Amp Contactor	39251350	*	In 110 Amp Contactor
Contact Kit, for 110 Amp Contactor	39251392	*	In 110 Amp Contactor
Coil, for 180 Amp Contactor	39251368	*	In 180 Amp Contactor
Contact Kit, for 180 Amp Contactor	39251400	*	In 180 Amp Contactor
Coil, for 250 Amp Contactor	39251376	*	In 250 Amp Contactor
Contact Kit, for 250 Amp Contactor	39251418	*	In 250 Amp Contactor
Overload Relay	39251079	*	For 43 Amp Contactors
Overload Relay	39251087	*	For 60/72/85 Amp Contactors
Overload Relay	39251095	*	For 110 Amp Contactor
Overload Relay	39251103	*	For 180 Amp Contactor
Overload Relay	39251111	*	For 250 Amp Contactor
Mechanical/Electrical Interlock	39251186	*	For 37/43/72/60/85 Amp Contactors
Mechanical/Electrical Interlock	39251194	*	For 110/180/250 Amp Contactors
Auxiliary Switch 4 N.O. Contacts	39251129	*	For 37/43/72/60/85 Amp Contactors
Auxiliary Switch 1 N.O. / 1 N.C. Contacts	39251137	*	For 37/43/72/60/85 Amp Contactors
Auxiliary Switch 2 N.O. / 2 N.C. Contacts	39251145	*	For 37/43/72/60/85 Amp Contactors
Auxiliary Switch 2 N.O. Contacts	39251160	*	For 110/180/250 Amp Contactors
Auxiliary Switch 1 N.O. Contacts	39251152	*	For 110/180/250 Amp Contactors
Auxiliary Switch 1 NO. / 1 N.C. Contacts	39251178	*	For 110/180/250 Amp Contactors
Circuit Breaker/Overload 4 A	39251236	*	Fan Motor Circuit
Circuit Breaker/Overload 6.3 A	39251244	*	Fan Motor Circuit
Circuit Breaker/Overload 10 A	39251251	*	Fan Motor Circuit
Circuit Breaker/Overload 16 A	39251269	*	Fan Motor Circuit
Circuit Breaker/Overload 20 A	39251277	*	Fan Motor Circuit
Auxiliary Sw. for Circuit Bkr/Overload 1 N.O.	39251285	1	Fan Motor Circuit

* Refer to Starter Assembly Section